 

# OPERATION MANUAL OF MINI HIGH SPEED CAR

Please read this Manual carefully before use and keep it properly for future use.






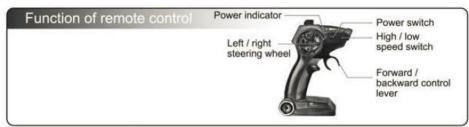

#### Operation method

 
1. Turn the power switch of the remote control vehicle to the "ON" position. Put the remote control car on the plane, and then turn on the remote control switch. When the remote control indicator stops flashing, you may operate the control lever. (Note: when the remote control indicator is flashing, the control lever can not be operated.)




### Basic operation diagram for product use



   Pull the remote control lever backward to move the remote control car forward, and pull forward to move the remote control car backward. When the control lever is pulled backward half way, the remote control car will move forward slowly; when the control lever is pulled backward completely, the remote control car will move forward rapidly.





## Maintenance and repair

- 1. If you do not use it for a long time, please take out the battery.
- 2. Wipe the car gently with a wet cloth.
- 3. Do not put the product in high temperature, high humidity and direct sunlight.
- 4. Do not put the product in the water, or the electronic components will be damaged.

### Precautions

- Please pay attention to the polarity when installing or replacing the battery;
  Non-rechargeable battery can not be charged;
  Charging a rechargeable battery should be supervised by adult;
- Do not use old or new batteries or different types of batteries;
  Please pay attention to the signal interference nearby during operation, otherwise the remote control distance will be affected;
- When the remote control car slows down, it means that the car is out of power. Please charge the remote control car according to the above method. If the remote control is out of power, the indicator will turn dark or does not light up. Please replace the battery with a new one. If you do not use it for a long time, please take out the battery in the remote control, turn the power switch of the remote control car to "OFF" position, and take out the battery of the remote control car.

### Warm tips

When the car is moving, please do not touch the wheels of the remote control car by hand, so as to avoid damage to the car.



Do not use the product on the road where there is traffic, so as to avoid any accident.



Do not use the product in sump, dirt or sand.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment