

Six wheel stunt car instruction manual

Thank you for purchasing our remote control toys. To ensure proper use, please read the following instructions carefully and check the product before use. Have enough understanding.

Electronic control products:



It is suitable for children over 6 years old to use, and all electronic products should pay attention and prevent clicks when using.

Maintenance:

This product contains electronic components, do not enter the water or use in a humid environment, please wipe the surface dirt with a rag.

1. Set the switch on the seat of the car and the remote control "OFF". (If there is a switch)
2. Open the battery cover using a crosshead screwdriver.
3. Install the rechargeable battery string according to the following figure, and install the battery according to the + and - poles in the battery box.
4. Close the battery box and secure it with the crosshead screws.


Remote control function description

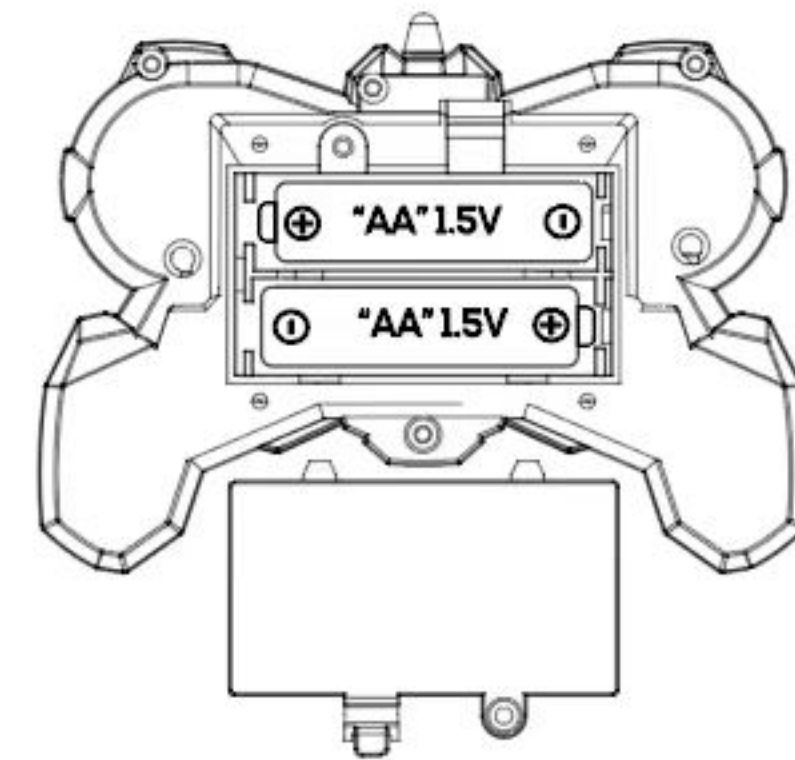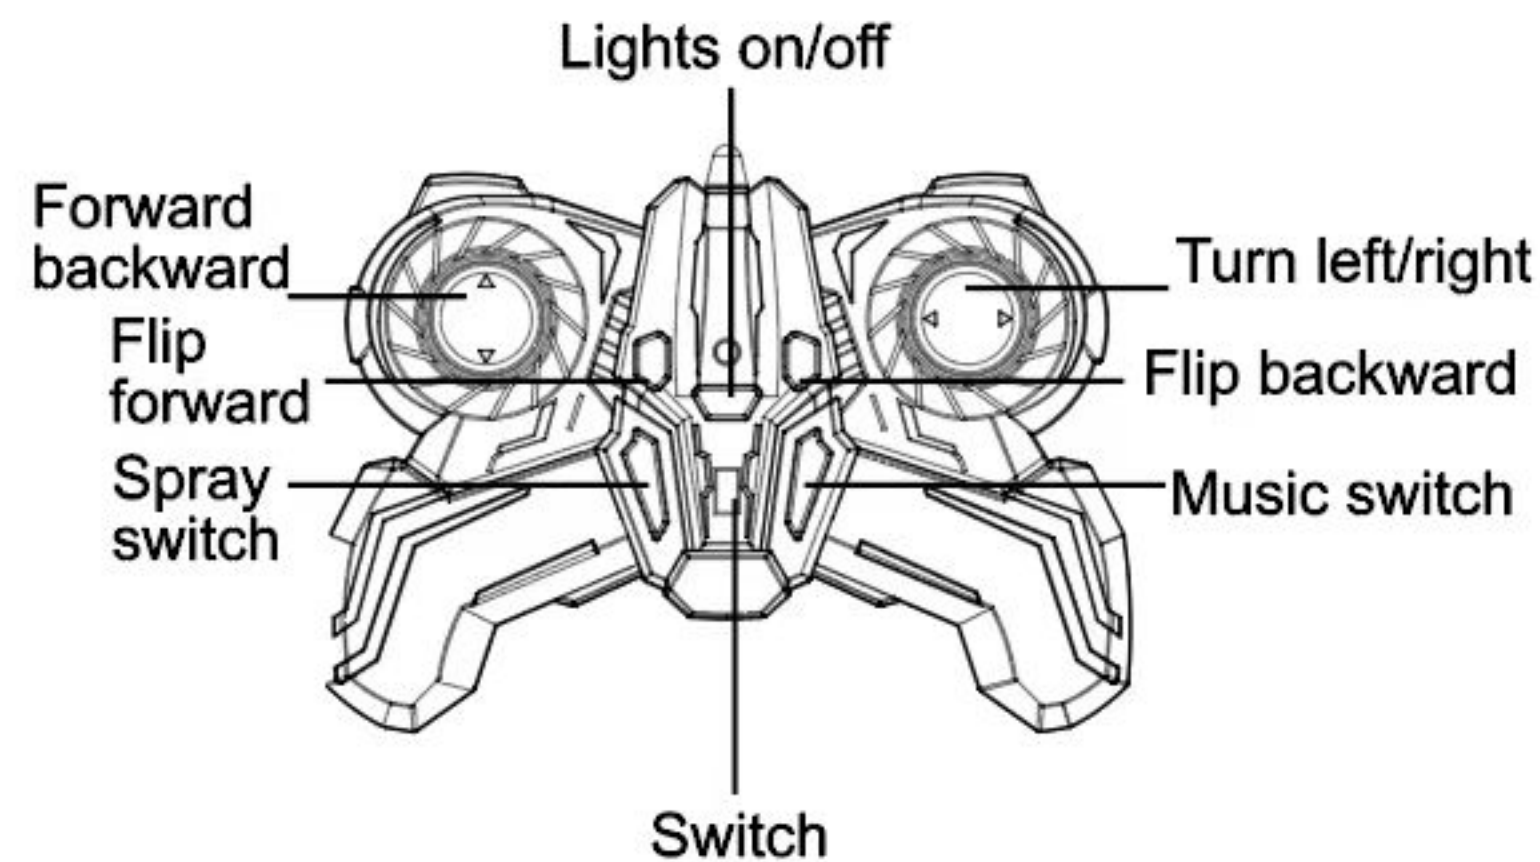

Remote control uses 2 1.5V "AA" batteries (purchased separately)

Remote control and car operation

1. Turn the switch ON the car and remote control to "ON" Location. (If there is a switch)
2. Then operate the car.
3. When your car starts to lose performance, power, or functionality, it may be time to change the battery or recharge the rechargeable battery

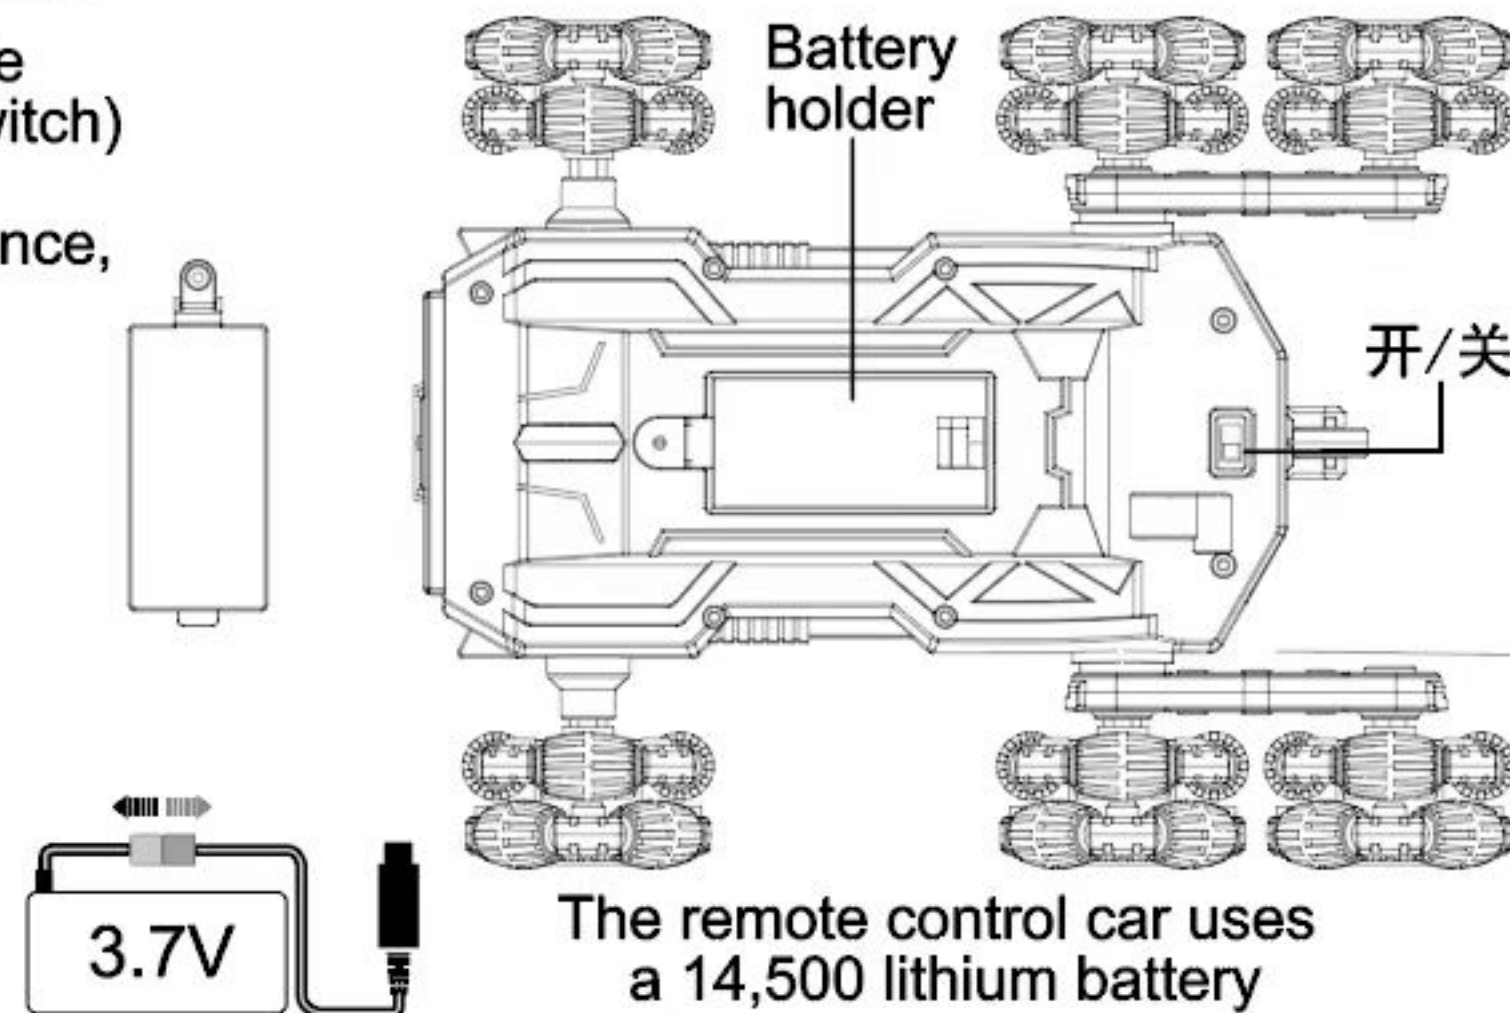

The remote control car uses a 14,500 lithium battery

⚠ Attention:

When the remote control can not control the remote control car, first remove the remote control battery and reinstall the battery, and then turn off the remote control car, and then turn on the power supply, and then operate the remote control to reset the frequency.

Function instruction


Forward/backward

Operate the "Forward/backward" button to remote control the car forward and backward




Left 360° rotation/Right 360° rotation

Operate the "Left/Right rotation" button to rotate the remote control car 360° to the left and 360° to the right

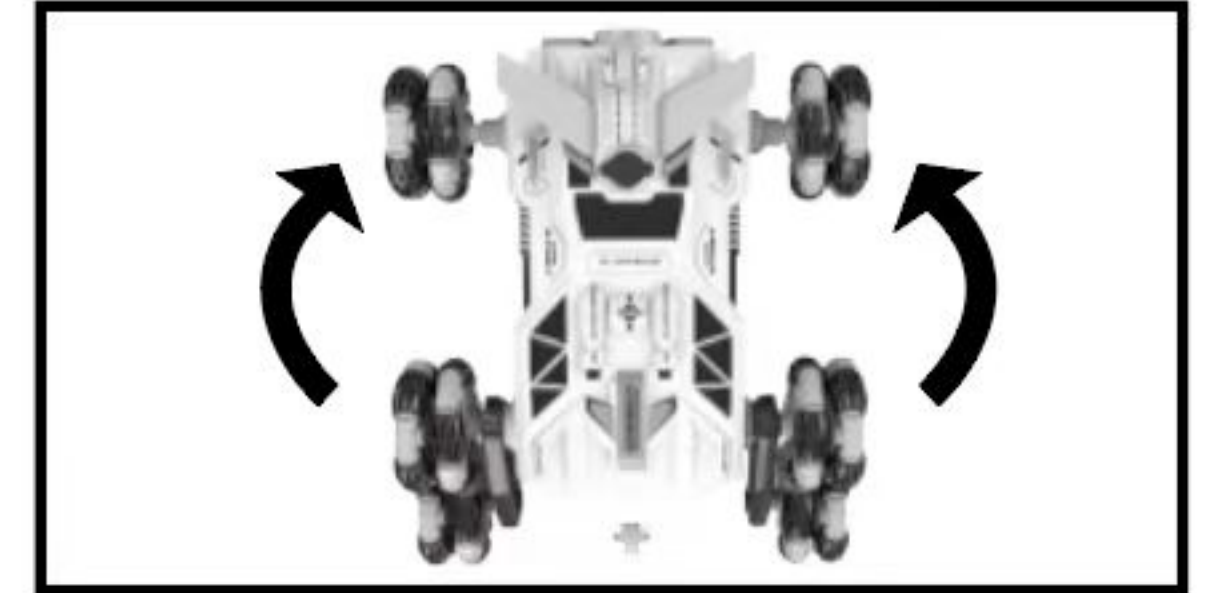


Front swing arm

Operate the "forward swing arm" button to remotely control the car's forward swing arm

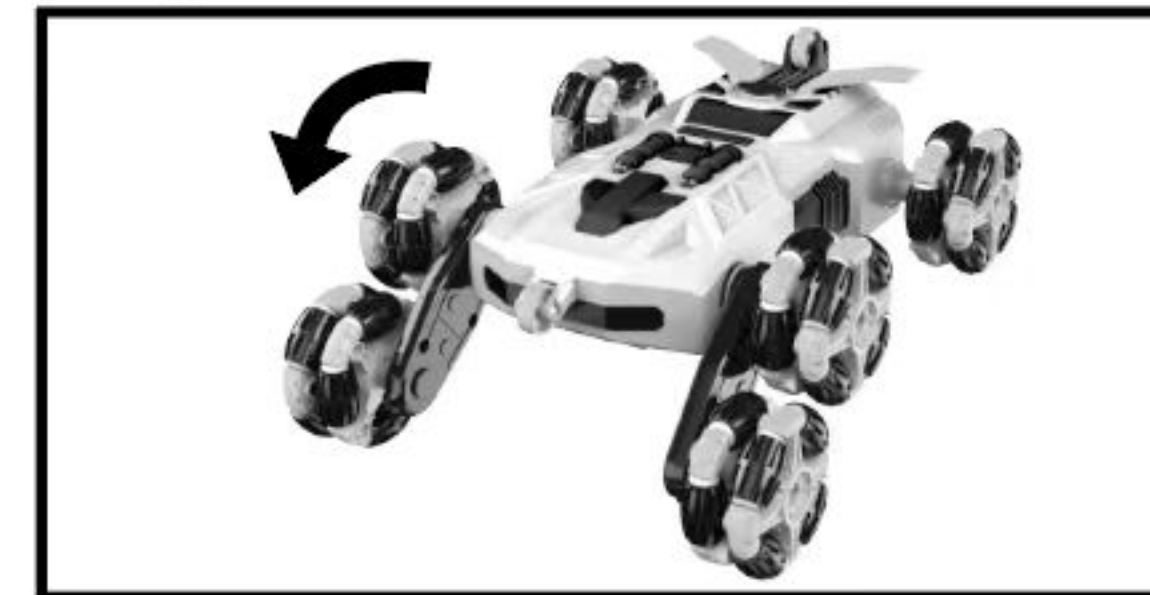


Back swing arm

Operate the "back swing arm" button, remote control car back swing arm

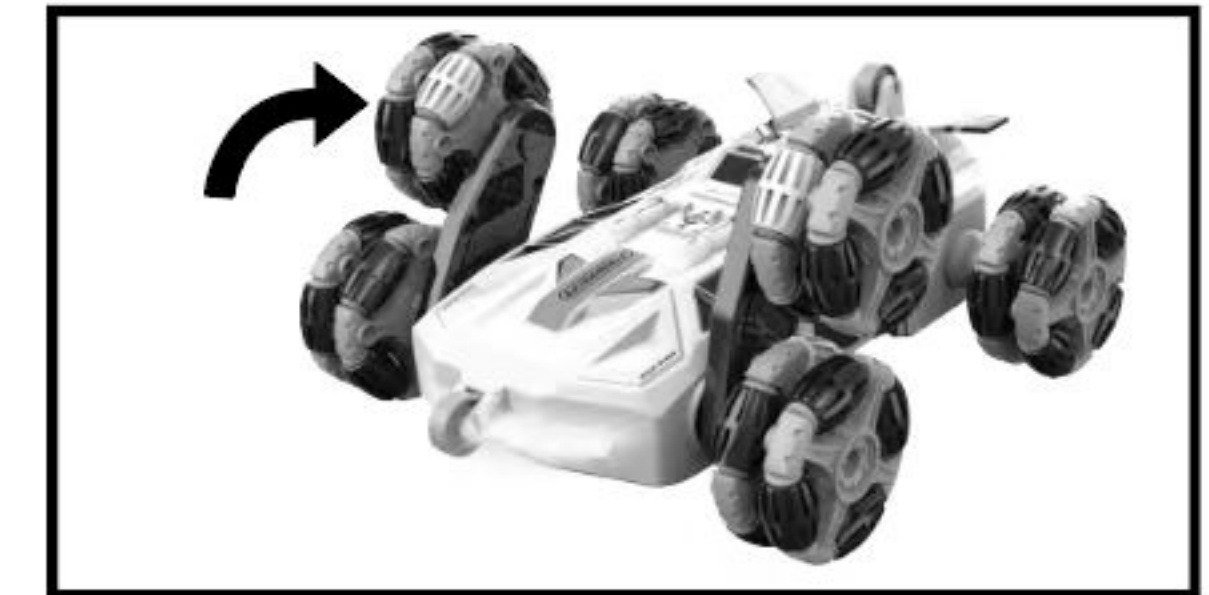

Two wheel gyro mode

Operate the "swing arm" button to rotate the front wheel to the bottom of the middle of the other two wheels, then press the "left/right rotation" button under the positive triangle state, and the remote control car will show a gyroscopic state

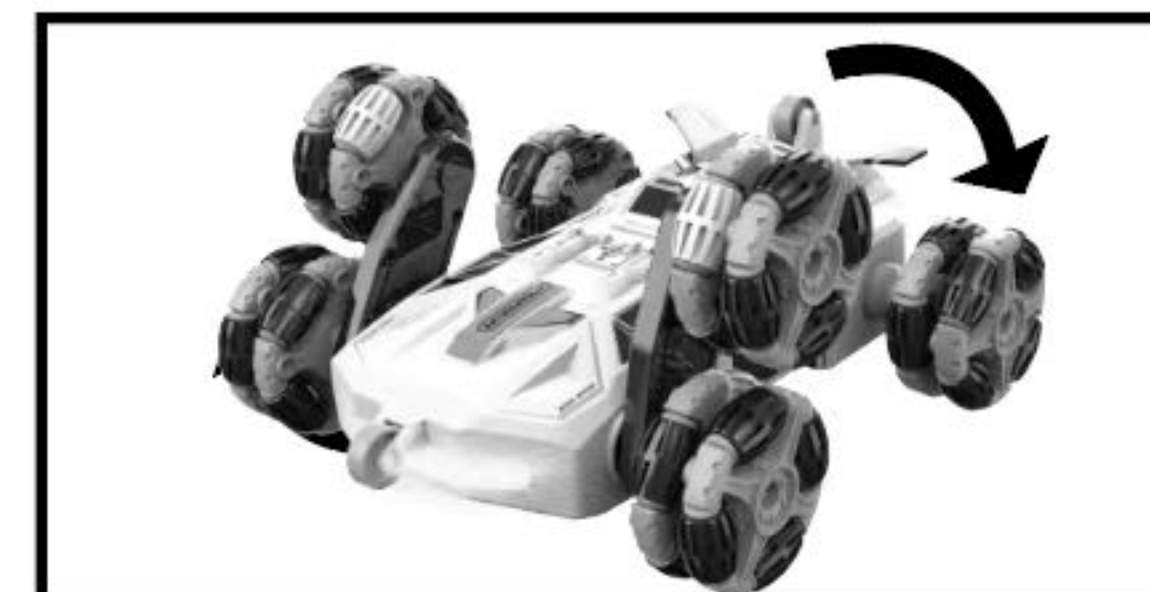

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.