


折叠尺寸140\*210mm

### User Manual



**Introduction**

Dear user, thank you for purchasing our dancing mats. Please read this user manual so you know any questions we will provide you with satisfactory service.

**Reminders**

Our mats are made of non-toxic materials. After opening the package, the dancing mat may have some peculiar smell. Please wait for 3 weeks and the peculiar smell will disappear naturally.

**Service**


After reading the instructions, if you have any problems when using the mat, please contact our after-sales customer service.

**WARNING**

- To be used under the direct supervision of an adult.
- Do not use fire.
- Please keep it away from dust as much as possible.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge in a wet place. Do not charge, use or do not charge continuously for more than 8 hours.
- Please charge for 2 hours before use.

**Rechargeable & Portable Music Player (DanceMat001)**

**PRODUCT DESCRIPTION**

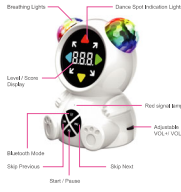

Labels: Breathing Light, Dance Spot Indication Light, Loudspeaker, Light ON/OFF, TV/PC Power Port, Power ON/OFF, Level 1 Score Display, Rechargeable VOL+ VOL- Buttons, Bluetooth Mode, Bag Pouch, Start/ Pause.

**Warm Tip**


- Please charge for 2 hours before use.
- During normal use, the red signal light remains on continuously if the red signal light is lit. To indicate the battery, please charge it in a timely manner. The green light will turn off once it is fully charged.

The music player is rechargeable and has 20 built-in songs. It supports Bluetooth connection for external devices such as MP3. Other songs may be added via external devices.

**How to connect Bluetooth with device**

- Press the **Bluetooth** icon on the screen 3 times about 10 seconds.
- The Bluetooth indicator of your mobile device or other Bluetooth-enabled devices will start "Discoverable" to pair.

**Power ON/OFF**




Labels: Receiver, TypoC Power Port, Red signal Lamp, Memory Game Mode, Place Mode, Dance Mode, Difficulty Selection, Delay Mode, Start/ Pause, Select Music.

**Warm Tip**

- Please charge for 2 hours before use.
- During normal use, the red signal light remains on continuously if the red signal light is lit. To indicate the battery, please charge it in a timely manner. The green light will turn off once it is fully charged.
- The dancing mat will start deep mode if it is lit for 10 minutes, you need to restart it by pressing the "Start" button on the mat.

**Power ON/OFF**

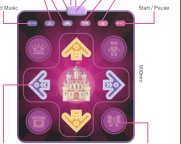

Labels: Receiver, TypoC Power Port, Red signal Lamp, Memory Game Mode, Place Mode, Dance Mode, Difficulty Selection, Delay Mode, Start/ Pause, Select Music.

**Warm Tip**

- Please charge for 2 hours before use.
- During normal use, the red signal light remains on continuously if the red signal light is lit. To indicate the battery, please charge it in a timely manner. The green light will turn off once it is fully charged.
- The dancing mat will start deep mode if it is lit for 10 minutes, you need to restart it by pressing the "Start" button on the mat.

**Product parameters**

Model NO.	001
Material	PC/PLA
Charging Method	DC/5V
Battery capacity (The DanceMat001)	1000mAh
Battery capacity (The mat)	800mAh
Bluetooth Version	Bluetooth 5.1
TypoC Power Port	TypoC Power Port (5V/2A)
Bluetooth transmission distance	100m (without obstacles)
Control mode	Touch control (Dance Mat)
Size/Weight	140*210mm / 1.2kg
Warranty	TypoC Power Port
File type	MP3, WAV, AAC, etc.

**Product Evaluation**

1\* Video Game Mat  
1\* USB Type-C Charger Cable  
1\* DanceMat001  
1\* User Manual

**How to charge the device properly? Please follow these steps**

- Turn on the power switch before plugging in the charging cable. While charging, the green indicator light will remain on and turn off once the battery is fully charged.
- Make sure that a USB cable or power adapter is not included in the package. Please purchase a USB-C adapter separately.

**Light-up Dance Mat**

- Turn on the "DanceMat001" switch.
- Turn on the device mat switch.
- Press **Start** to select the desired music.
- Press **Start** to start game officially. For games "1" to "20", the score will be displayed.
- After connecting the "DanceMat001" with the device mat, there are 20 built-in songs on the mat.

**Place Mode**

- Turn on the "DanceMat001" switch.
- Turn on the device mat switch.
- Press **Start** to select a position track then press **Start**.
- The number keys (1-20) will display the music to be used, as needed respectively.
- Press and hold to stop the file.

**Memory game Mode**

- Turn on the "DanceMat001" switch.
- Turn on the device mat switch.
- Press **Start** to "begin press".
- There are 4 levels. Start with one light and it will increase one by one after each round respectively.
- Users are required to memorize the position of light patterns and repeat them correctly within a specified time.

**Difficulty Mode**

- Turn on the "DanceMat001" switch.
- Turn on the device mat switch.
- Press **Start** to "begin press".
- The **Start** button will be lit and the top button on the mat will be lit up automatically. Press with the right hand then the top button will be lit up automatically. Press with the left hand then the top button will be lit up automatically. There are 3 levels stored in the mat.

**Who Can Bluetooth Dance Mat?**

- Turn on the "DanceMat001" switch.
- Turn on the device mat switch.
- Press **Start** to "begin press" on DanceMat001.
- Click the Bluetooth icon of your mobile device (or other Bluetooth-enabled device), select "DanceMat001" to pair.
- The voice prompt "Bluetooth connected" means the device is connected successfully.
- The mat will start Bluetooth mode. 1. Choose to game officially by pressing **Start** (there will be difficulty prompt to choose level).
- Click the Bluetooth icon of the device mat to pair. The corresponding number 1, 2, 3 will appear on the screen. When 2 is selected, the number 1 will appear on the screen, indicating that the mat has been successfully set. Then the other numbers 1, 2, 3 will start the game.

**WARNING**

Please note: The "DanceMat001" can only be connected to one Bluetooth device other than Bluetooth pairing. Therefore, once the "DanceMat001" has been connected to a particular Bluetooth device, it cannot be connected to another device.

**Difficulty Level Selection**

Level 1	1 LEDS will light up randomly
Level 2	2 LEDS will light up randomly
Level 3	3 LEDS will light up randomly

- There are 3 difficulty levels to select the initial settings is difficulty level 1.
- Press **Start** to select game difficulty, the corresponding number 1, 2, or 3 appears on the screen. When a level is selected, the number 1 appears on the screen, indicating that the mat has been successfully set. Then press **Start**.

FCC ID: J4Y5JLANN

**FCC Statement**

Any changes or modifications not approved by the party responsible for compliance shall void the user's authority to operate the equipment. This device complies with FCC Part 15B. The operation is subject to the following two conditions:

- The device may not cause harmful interference, and
- The device must accept any interference received, including interference that may cause unintended operation.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15B of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. This equipment does cause harmful interference to radio communications when you observe the symptoms of intermittent or degraded reception. If you experience these symptoms, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Contact the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device has been evaluated for specific RF exposure requirements. The device has been evaluated for specific RF exposure requirements. The device may be used in portable equipment without restriction.

## **IC Warning**

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

(1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device

Le présent appareil est conforme aux CNR d' Industrie Canada applicables aux appareils radio exempts de licence. L' exploitation est autorisée aux deux conditions suivantes:

(1) l' appareil ne doit pas produire de brouillage, et

(2) l' utilisateur de l' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment .The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Cet équipement est conforme aux limites d' exposition au rayonnement du Canada établies pour un environnement non contrôlé. L' appareil peut être utilisé en condition d' exposition portable sans restriction.