

## Bone operating manual

Button	operate	State before operation	action	Voice prompt	Indicator light
Trun on	Trun on	Off state	Press the "MF" button for 3 seconds	Power ON	The blue indicator is light for 1s
	Trun off	On state	Press the "MF" button for 5 seconds	Power OFF	The red indicator is on for 1s
	Pairing mode	Off state	Press the "MF" button for 6 seconds	Pairing	The blue indicator and red LED quickly flash
	Intercom matching	In paired state	Press the "MF" button of any device	Beep-beep	The blue indicator flashes once every 6S
	Clear pairing	On state	In power on mode press the "MF" button for 7s	Beep-beep	The red indicator flashes three times
End Call	Talking		Press the "MF button	Intercom disconnected	The blue indicator flashes 2 times every 6S
Multi function button	Enter pairing mode	On state	Press the "MF button for 4 second	Pairing	The blue indicator and red indicator quickly flash
	Answer a call	Call is incoming	Press the "Play/pause" button for 1 second while the call is incoming or wait for 10 seconds without any operation	Beep-beep	
	Reject the call	Call is incoming	Press the "Play/pause" button for 2 seconds	thump-thump-thump	
	Telephone voice switching	During a call	Press the "Play/pause" button for 2 second	thump	After switching, the red indicator lights flash once every 1s
	End the Call	During a call	Press the "Play/pause" button	thump	
	Voice calling	Bluetooth connection	double click the "MF" button	Voice Dial	
	Music play / pause	Bluetooth connection	Press the "Play/pause" button		
	Next song	Music playing	Press the "+" button		
	Previous song	Music playing	Press the "-" button		
	Volume Up	Calling/playing	Press and hold + is for volume up.	"Beep " at maximum volume	
Volume Down	Calling/playing	Press and hold - is for volume down.	" Beep " at minimum volume		
Battery indicator	Voice prompt power state when power on	Trun on	The voltage is higher than 3.8V	Battery Full	
		Trun on	The voltage is 3.5V-3.8V	Battery medium	
		Trun on	The voltage is lower than 3.5V	Battery Low	
	Connected	On state		connected	The blue indicator and flashes once every 6S
	Disconnected	On state		disconnected	The blue indicator flashes twice every 6S
	Low battery warning	On state		Battery Low	Same as the current status flashing light,The flashing light turns red indicator
	Charge	On state/Off state			The red indicator light on
Charging complete	Off state			The red light is off	

### SETTING

- 1.A and B are paired; B and C are paired; C and D are paired; D and E are paired,  
2.A, B, C, D, E is on.Press "MF" button of A to connect to B, Press "MF" button of A to connect to B, Press "MF" button of A to connect to B, Press "MF" button of A to connect to B, Anyone can hear one of them talking
1. It can be searched by mobile phone only when the red and blue lights flash
2. The music can't be operated during Bluetooth intercom.
- 3.Calling>Bluetooth Intercom>Music
- 4.Type-C USB Android universal charging interface for charging port
- 5.Bluetooth device name "SHD DELGAI"

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

