

说明书尺寸: 97*97mm
128双铜; 双面印刷; 风琴折; 专色429C



OMNIKLAD

Thank you for purchasing the Chorus Pro.True Wireless Stereo earbuds. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number.

In the Box

	Earbuds		USB-C Charging Cable
	Charging Case		User Manual/Quick Start Guide
	Ear-tips		Thank you card

- 01 -

OMNIKLAD

Specifications

Input	5 V±0.5 A
Rated output power	5 mW @ 1% THD
Battery capacity	40 mAh x 2 (earbuds); 500 mAh(charging case)
Charging Time	≈2h
Playtime (varies by volume level and content)	Up to 5 hours (Total 24 hours with the charging case)
Playtime (with ANC mode turned on)	Up to 4 hours (Total 20 hours with the charging case)
Playtime (with transparency mode turned on)	Up to 4.5 hours (Total 22 hours with the charging case)
Talk time	Up to 3.5 hours (Total 14hours with the charging case)
Driver size	10 mm
Frequency response	20 Hz - 20 kHz
Impedance	32 Ω

- 02 -

OMNIKLAD

Waterproof level (The waterproof level may reduce over time as a result of daily use)	IPX4 (The earbuds are not designed for swimming, showering, or exposure to pool or ocean water. Do not use in a sauna or steam room. The charging case is not waterproof.)
Bluetooth version	V 5.1
Bluetooth range	10 m / 33 ft

PRODUCT DETAILS
Please charge the earbuds and the charging case for at least 15 minutes before first use.

- 03 -

OMNIKLAD

- 04 -

OMNIKLAD

LISTENING COMFORT
Select the right size of ear-tip

Choose the ear-tip with the most comfortable fit and best seal. To change an ear-tip, gently pull it off from the earbud and press on the new one.

Wearing the Earbuds

Gently insert the earbuds into the ear and adjust to a comfortable position by rotating them. R is for the right ear, and L for the left.

- 05 -

OMNIKLAD

BATTERY LIFE AND CHARGING

Battery life
In Bluetooth mode the buds can last for 5 hours of continuous play. Using the charging case, this can be extended to 24 hours.
Power display
The red light is on when the battery is 8%-33% remaining, the yellow light is on when the battery is 34%-66% remaining, and the green light is on when 67%-100% remaining

Charging the earbuds
Place the earbuds in the charging case and they will automatically shut down and begin charging.

Charging the charging case

- 06 -

OMNIKLAD

PLAYBACK CONTROLS

Play/Pause	Tap once (L/R)
Previous track	Tap twice L
Next track	Tap twice R
Activate Siri or other voice assistant software	Tap Three (L/R)

Answer a call	Tap once (L/R)
End/Reject a call	Press and hold for 2 seconds (L/R)

Switch (Ambient sound modes/ Noise Cancellation/Normal)	Press and hold for 2 seconds (L/R)

- 07 -

OMNIKLAD

AUTOMATIC CONNECTION

Pairing:

- Turn on the Bluetooth of your mobile phone
- Open the charging case, the earbuds will automatically enter the Bluetooth pairing mode
- Turn on the pairing function on the device to be paired with the earbuds
- From the list of available devices Find and select "Chorus Pro" from the list of available devices.
- If a code or PIN code is required for pairing, please enter "0000"

Automatic remote connection

- When you turn on the earbuds, they will automatically reconnect to the last-paired device or enter pairing mode if no paired device is found.
- In pairing mode, the earbuds will automatically turn off after 5 minutes if no devices are paired.
- The earbuds are automatically turned off when placed in the charging case.
- If the Bluetooth connection is lost, they will automatically begin pairing.

NOTE:

- If one of the earbuds has no sound output, put both earbuds back into the charging case and take them out again.
- The maximum wireless operating range is 10m (33ft). If you exceed this range, the earbuds will disconnect from your paired device. The connection will be re-established if you re-enter the wireless range within 5 minutes. The earbuds will automatically

- 08 -

OMNIKLAD

reconnect to the last-paired device. To connect with other devices, repeat the previous pairing steps.

RESET:
Reset if the earbuds cannot properly pair with each other or with other devices. Place the earbuds into the charging case and remain the case open. Press and hold the button on the case for 6 seconds until the case LED indicators flash red 4 times . This confirms that the reset was successful and your earbuds can be connected normally.

SAFETY INSTRUCTIONS

- Do not place the earbuds in extremely high or low ambient temperatures for an extended period of time. Extreme temperatures will cause the device to deform.
- Use electronic equipment with caution during thunderstorms.
- This product contains small parts which could cause harm if swallowed. Keep out of the reach of children.
- Using the earbuds for a long time at high volume may affect your hearing. Make sure to use an appropriate level of volume.

BATTERY WARNING
This product contains a lithium battery. Please do not disassemble, strike, crush, or place the product into contact with flames. Do not expose to high temperatures or direct sunlight for a prolonged period. If there is any swelling, leakage, odor, or any other abnormality in the battery compartment of the product, cease use immediately. Please dispose of used batteries properly and in accordance with local regulations.

- 09 -

OMNIKLAD

READ ALL INSTRUCTIONS BEFORE USE AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- 10 -

OMNIKLAD

FCC RF EXPOSURE STATEMENT:
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

CAUTION!
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES
After examining this material for compliance or intensity limits of RF field, users may over exposure to radio frequencies and compliance and compliance to acquire. the corresponding information.

DECLARATION OF CONFORMITY
Hereby declares that this product AUD-A02-01 is in compliance with the essential requirements and other relevant provisions of Directives 2014/53/EU. The Declaration of Conformity for the AUD-A02-01 is available from www.omniklad.com

This symbol indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

- 11 -