


单页尺寸: 125*176MM

材质: 书纸

双色印刷, 装订成册

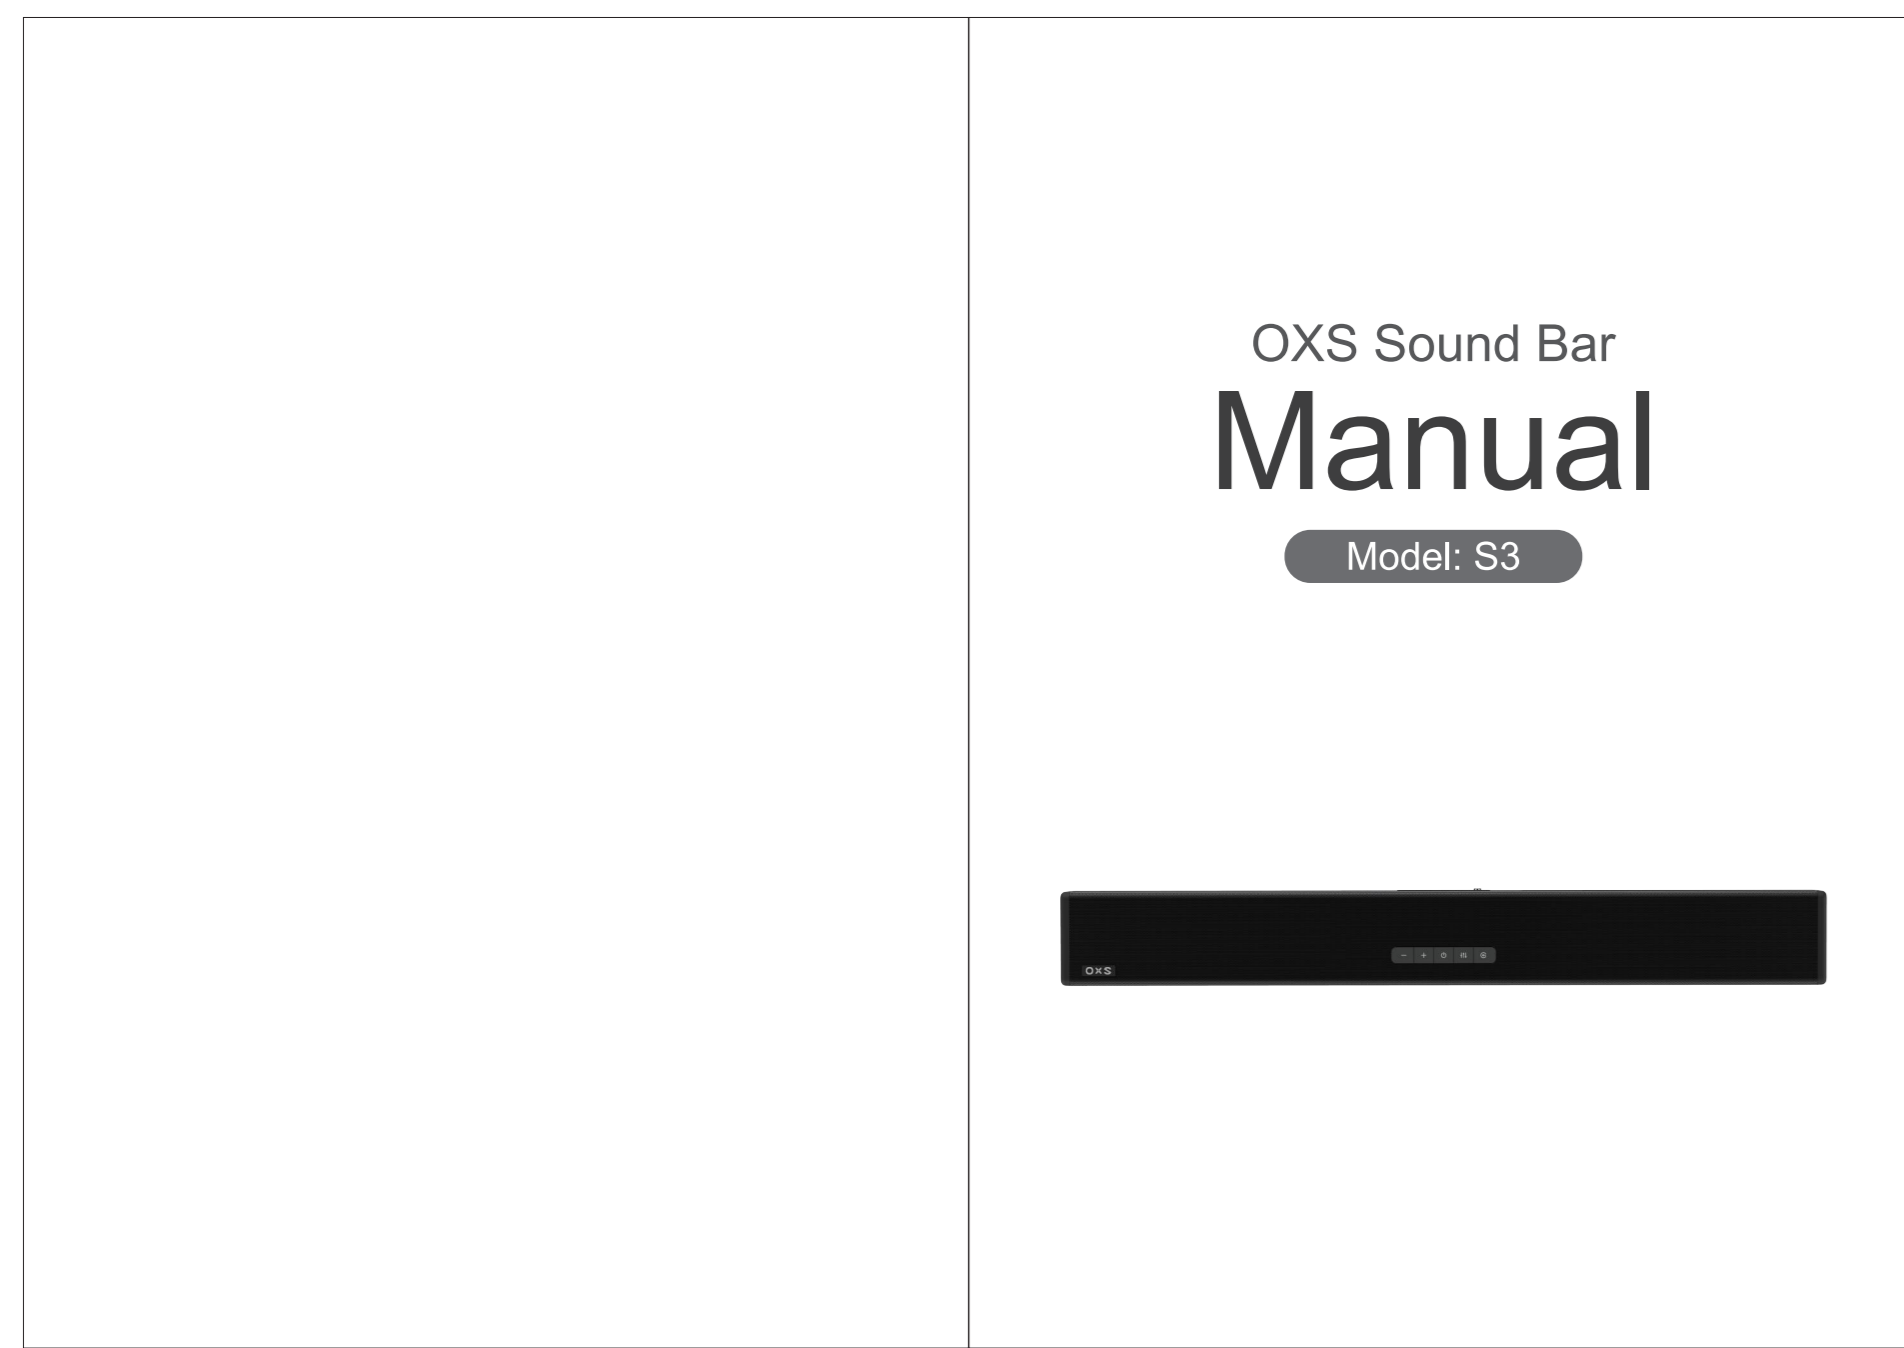

MENU
Important Notifications
Important Safety Guidance
Safety Precautions
Package List
Features
Specifications
Indicator Light
Remote Control Guidance
Preparation Before Installation
Wall Mounting
Optical & Coaxial Connection
USB Connection
AUX Cable Connection
Remote Control Guidance(Battery&Range)
Turn On the Power and Start
Basic function Introductions
Bluetooth Guidance
Troubleshooting
Cleaning
Warnings

Before using the sound bar, please read the following important notifications.

- For future reference, please read the guidance manual thoroughly and keep it preserved.
Please change your Audio Output Settings into the PCM form. For more information, please check the guidance manual of the playing device.
To preserve better sound quality, please set the volume of the sound bar to 75% of the maximum volume (about 3 levels reduced from the maximum will be 75%.) Meanwhile, please adjust the volume of the playing device to the proper level.
To preserve better audio sound quality, please press the button of Movie, Music, or News to choose the proper equalizer mode.
The recommended equalizer mode is as follows.

Table with 4 columns: Audio source, Sound mode, Audio source, Sound mode. Rows include String/Classical, General, Documentary, Variety Show, Music/News, Pop music, Light music, News/Dialog, Music/News.

- The selected mode and volume setting will remain in the system, 50% of the maximum volume is also included.
The audio output can be affected by the setting of the playing device. If necessary, please adjust the settings of the playing device to improve the sound quality.
Not every function on the remote controller can be found on the sound bar. Please keep well of the remote controller.
Disconnect the power adapter from the socket to shut down the sound bar completely.
Do not modify the system without authorization, otherwise, it may cause safety issues, legislation, as well as the invalidation of your warranty.

Lightning system with an arrow symbol in the triangle warns the user of an unshielded dangerous voltage in the system enclosure, which may be sufficient to cause an electric shock hazard.
The exclamation mark in the triangle, as marked in the system, is intended to remind users that there are important operation and maintenance instructions in this guidance manual.
Do not modify the system without authorization, otherwise, it may cause safety issues, legislation, as well as the invalidation of your warranty.
The system contains magnetic material. If you have any questions about whether it may affect the operation of implantable medical devices, please contact your doctor.
Do not place open flame sources on or near the system, such as lighted candles.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
This device may not cause harmful interference, and
This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Package List
OXS Sound Bar x 1
Accessories: power adapter x 1, Manual x 1, Remote control x 1, Optical cable x 1, Coaxial cable x 1, Wall brackets x 2, Expansion holes x 2, Screws M4 x 10mm x 2.
Features: Total power of 40 watts, 32-inch bar sound, 2.0 channels, 4 1/2-inch speakers, 2 sound guide tubes, Analog audio interface (AUX) input, Digital audio interface (optical input and coaxial input), Streaming music from smartphones or tablets, The sound bar can be installed on the wall, Full-function infrared remote control, Digital control audio processing sound mode, Three sound effect modes, Strong and abundant bass effect.
Specifications: Power Adapter: Input: 100V-240V/AC 50-60Hz, Output: 2.0VDC 1.8A, Protection Class: II, Function Class: V0, Remote Controller: 1.5V. Speaker: Output: 20watts x2, Frequency response: 60Hz-20kHz, Signal to noise ratio: 80dB (A-weighting), Distortion: <0.08% (A-weighting), Standby power consumption: <0.5watts.

Button Introductions
1. Volume down, 2. Volume up, 3. Power (switchstand by mode), 4. Sound mode, 5. Media sources.
Port Introductions: 6. COAX, 7. Optical, 8. USB, 9. AUX, 10. DC IN 22V/1A.
Indicator Light Introductions: 1. Volume down, 2. Volume up, 3. Power, 4. Switch sound mode, 5. Switch media sources.

Remote Controller: Power, Bluetooth, Volume up/down, Previous/Next Track, Move mode, USB, AUX, Optical Connection, Play & pause, Next track, Music mode, News mode, Coaxial.
Unpacking: Remove all packaging, Check for the presence of all parts and for transport damage, Do not use the product if there is any damage or incomplete delivery, Keep the packaging safe for future use.
Caution: When placing the sound bar on an entertainment center, bookshelf, or any type of enclosed space, be sure to allow at least 2 inches (5cm) of space around the sound bar for ventilation.

Caution! Make sure the power adapter is disconnected from the electrical outlet before making any mounting and connection.
Wall mounting: 1. The distance between the two wall brackets is 770mm (30.39 inches), 2. Mark the drill location and drill 2 holes in the wall, 3. Insert 2 wall anchors into the holes, using a hammer if necessary, 4. Use 2 screws to install on the wall and fix the screws.
Optical and Coaxial Cable Connection: Use the provided optical or coaxial cable to connect the sound bar to a TV, DVD, Blu-ray player or other suitable equipment.
IPTV SetTop Box: Connect the IPTV SetTop Box to the sound bar using the provided optical or coaxial cable.

Audio Cable Connection: USB Connection: Use the USB interface and USB device connector of this product, as shown in the figure below.
Audio Cable Connection: AUX cable Connection: Use a 3.5mm stereo cable to connect the AUX interface of this product and the AUX interface of MP3 and other devices.
Note: 1. Requirements for USB devices, 2. Press the key on the remote control or the sound bar to switch the product to USB mode, 3. Connect the USB flash drive with audio programs to the sound bar, 4. Play audio programs stored on the USB device through the remote control.

Instructions for the remote control: 1. Slide open the battery compartment cover, 2. Insert 2 AAA batteries into the battery box, 3. Close the battery compartment cover.
Warning! The sound bar can only be used with the included remote control package.
Use suggestions: Before replacing the battery, make sure there are no obstacles between the remote control and the sound bar.
Remote control working range: 10m, 30°, 30°.

Note: When there is an obstacle between the remote control sensor of the soundbar and the remote control, the remote control may not operate.
Warning! Please keep the remote controller in a safe place.
Connect the Power and Start Enjoying Your Sound Bar: Before connecting the power adapter, make sure that all source connectors are properly connected.
Select Sound Mode: Digital control audio processing includes three sound modes: Movie, Music, and News.
Auto Wakeup & Standby: If there is no signal of input for 15 minutes after turning the sound bar on, it will automatically enter standby mode.

Basic function description Select Media Source: You can separately connect multiple media devices to the sound bar.
Basic function description >>> Playback Function: Generally, the playback function can be managed through the controls of the connected source device.
Note: Before turning on the soundbar, set the volume of the source device to a low level.

Disconnect the Bluetooth Device: Use the Bluetooth device to disconnect. The sound bar will start searching for another Bluetooth device.
Note: Bluetooth works best within a range of up to 33 feet (10 meters).
Select and Play Audio Files or Music on Bluetooth Devices: During playback, you can use the Play/Pause buttons on the remote controller to perform playback operations.

Troubleshooting: No power: Check whether the power adapter is correctly connected to the power outlet.
No sound: Press the power button on the sound bar or remote control to turn on the soundbar.
Bad sound quality: Increase the volume of the sound bar to the maximum.
Problems Solutions: Press the Movie, Music, or News button on the remote control to select the appropriate sound mode.

Cleaning

- Before cleaning, make sure to turn off the system and unplug the power adapter from the power outlet.
Do not use gasoline, alcohol, or other abrasive cleaners to clean the exterior.
Clean the surface of the system with a soft dry cloth.
Do not use any sprays near the system. Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia or abrasives.
Do not spill liquid into any openings.
If you need to transport the system, please use the original packaging.

Warranty

The warranty period for this product is 12 months from the date of initial purchase.
The following are not covered by the OXS warranty:
Damage caused by abuse and abuse.
Damage caused by chemical, fire, radioactive materials and poisons, and liquids.
Damage caused by natural disasters.
If you have any question, please contact us at service.oxs@outlook.com. We will respond < within 24 hours.