 





Quick Start Guide

Model:RWB12444

1 Slide stand arm onto stand base

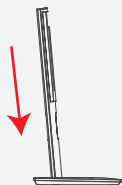

 2 Tighten screw on the bottom of base into stand until fastened

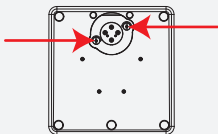


3 Line up the four buckles on stand VESA Panel with the holes on the backside of the monitor



4 Hook and push them together, it was assembled well after you hear "click"



 
5 Plug power adapter into wall outlet

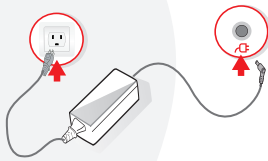

6 Plug power adapter into All-in-one PC






 7 Press the power button to power on All-in-one PC

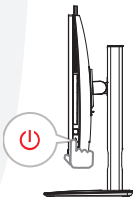

8 Follow the on screen Windows prompts to finish setting up

   - 1 Monitor screen
- 2 Pop-up Camera
- 3 Fully Adjustable Stand
- 4 Power On/Off
- 5 Audio Out/Headset
- 6 SD Card Slot
- 7 Data Type-c
- 8 USB 2.0
- 9 2.5" SSD Slot (SATA SSD only)
- 10 Speaker
- 11 Power Adapter Port
- 12 HDMI
- 13 VGA
- 14 USB 3.0X2
- 15 Ethernet port
- 16 USB 3.0X2
- 17 Mic In
- 18 Audio Out/Headset
- 19 Kensington lock
- 20 Brightness Up
- 21 Brightness Down

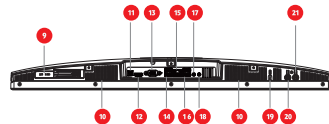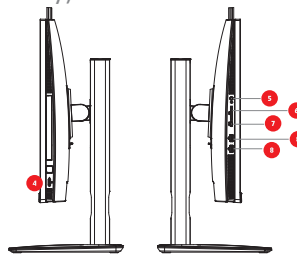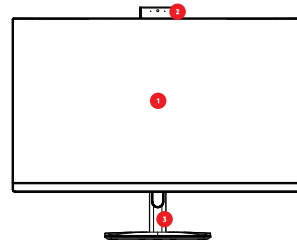

Caution: The AC adapter included with your PC was specifically designed and approved for your model. Utilization of an after-market adapter may damage either the notebook or other devices connected to it. If damage is determined to have been caused by utilization of an unauthorized power supply, it will not be protected under warranty. For support, please visit <https://www.rca-brand.com/support.html>. RCA and the RCA logo are the registered trademarks of RCA Corporation and are used under license from RCA Corporation Corporation.

What's in the box

- | | |
|-------------------------|---------------------|
| 1 All-in-One Desktop PC | 5 Wireless Mouse* |
| 2 Adjustable Stand Arm | 6 Quick Start Guide |
| 3 Stand Base Plate | 7 Warranty Book |
| 4 Wireless Keyboard* | 8 Power Adapter |

*USB Receiver in Mouse Battery Compartment

Quick guide

Supply power to the All-in-one PC

Connect the supplied AC cable onto the supplied power adapter

Connect the DC plug on the supplied power adapter to the charging socket (DC IN) on the All-in-one PC.

Then plug the AC cable into a socket.

Only leave the AC cable connected to the socket until you shut down your All-in-one PC. In addition, always disconnect the power adapter from the All-in-one PC when you are not charging it.

Turning on the All-in-one PC for the first time

Connect the DC plug on the supplied power adapter to the charging socket (DC IN) on the All-in-one PC.

Press the on/off switch for about 5 seconds to switch on the All-in-one PC. The setup assistant will then appear on the screen.

Follow the setup assistant instructions to set up your All-in-one PC.

During the start-up, the wizard prompts you to register for your Microsoft account. If you do not yet have a Microsoft account, please set one up [here](#)

After completion of the start-up, your All-in-one PC is configured. This may take several minutes to complete. Do not turn the All-in-one PC off during this time!

Unlocking the display

As soon as the device has been set up (and every time it is subsequently switched on and booted up), the lock screen appears, Press any key on the wireless keyboard to unlock the screen.

If your All-in-one PC is password-protected, you must then enter the password.

Start menu

To display the start menu, click the Windows icon in the bottom left of the display or press the the Windows button on the keyboard. Press the icon a second time to hide the Start menu.

The Start menu consists of the classic navigation list (A) and a useful app area (B) to the right of the navigation list.

Among other things, the navigation list includes a link to open Settings (cog wheel icon).In the app area, you can pin apps and favorites in the form of live tiles and organize them.

In the navigation list (A) you find a list of all installed apps in alphabetical order. An alphabetic quick access to the navigation list appears when you click on a respective first letter.

The Action Center

The Info Center is a bar with quick links to some important All-in-one PC functions, which you can either display or hide.

To access the Info Center click the memo symbol in the bottom right-hand corner.

Activating WIFI and opening the browser

- a. Call up Settings(see "Start menu").
 - b. In the settings, click "Network & Internet".
 - c. Click " Wi-Fi" on the left in the next screen.
 - d. Click the slider or the word "Off". The word "On" now appears next to the slider.
- The All-in-one PC searches for all available for all available wireless networks nearby

and then displays them as a list (“Show available networks”).

e Click the network that you wish to connect to.

f Enter the network key (password) if necessary.

g . Click “Connect”. The All-in-one PC connects to the selected network.

The button for launching the Internet browser can be found on the task bar at the bottom of the display. Click the little blue “e” to launch the browser. To enter an Internet address (URL), click the search bar displayed centrally at the top of the window.

Reset

If the All-in-one PC “freezes” and no longer responds, you can reset it. Please and hold down then on/off switches off. Wait for about 20 seconds and then turn the All-in-one PC on normally.

Any files that have not been saved will be lost when the All-in-one PC is reset.

Switching off the All-in-one PC

Standby

Briefly press the on/off switch on the device to activate the standby mode. Press it again quickly to take the All-in-one PC out of standby mode.

Shutting down

Open the Start menu. Click“Φ” in the bottom area of the Start menu and then tap “Shut down”. The All-in-one PC shuts down.

Saving energy

Deactivate the WIFI function when it is not in use.

Only leave the power adapter connected to the socket until the All-in-one PC’s battery is fully charged. In addition, always disconnect the power adapter form the All-in-one PC when you are not charging the All-in-one PC.

Reduce the display brightness under “System”→“Display” in the settings.

Activate standby mode or turn off the All-in-one PC completely if you are not using the All-in-one PC.

General safety information

WARNING

Risk of multiple injuries due ton reduced physical, sensory or mental capabilities and/or lack of knowledge or practical experience

Children and vulnerable individuals may only use the device under direct supervision.

Risk of electric shock or electrocution from live components

Do not insert objects into the device’s ventilation slots.

Do not open the power adapter.

Do not touch the power adapter if you hands are wet.

Do not short out the device and/or charger.

Fire hazard and or risk of burns from damaged or leaking batteries

Do not use or charge the device if the battery if damaged or leaking.

Do not use or charge the device if the battery is damaged or leaking.

Avoid skin contact with the device and/or battery if the battery is leaking. Wear protective gloves if it is not possible to avoid touching the device/battery in such cases.

Immediately wash your hands thoroughly in the event of skin contact with the

battery substrate.

If the battery substrate comes into contact with your eyes, rinse them out with plenty of water and consult a physician immediately.

Risk of fire or explosion when using non-approved chargers and power adapters

Only use the included power adapter or on an equivalent power adapter to charge the battery.

If the power adapter is defective, only exchange it for an equivalent power adapter. Please note the information in the technical specifications of the power adapter in the online user's manual or contact customer service.

Risk of multiple injuries from slipping, tripping or falling

Do not expose the device and/or power adapter to vibrations and/or any form of impact.

Do not drop the device and/or power adapter. Do not use the device/power adapter if it has been dropped and/or is damaged. Have a qualified service technician check the device/power adapter before restarting it.

Always ensure that the power cord is installed securely.

Do not allow the power cord to knot or kink.

Notes and practical tips on maintenance and repairs

WARNING

Risk of electric shock and electrocution from live components

Never open the casing of the device and/or the power adapter. No parts inside the device require maintenance or cleaning.

The battery in the device should not be removed by the user. Do not disassemble the battery, place objects into it or handle liquids near it. The battery could catch fire or explode.

It is prohibited to repair or modify the device and/or power adapter. Failure to comply with these instructions may void the warranty.

The device should only be serviced and repaired by a qualified service technician. Contact customer service where repairs or servicing are required.

FCC regulatory conformance:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.