

成品尺寸:85\*165mm 材质: 105g双铜 装订:骑马钉(不锈钢骑马钉)

85mm

165mm

Cheer  
moda

**Warranty card**

Carte de garantie

Garantiekarte

Tarjeta de Garantía

Cartão de garantia

Scheda di garanzia

保証カード

保修卡

**Model**

Modèle  
Model  
Modelo  
Modelo  
Modello  
モデル  
型号

**User name**

Nom d'utilisateur  
Benutzer Name  
Nombre de Usuario  
Nome do usuário  
Nome utente  
お客様名  
用戶姓名

**Telephone**

Téléphone  
Telefon  
Teléfono  
Telefone  
Telefono  
電話番号  
电话

**Purchasing place**

Lieu d'achat  
Einkaufsort  
Lugar de compra  
Local de compra  
Luogo di acquisto  
購入場所  
购买地点

**Purchasing date**

Date d'achat  
Einkaufsdatum  
Fecha de compra  
Data de compra  
Data di acquisto  
購入日  
购买日期

☎ 0086-400-872-8723

✉ service@cheer-moda.com

🌐 www.cheer-moda.com

Zhuhai Cheer Technology CO.,LTD.

Cheer  
moda

 
**CYCLONE**

**Bluetooth Electric Wine Aerator**

Aérateur de vin électrique Bluetooth

Elektrischer Weinbelüfter mit Bluetooth

Areador Eléctrico de Vino Bluetooth

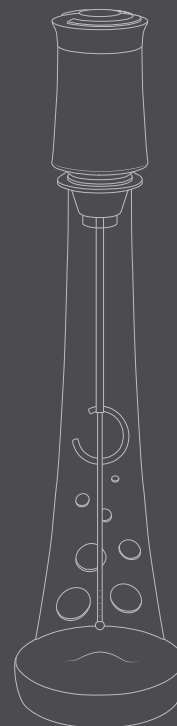

**EN** Thank you for purchasing the Cheer Moda Cyclone Bluetooth electric wine aerator.


#### **BEFORE USING FOR THE FIRST TIME**

To ensure safety and maintain the high quality of the product, we recommend that you read and follow the instructions carefully.

- Do not immerse the appliance in water or any other liquid to avoid physical injury or damage to the product.
- Do not dismantle the product by yourself; otherwise the warranty will be invalid.
- Do not pressing the product on the wine bottle with sudden force or trying to speed up wine aeration. The product works best under its setting speed.
- Do not use this product for any other purpose.
- Keep away from flammable, explosive gas.

#### **PRODUCT DESCRIPTION**

1. Button
2. Battery compartment
3. Indicator
4. Holder
5. Stainless steel telescopic tube
6. Wine aeration air hole

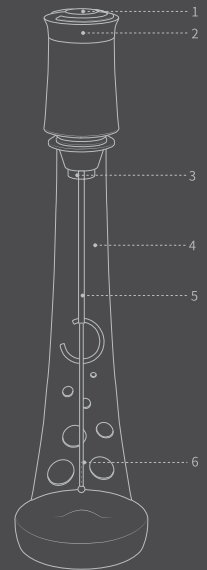

## HOW TO INSTALL THE BATTERIES


- Uncover the battery compartment by rotation;
- Insert two AAA batteries according to the positive and negative indications;
- Restore and tighten the cover.



## HOW TO USE THE PRODUCT FOR WINE AERATION

### Manual Wine Aeration

- According to the illustration, insert the stainless steel telescopic tube into the jack at the indicator tightly.

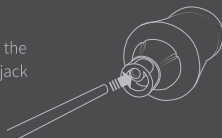

- Extend the telescopic tube to suitable length and insert it into the bottle of wine, press the switch lightly, the wine aerator then begins to work with its indicator light kept on in red. The default working time is 60 seconds and the wine aerator will stop working 60 seconds later.



**Important note:** the wine aeration efficiency of the product is extremely high, so the actual working time is not equal to the normal aeration time with a decanter. Wine aeration of 60 seconds with this product is almost equal to 30 minutes of static wine aeration with traditional decanter)

### Wine Aeration via Bluetooth Mobile Control

The product can be connected with dedicated APP through Bluetooth and controlled remotely on mobile terminals. The APP supports Android system and Apple IOS system.

- IOS users can search "**Cheer Moda**" in APP Store, and download it for installation, or scan the QR code below to enter the APP Store. Android users can scan the following QR code directly for download and installation.



(IOS)





(Android)

- After the APP installation, turn on your cellphone Bluetooth and the APP, an interface of "**Searching Cheer device**" will pop up for Bluetooth pairing, long press the button at the top of the wine aerator for 3 seconds, when the indicator flashes in blue, it indicates that the product is ready for Bluetooth connection. After successful connection, the indicator will be in blue, and off after 5 seconds.
- Click "**Cheer Moda**" to access the APP interface, you can click "**Set wine aeration time manually**" for choosing the proper wine aeration time, click "**Start**", then the wine aerator will begin to execute wine aeration.
- If you do not know the wine aeration time for a certain wine, you can click "**Scan to identify the wine aeration time**", i.e., you can scan the wine label in the front of the wine bottle, find information of the corresponding wine in the APP scan results and set the wine aeration time according to the system suggestion.

## APP IDENTIFICATION AND FUNCTION DESCRIPTION

- The APP of the product has been accessed to the database of professional wine information website "9kacha.com", so the system is able to identify a specific wine automatically by scanning wine labels and provide you with suggestions of wine aeration time (the time of static aeration in traditional decanter).
- If there is no matched information in the scan result, you can analyze the wine using the tips given by the APP system and select the proper wine aeration time (The tips are only for reference).

## FUNCTION SETTING MENU

- Click " " to access the function menu.
- Click " " to edit the name of the wine aerator.
- Click "Software update" to view software information.
- Click "Problem feedback" to contact for customer support by email or telephone.
- Click "Disconnect Bluetooth" for easy disconnection.

## LOW BATTERY WARNING

If the indicator flashes in red during product operation, it indicates low battery. Please replace with new batteries timely.

**Note:** It is not suggested to mix new batteries with old ones, or batteries of different brands.

## TROUBLESHOOTING

If there is no response when pressing the button, or the product stops working during its operation

- Please check whether the batteries are installed correctly.
- Please check whether the battery capacity is sufficient.

If all above operations are correct and the product still works abnormally, please contact the dealer for repair.

## CLEAN AND MAINTENANCE

- Clean the surface of the product with a soft and wet cloth.
- Do not immerse the product in water or other liquids.
- To clean the telescopic tube, please take off the telescopic tube from the jack, extend it to its maximum length and wash it directly with clean water. Do not use any detergent.
- Please store the product in a clean and dry place in its idle time.

## WARRANTY

Under normal conditions, this product is guaranteed for 2 years from the date of purchase. The warranty service is only valid if the product is returned to your vendor with proof of purchase (warranty card duly completed or receipt of purchase).

Free maintenance is invalid in the following cases:

1. Damage caused by natural disasters such as an earthquake, a fire or flood and power supply failure or chemical erosion, etc.
2. Damage caused by improper operation and maintenance according to the instructions, unauthorized disassembly or repair.
3. Damage caused by installation of parts for repair or alteration other than Cheer Moda products outside authorized service centers.

## FCC statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.