


Operating Manual for Stunt Car




Please read this Operating Manual carefully before use, and keep it for future use.


Packing List

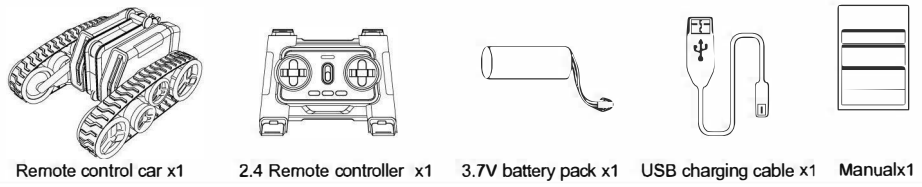


Instruction on the Keys of the Remote Controller

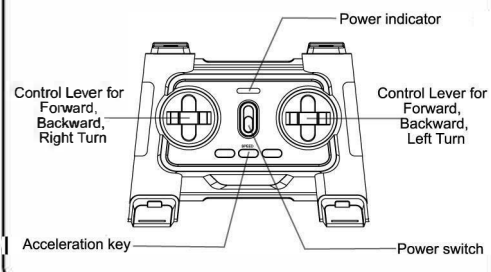

Instruction on the Installation of the Remote Controller Battery

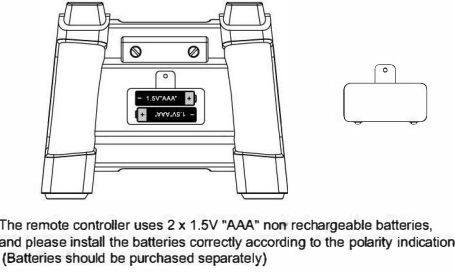

Charging and installation of remote control car battery

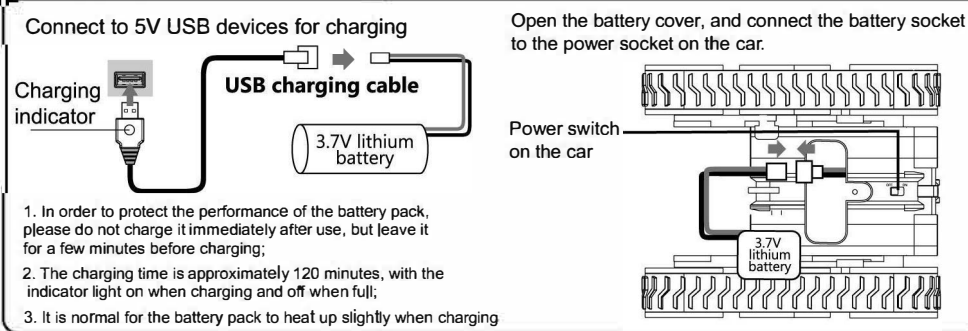

- In order to protect the performance of the battery pack, please do not charge it immediately after use, but leave it for a few minutes before charging.
- The charging time is approximately 120 minutes, with the indicator light on when charging and off when full.
- It is normal for the battery pack to heat up slightly when charging.

Remote control car control instructions

Function Description	Remote control car	Remote controller
Forward		 Push the two control levers upward simultaneously, and the car moves forward
backward		 Push the two control levers backward simultaneously, and the car moves backward
Left turn		 Push the right control lever upward, and the car moves left
Right turn		 Push the left control lever upward, and the car moves right
Left Retreat		 Push the right control lever downward, and the car retreats left
Right Retreat		 Push the left control lever downward, and the car retreats right

FCC Compliance Statements FCC ID: 2AYRQ-WT2023

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.


If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


-- Consult the dealer or an experienced radio/TV technician for help.
Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Trick Mode A

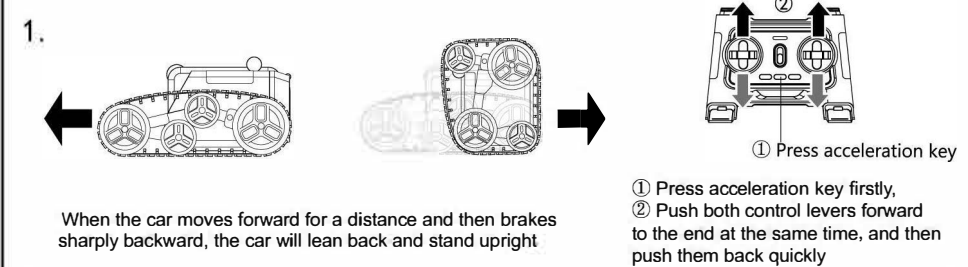


- Press acceleration key
- Press acceleration key firstly, Push both control levers forward to the end at the same time, and then push them back quickly

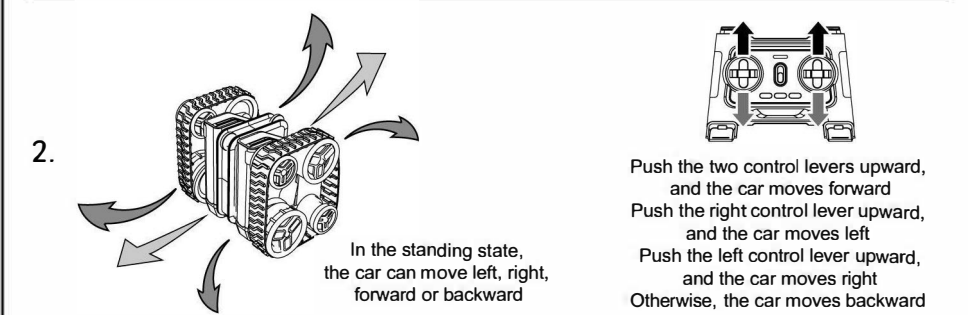


- Push the two control levers upward, and the car moves forward
Push the right control lever upward, and the car moves left
Push the left control lever upward, and the car moves right
Otherwise, the car moves backward

Trick Mode B

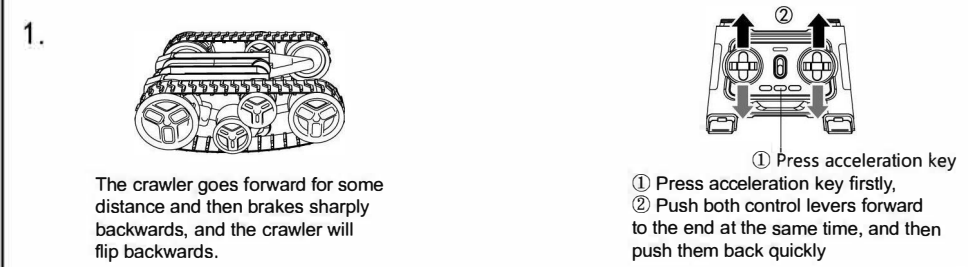

- Press acceleration key
- Press acceleration key firstly, Push both control levers forward to the end at the same time, and then push them back quickly

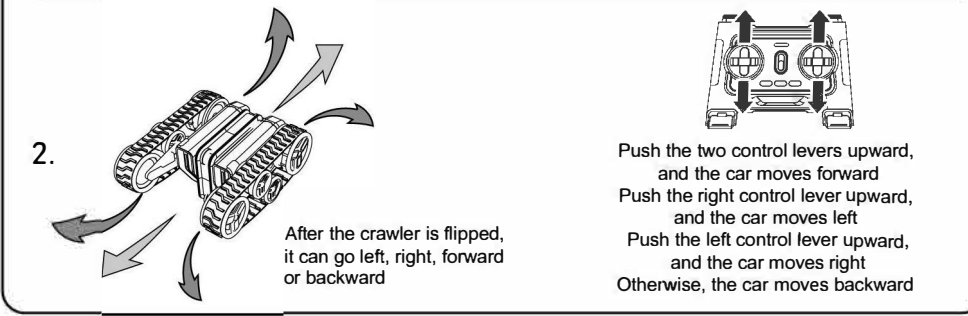

- Push the two control levers upward, and the car moves forward
Push the right control lever upward, and the car moves left
Push the left control lever upward, and the car moves right
Otherwise, the car moves backward

Battery Precautions

- This product remote control car use one 3.7V rechargeable lithium battery; the remote controller uses two 1.5V "AAA" non-rechargeable batteries;
- The batteries should be removed and installed in accordance with the polarity and voltage markings on the toy battery box for proper operation, and the batteries should not be short-circuited;
- The non-rechargeable batteries shall not be charged; ;
- The rechargeable batteries must be charged under adult supervision;
- The rechargeable batteries should be removed from the toy before charging;
- Different types of batteries or old and new batteries should not be mixed in their use;
- Only batteries that are identical or equivalent to the recommended batteries may be used;
- Exhausted batteries should be removed from the toy, and if the toy is not used for a long time, please take the batteries out from the toy;
- The power terminals should not be short-circuited;
- Do not connect to power supplies of more than the recommended load.

General Trouble Shooting

Trouble	Cause for trouble	Solutions
The car is not moving.	1. The remote controller is not connected or the switch of the remote control car is not turned on; 2. The remote controller or remote control car is not properly loaded with batteries; 3. The rechargeable battery pack is with insufficient power.	1. Turn on the switch of the remote control car and reconnect the remote controller; 2. Install the batteries correctly into the remote controller or remote control car. 3. Charge the rechargeable batteries
The car is not controllable with the remote control distance very short range. Slow response and decreased sensitivity	1. The remote controller is with insufficient electricity in the battery or rechargeable battery pack; 2. There may be interference sources in the vicinity of the site.	1. Replace the batteries in the remote controller with new ones, or charge the rechargeable battery pack. 2. Change to another place.

The USB cable of the Toy, in the process of use, should be regularly checked for damage to its wire, plug, shell and other components, and if damage is found, stop using it until it is repaired.

Maintenance Precautions

- Do not stay close to the source of fire, and avoid direct sunlight, high temperature and humidity, or avoid placing it in a car for long, so as to avoid a short circuit in the line or fire.
- Take the batteries out of the remote control car and remote controller when not playing, and put the remote controller and remote control car back into the color box to avoid breakage or deformation when transported or stored.
- For cleaning purpose, the remote control car must be wiped gently with a damp cloth.