 




4WD STUNT VEHICLE  
INSTRUCTIONS

REMOTE-CONTROL VEHICLE

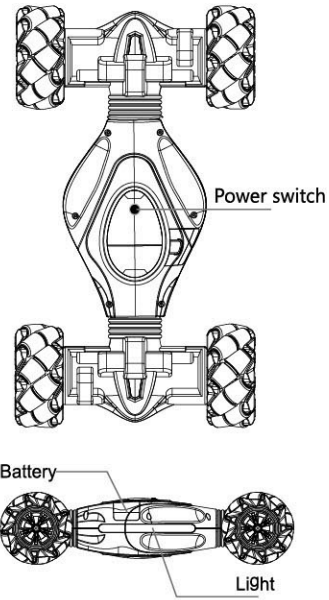


REMOTE CONTROL VEHICLE  
BATTERY INSTALLATION AND  
BATTERY CHARGING

  Connect 5V USB device to charge

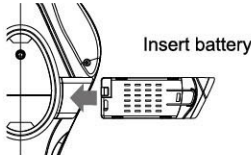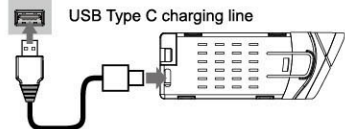


- 1.In order to protect the performance of the battery pack, do not give the battery pack immediately after use Charge, leave the battery pack for a few minutes before charging.
- 2.When charging, Connect the power, red light Changliang , the During charging green indicator light flicker, and the full green indicator light Changliang , The charging time is about 1.5 hours.
- 3.It is normal for the battery pack to overheat slightly during charging.

 REMOT E CONTROL

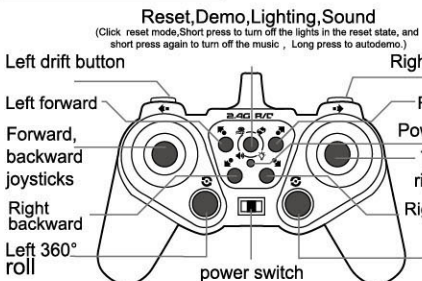


REMOTE CONTROL BATTERY INSTALLATION

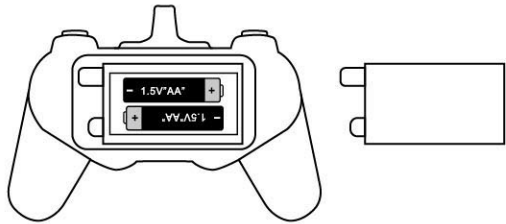 

Uses 2x1.5V"AAA" non rechargeable batteries  
Please install the battery correctly according to the polarity indication.(Battery not included)

GRAVITY SENSOR WATCH

 Click reset mode,short press to turn off the lights in the reset state, and short press again to turn off the music , Long press to autodem o.

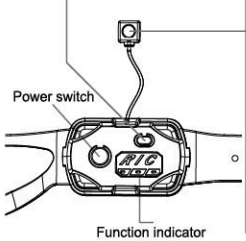

The battery char ed in the toy must be checked regularly to prevent damage to wires and other parts. If damaged, it must be repaired after damage it can only be used after recovery.

1. One light illuminating after switching on is transverse drift mode;
2. Press quickly the finger button 1 again to illuminate two lights and start the 360 ° rotation mode;
3. Press quickly the finger button 1 again to illuminate three lights and start the 360-degree roll mode;

BATTERY ATTENTION






- 1.This product is used for remote control vehicle, with a 7.4V rechargeable lithium battery;The remote controller uses two 1.5V AA not rechargeable batteries;
- 2.The battery should be removed and loaded according to the polarity and voltage marks on the toy battery box, and the battery should not be short circuited;
- 3.Non rechargeable batteries cannot be charged.
- 4.The rechargeable battery must be charged underthe supervision of adults;
- 5.The rechargeable battery should be taken out of toys before charging;
- 6.Different types of batteries or old and new batteries should not be mixed;
- 7.Only the same or equivalent battery as the recommended battery can be used;
- 8.The exhausted battery should be taken out from the toy. If it is not used for a long time please take out the battery from the toy
- 9.The power supply terminal shall not be short circuited.
- 10.Do not connect to more than the recommended number of power supplies.

REMOTE CONTROL OPERATION

Turn on the remote control switch,then turn on the power supply of the remote control car,wait for the code matching to be completed,and then use the remote control to control the remote control car.

CONTROL INSTRUCTIONS OF REMOTE-CONTROL VEHICLE

Direction	Remote control vehicle	Remote Controller	Gravity sensor watch
Move forward			
Move backward			
Turn left			
Turn right			

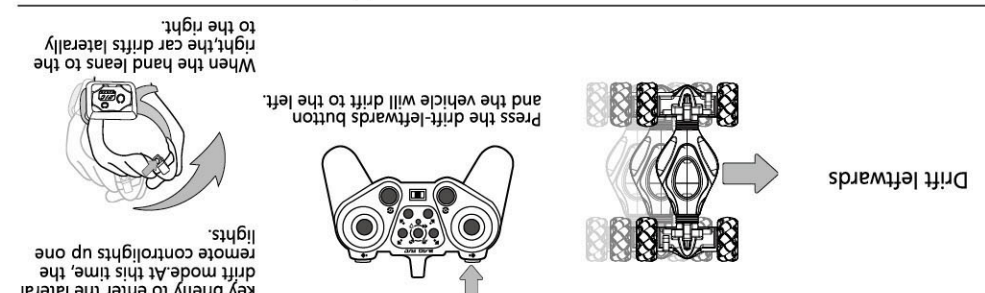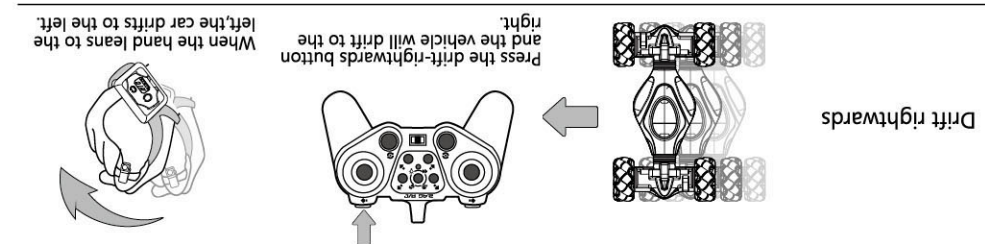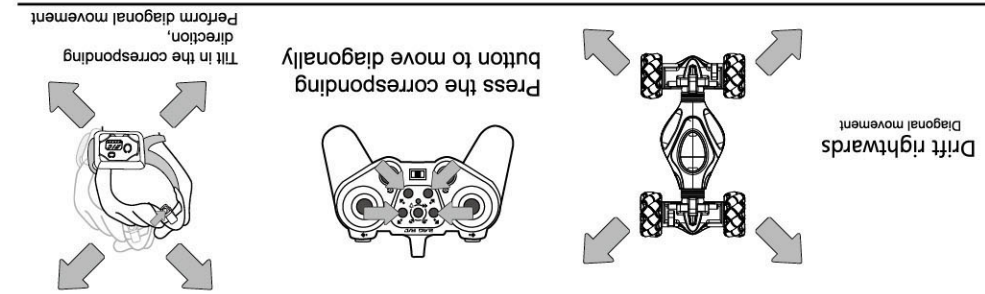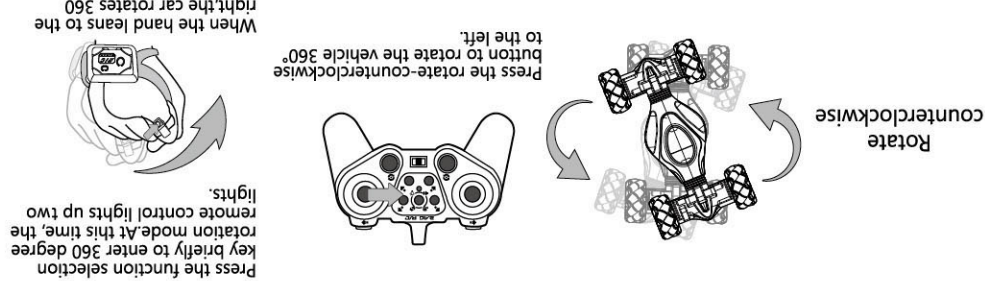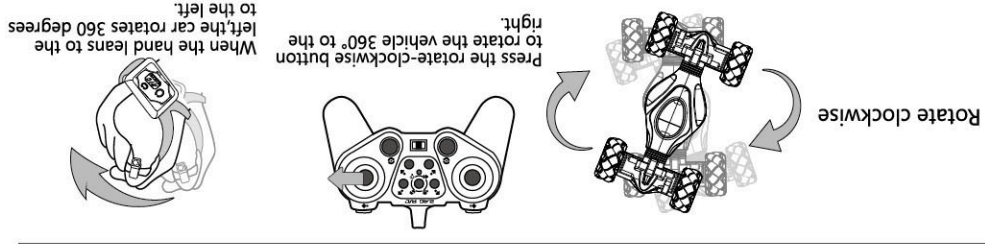     

Control	Remote control vehicle	Remote Controller	Gravity sensor watch
---------	------------------------	-------------------	----------------------

FCC ID: 2AYRQ-WT2024MAX

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user’ s authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

- 1.Keep away from the fire source,avoid direct sunlight,high temperature and humidity,or keep it in the car for a long time to avoid short circuit and fire.
- 2.When not playing,take out the batteries of the remote control car and remote control put the remote control and remote control car back into the colch box,which can avoid damage or deformation during transportation or storage.
- 3.The remote control car must be gently wiped with a wet cloth.

MAINTENANCE

In the process of using USB cable of toys, the wires,plug shell and other parts should be checked regularly to see if they are damaged When damaged, it should be stopp ed using until it is repaired.

Distance	Vehicle out of control	The vehicle cannot be driven	Fault condition
Short remote control	1. The battery or rechargeable battery pack in the remote control is short of power.	1. The battery or rechargeable battery pack is insufficient.	1. The remote control is not connected or the switch is not turned on.
2. There may be interference sources near the site.	2. The power of the rechargeable battery pack is insufficient.	2. The battery of the remote controller or remote control vehicle is not correctly installed.	2. The battery of the remote control vehicle is not turned on.
3. Change the site.	3. Change the rechargeable battery.	3. The power of the rechargeable battery pack is insufficient.	3. The power of the rechargeable battery pack is insufficient.
1. Replace the battery in the remote control with a new one, or change the battery pack.	1. Turn on the remote control vehicle switch and re connect the remote control.	1. Turn on the remote control vehicle switch and re connect the remote control.	1. Turn on the remote control vehicle switch and re connect the remote control.
			solve method

General troubleshooting

