

E49710 – Gill Electronic Starter Device; 1.0 Customer Instructions

Gill Electronic Starter Device

Features:

- · 6 bright white LED's on both sides of unit for the flash to be seen from all angles
- · Trigger Guard
- Tone and Gun Sound Selection
- Timing System and Audio Jacks



Included:

- Gill Starter Device
- Phillips Head Screwdriver
- Audio Cable
- Timing System Cable
- 9V Battery
- Protective Soft Carrying Case

⚠ WARNING: Cancer and Reproductive Harm – For more information go to www.p65warnings.ca.gov

Copyright © 2021 by Litania Sports Group, Inc. All rights reserved.


01/07/2021 Customer Instructions




E49710 – Gill Electronic Starter Device; 1.0 Customer Instructions


ON and OFF Switch

Sound Selection Switch

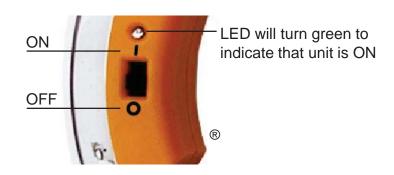

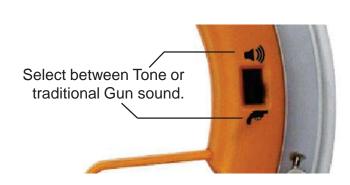

Audio and Timing Jack

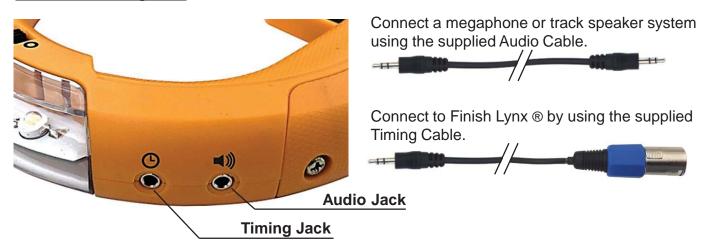

Battery Cover





E49710 – Gill Electronic Starter Device; 1.0 Customer Instructions

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment has been tested and meets applicable limits for radio frequency (RF) exposure. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.