 




# Instruction Manual

Wireless Charging Alarm Clock

Model: DS2203

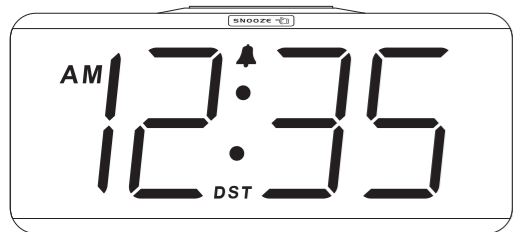 


Thank you for purchasing DreamSky Wireless Charging Alarm Clock. To ensure the best product performance, please read this user manual in detail and retain it for future reference.

Questions? Contact Customer Service Center at

✉ info@dreamsky4u.com

## Overview

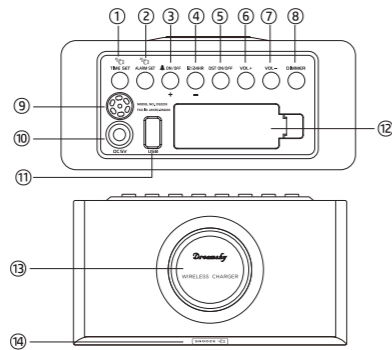


1. **TIEM SET**: hold to enter time setting mode
2. **ALARM SET**: hold to enter alarm setting mode; press to check the alarm time
3. **+ / ▲ ON/OFF**: to adjust the time/alarm time value in setting mode; to turn the alarm on or off
4. **- / 12/24HR**: to adjust the time/alarm time value in setting mode; to switch between 12HR and 24HR
5. **DST ON/OFF**: to turn the DST on or off
6. **VOL+**: to turn up the alarm volume
7. **VOL-**: to turn down the alarm volume
8. **DIMMER**: to adjust the display brightness
9. Buzzer
10. DC 5V INPUT
11. USB Port
12. Battery Compartment
13. Wireless Charging Pad
14. Snooze

## Package Content

 - 1 x Wireless Charging Alarm Clock
- 1 x Power Adapter ( US Standard, 100V-240V Main Supply Applicable)
- 1 x User Manual

## Getting Started

1. (Optional) Insert 2 X AAA alkaline batteries (not included) into the battery compartment. Follow the polarity (+/-) diagram in the battery compartment.

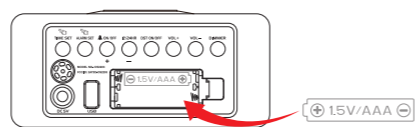

2. Power source plugged in




**Note:** this clock is AC adapter powered, batteries only save the clock setting and trigger the alarm during main power cut, time will not display with battery power only.

## Wireless Charging

 Please firstly make sure your cell phone is wireless chargeable, then put cell phone on top of the circle wireless charging part, phone face upward. The charging icon ⚡ will light up to indicate the charging status.

- **The icon ⚡ shows up and stay lit:** cell phone is charging normally
- **The icon ⚡ blinks or doesn't show up:** cell phone is not charging, place the cell phone on the correct charging area and phone face upward.

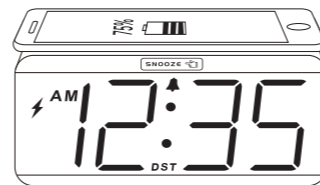

### Note:

1. Remove phone case thicker than 5mm while charging.
2. Magnetic, electronic device (such as remote controller, lamp etc.) or cellphone without wireless charging function placed on the charging pad will make the icon ⚡ flash.
3. It usually takes 4-6 hours to get the cellphone fully charged, please check your cell phone if it is fully charged.

## Time Setting

 
1. Press and hold the TIME SET button for 2s, Hour digits flash on the display, release the button, then press the + or - button to adjust the hour (hold to fast adjust).



2. Press the TIME SET button once, Minute digits flash, press the + or - button to adjust the minute (hold to fast adjust).




3. Press the TIME SET button again to save and exit the setting.



**Note:** it will automatically exit TIME SET MODE and save current setting if no button is pressed within 15s.

 **Time Format:** in time keeping mode, press 12/24HR button once to switch time format between standard time and military time.

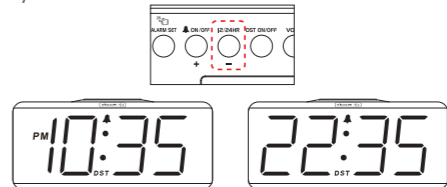

## Manual DST

In summer time, press the DST ON/OFF button to turn on DST function, the DST will display on the screen, time will go one hour forward.

In winter time, press the DST ON/OFF button to turn off DST function, the DST will disappear, time goes one hour backward.

 


## Alarm Setting


1. Press and hold the ALARM SET button for 2s, Hour digits flash on the display, release the button, then press the + or - button to adjust the hour (hold to fast adjust).



2. Press the ALARM SET button once, Minute digits flash, press the + or - button to adjust the minute (hold to fast adjust).

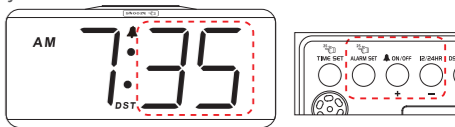

 3. Press the ALARM SET button again to save and exit the setting.




**Note:** it will automatically exit ALARM SET MODE and save current setting if no button is pressed within 15s.

**To View the Alarm Time:** in timekeeping mode, press the ALARM SET button once to check the alarm time you set.


### Adjust the Alarm Volume

 In timekeeping mode, press the VOL+ or VOL- button to adjust the alarm volume. (5 levels of volume: V01→V02→V03→V04→V05)



### Turn OFF the Alarm for One Day

 When the alarm goes off, you can press any button at the back to turn it off for that day, the alarm will go off again at the set time the next day. If no button is pressed, the alarm will last for 2 minutes then shut off automatically.





**Note:** if you accidentally touch the SNOOZE button on the top and enter snooze mode, you can still press any button at the back to exit the snooze mode and shut it off for the day.

### Snooze Mode

  When alarm goes off, touch the SNOOZE button on the top of the clock to enter snooze mode, the bell icon will blink on the screen and it will go off again 9 minutes later.

### To Disable the Alarm

In timekeeping mode, press the ON/OFF button to totally turn off the alarm, the bell icon will disappear from the screen, meaning no alarm.




### About Battery Backup

1. Batteries can be used to preserve the clock settings in the event of power failure so you don't need to reset the clock when the main power is back.
2. If powered by batteries only, the clock display won't light up, but the alarm will still go off at the set time.
3. Low battery power will weaken the alarm sound accordingly.

### Adjust the Brightness

 
Press the DIMMER button to adjust the display brightness (5 levels of brightness: OFF→L01→L02→L03→L04→L05).

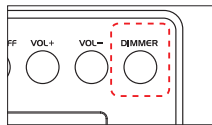

**Note:** press the DIMMER button to light up the display for 3 seconds while set to off.


### USB Port

 There is a USB port at the back of the clock to help you charge your cellphone or other electronic gadgets.



### Care & Maintenance

Clean with a soft, damp cloth.  
Do not use caustic cleaners or abrasives.  
Keep clock away from dust, dirt, and moisture.  
Please remove the batteries when you don't use the clock

 PLEASE DISPOSE OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY AND IN ACCORDANCE WITH YOUR LOCAL LAWS AND REGULATIONS.

**BATTERY SAFETY:** Clean the battery contacts and those of the device prior to battery installation. Remove batteries from equipment no longer used for an extended period. Follow the polarity (+/-) diagram in the battery compartment.

Promptly remove empty batteries from the device. Dispose used batteries properly. Only batteries of the same or equivalent type as recommended are to use. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm(8 inches)during normal operation.

### Troubleshooting

#### 1. Alarm doesn't go off at the set time?

- check if the alarm is set to AM or PM time;
- check if the alarm is turn on (bell icon display on the screen)

#### 2. Display doesn't light up?

- check if the power connection is loosed or not;
- change another working outlet to try again;
- press the DIMMER button to turn the display to higher light in case the display is too dark to see.

### Customer Support

DreamSky customer support is committed to providing you with best-in-class service. For assistance, please keep the model number and order ID number of this product, then contact us by sending email:

✉ [info@dreamsky4u.com](mailto:info@dreamsky4u.com)

### Our Warranty

90-day money back guarantee  
366-day free replacement