

INSTRUCTION
MANUAL

平面印刷品基本技术要求

深圳市云视机器人有限公司

设计:	日期:2024.07.23	物料名称	L7英文说明书
尺寸:140*105mm	材质:100g双铜纸	产品型号	OKP L7
页数:20p	印刷颜色:四色印刷	物料编号	
比例:1:1	装订方式:骑马钉装	版次	V01 (07.23)
变更记录:			

OKP

User manual

OKP L7 Robotic Vacuum Cleaner



Scan the QR code for the English version of the online user manual.

Scannen Sie den QR-Code, um das Online-Handbuch auf Deutsch zu erhalten.

Scannez le QR code pour obtenir le manuel en ligne en français.

Scansiona il codice QR per ottenere il manuale online in italiano.

Escanee el código QR para obtener el manual en línea en español.



コードをスキャンして、日本語のオンラインマニュアルを取得します。

Please read this instruction manual carefully before using the product and keep it in a safe place.

Thank you for choosing OKP

This manual will guide you through a comprehensive understanding and quick installation of the robotic vacuum cleaner (referred to as "robot" hereafter), providing detailed important information regarding usage and maintenance to help you achieve the best product experience.

If you encounter any issues during usage, please dial the service hotline. OKP technical support experts will be dedicated to assisting you with any inquiries.

-  www.okplife.com
-  NA: support-us@okprobot.com
EU: support-eu@okprobot.com
JP: support-jp@okprobot.com

You can scan the QR code or download the "OKP" app from the app store to connect to the robot and unlock more features.



Tips:

- * Follow the guidance in the OKP app to register, login, and pair the robot.
- * Please make sure that the mobile phone is connected to your Wi-Fi network before pairing the robot.

Products are subject to physical appearance and specific details may differ from those shown.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire or serious injury.

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

For Household use only

When using an electrical appliance, basic precautions should always be followed, including the following:

1. The robot must be used in accordance with the directions in this user manual. Our company cannot be held liable or responsible for any damages or injuries caused by improper use.
2. Do not allow to be used as a toy. Close attention is necessary when used by or near children.x
Do not allow children to sit on the vacuum.
3. Clear the area to be cleaned. Remove power cords and small objects from the floor that could entangle the Robot. Tuck rug fringe under the rug base, and lift items such as curtains and table cloths off the floor.
4. If there is a drop off in the cleaning area due to a step or stairs, you should operate the robot to ensure that it can detect the step necessary to place a physical barrier at the edge to keep the unit from falling. Make sure the physical barrier is not a trip hazard.
5. Only use as described in this manual. Only use attachments recommended or sold by the manufacturer.
6. Please make sure your power supply voltage matches the power voltage marked on the docking station.
7. Do not handle or plug appliance with wet hands.
8. Non-rechargeable batteries are prohibited.
9. Do not use without dust bin and/or filters in place.
10. Do not operate the robot in an area where there are lit candles or fragile objects on the floor to be cleaned.
11. Do not use and store in extremely hot or cold environments (below -5°C /23°F or above 40°C/104°F). Please charge the robot in temperature above 0°C/32°F and below 40°C/104°F. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
12. Keep hair, loose clothing, fingers, and all parts of body away from any openings and moving parts.
13. Do not operate the robot in a room where an infant or child is sleeping.
14. For INDOOR use ONLY. Do not use the robot in outdoor, commercial or industrial environments. Do not use robot on wet surfaces or surfaces with standing water.
15. Do not allow the robot to pick up large objects like

stones, large pieces of paper or any item that may clog the robot.

16. Do not use the robot to pick up flammable or combustible materials such as gasoline, printer or copier toner, or use in areas where they may be present.

17. Do not use the robot to pick up anything that is burning or smoking, such as cigarettes, matches, hot ashes, or anything that could cause a fire.

18. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

19. Take care not to damage the power cord. Do not pull on or carry the robot or the docking station by the power cord, use the power cord as a handle, close a door on the power cord, or pull power cord around sharp edges or corners. Do not run the robot over the power cord. Keep power cord away from hot surfaces. Do not unplug by pulling on cord, To unplug, grasp the plug, not the cord.

20. If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.

21. Do not use the docking station if it is damaged.

22. Do not use the robot or the docking station if it is not working properly, has been dropped, damaged, left outdoors, or come in contact with water. It must be repaired by the manufacturer or its service agent in order to avoid a hazard.

23. Turn off the power switch before cleaning or maintaining the robot. Turn off all controls

24. The plug must be removed from the receptacle before cleaning or maintaining the docking station.

25. Remove the robot from the docking station, and turn off the power switch to the robot before removing the battery for disposal of the robot.

26. The battery must be removed and discarded according to local laws and regulations before disposal of the robot.

27. Please dispose of used batteries according to local laws and regulations.

28. Do not incinerate the robot even if it is severely damaged. The batteries can explode in a fire.

29. When not using the docking station for a long period of time, please unplug it.

30. Prevent unintentional starting. Ensure the switch is in the off position before connecting to battery pack, picking up or carrying the robot. Carrying the robot with your finger on the switch or energizing the robot that have the switch on invites accidents.

31. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, ect, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

32. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause

irritation or burns.

33. Do not use a battery pack that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

34. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C/265°F may cause explosion.

35. Have servicing performed by a qualified repair person using only identical replacement parts.

36. Do not modify or attempt to repair the robot or the battery pack (as applicable) except as indicated in the instructions.

37. Do not operate the robot in a room that has lit candles on furniture that the vacuum may accidentally hit or bump into.

38. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

39. Use the robot only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

40. The robot contains batteries that are only replaceable by skilled persons. To replace the robot's battery, please contact Customer Service.

41. If the robot is not going to be used for a long time, fully charge the robot, power it off, and unplug the





docking station.

42. Please remove any fragile and miscellaneous items from the floor (such as vases, plastic bags, etc.) to prevent the robot from being obstructed or causing damage to valuable items in the home due to minor collisions.

SAVE THESE INSTRUCTIONS

To satisfy RF exposure requirements, a separation distance of 20 cm or more should be maintained between this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.

	For indoor use only
	Direct current
	Alternating current
	detachable supply unit

Correct Disposal of this Product

This marking indicates that this product should not be disposed of with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To recycle your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can safely recycle this product.



Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AZ2R-L

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user 5s authority to operate this equipment.

RF exposure warning

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

IC Caution:

- English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF exposure statement:

The equipment complies with IC Radiation exposure limit set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

- French:

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:

(1) Cet appareil ne doit pas causer d'interférences.

 
(2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Tout changement ou modification non expressément approuvé par la partie responsable de la conformité pourrait annuler l'autorité de l'utilisateur à utiliser l'équipement.

Déclaration d'exposition RF:

L'équipement est conforme à la limite d'exposition aux radiations de la IC établie pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20cm entre le radiateur et votre corps.

A Product introduction

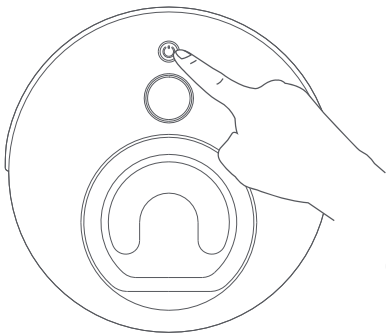

⏻ How to use buttons

Hold for 3 seconds: **Turn on**

Fast press: **Start/Pause (planned cleaning)**

Fast press twice: **Auto-recharge**

Hold for 6 seconds: **Enter network pairing mode**

(Networking operation: Press and hold for 6 seconds and release when you hear two beeps, the light will blink and the robot will enter the networking mode, please open the App for networking and pairing).

Hold for 12 seconds: **Turn off**

⏻ Indicator Meaning

 
Purple breathing light: **Charging** (battery level < 50%)

Blue breathing light: **Charging** ((battery level > 50%)


Blue flashes light: **Enters the network state**

Red light on: **low battery auto recharge**


A1 Robot (Top View)

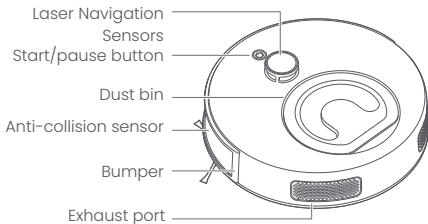


A2 Robot (Bottom View)

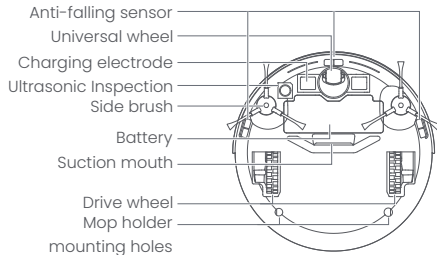 

A3 Docking Station

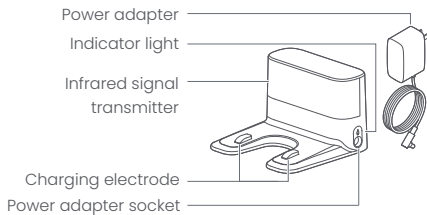 


A4 Dust bin

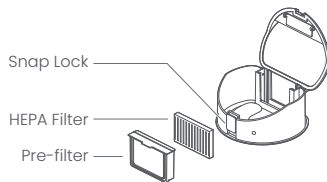 


B Product Installation

 BI Special Note

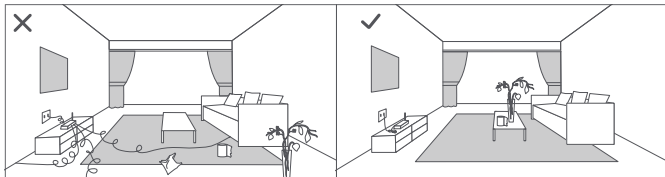

 1. Before starting, please clear the floor of scattered wires, hard objects, sharp items (such as nails, glass), and other debris. Also, remove items that are easily toppled, fragile, valuable, or could potentially cause danger. Avoid situations where the robot may become entangled, stuck, dragged, or cause harm to individuals or property.

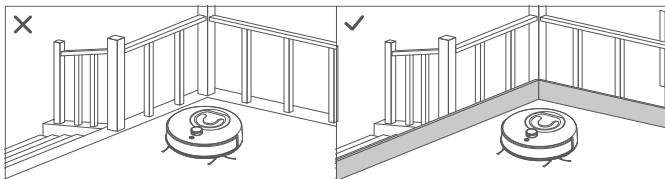


2. If using this product in an environment with drop-offs, it is essential to employ sturdy physical barriers to prevent the robot from accidentally falling and causing harm to individuals or property.

Tips:


1. During the initial cleaning process, it is advisable to accompany the robot throughout the entire session to assist with addressing any minor issues that may arise. Once resolved, the robot will be able to proceed with autonomous cleaning smoothly in subsequent sessions.
2. If there are areas that do not require cleaning or where the robot may get stuck, you can set up virtual barriers using the mobile app to prevent the robot from entering those zones.
3. Avoid letting the robot vacuum up hard or sharp objects (such as construction debris, glass, nails, etc.), as this may cause damage to both the robot and the floor surface.

B2 Assemble

 1. Remove the protective film on the robot and docking station



 
2. Install the side brushes

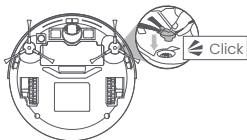

4. Charging


Place the robot with its button side facing the docking station. When the button light starts to blink, it indicates correct placement. (As shown below)
Charging time is approximately 4-6 hours.

 - 1 When the robot is charging under powered off status, it will automatically turn on during the charging process.

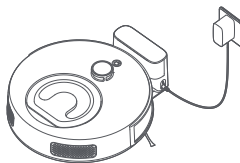

3. Placement of the docking station / connection of power supply

 Place the docking station against the wall on a flat surface. Ensure there are no items within 0.5m to the left or right and 1.5m in front to avoid blocking the charging signal. Avoid having reflective objects, such as floor mirrors, near the docking station to prevent signal reflection.

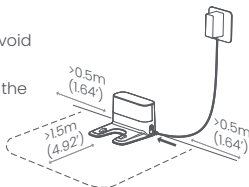


C Maintenance

CI Dust bin

▲ The HEPA Filter should not touch the water.



 
1. Take out the dust bin




2. Open the dust bin latch and dump the garbage



 3. Remove the filter assembly




 4. Remove the HEPA-filter



5. Clean the pre-filter and the HEPA-filter

 Note: Do not use water to clean the HEPA Filter, just pat it gently to remove the dust.

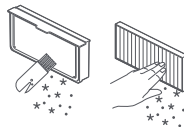

C2 Anti-collision sensors

Clean the anti-collision sensors to ensure sensitive obstacle avoidance.



C3 Side brush

Clean the side brush to prevent hair tangling.



C4 Docking station

 
- ① Clean the charging pins on the docking station to ensure smooth charging.
- ② Clean the infrared sensor lens on the docking station to prevent signal interference.



C5 Robot Accessories

Use a soft, dry cloth to wipe and clean various sensors and components of the robot, including:

1. The three anti-drop sensors on the bottom of the robot.
2. The ultrasonic sensors on the bottom of the robot.
3. The omnidirectional wheel on the bottom of the robot.
4. The two charging contacts on the bottom of the robot.
5. The suction port on the bottom of the robot.
6. The two drive wheels on the bottom of the robot.

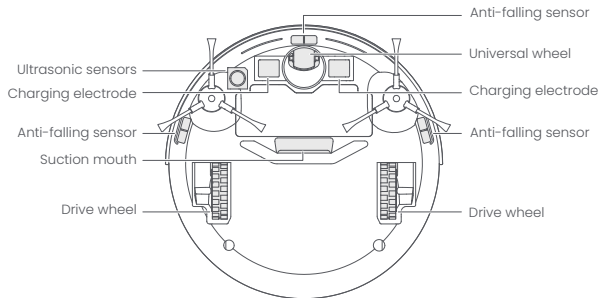

Technical parameters

Robotic Vacuum Cleaner	
Product model	L7
Battery	12.8V/4000mAh li-ion battery
Wireless Connections	WiFi Smart Fast Connect
Robot operating voltage	12.8V ---
Robot rated power	35W
charging time	< 5 hours

 
Environmental Protection Instructions

Battery Removal Steps

* The following information is applicable only when disposing of this robot and is not part of regular operating instructions.

The chemicals contained in the lithium-ion battery built into this product may pollute the environment. Before disposal, remove the battery and dispose of it at a designated battery recycling facility.

1. Allow the robot to run until it completely discharges and shuts down automatically without being connected to the charging dock.
2. Ensure the robot is powered off.
3. Remove the screws securing the battery cover on the bottom shell of the robot.
4. Open the battery cover.
5. After removing the battery, unplug the connector plug from the battery.

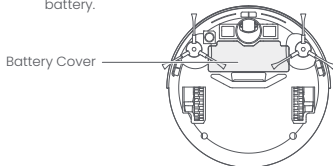


Tip:

- When disassembling the battery, ensure it is fully discharged and operate without being connected to the charging dock.
- Please remove the entire battery pack together. Do not damage the battery pack casing to prevent short circuits or leakage of hazardous substances.
- If the battery leaks and comes into contact accidentally, rinse with plenty of water and seek medical attention promptly.

Troubleshooting

If the following problems occur in the application process of the product, users can resolve them independently by comparison and inquiry.

Fault	Possible causes	Solutions
Abnormal cleaning	Cleaning components blockage	It is recommended to replace consumables regularly, such as high-efficiency filters (HEPA), pre-filter, side brushes, etc.
	Dust on sensors and other components	Please refer to the chapter [Maintenance] of the manual to clean the robot.
Unable to connect to App	Not entered Wi-Fi pairing mode	Keep pressing  button for 6 seconds: Entering Wi-Fi pairing mode, please refer to the App Networking Guide for details.
	2.4G Hz network isn't used.	You need to switch to 2.4G Hz network, please refer to the App Networking Guide for details.
Difficult to return and charge	Incorrect placement of docking station	Please place the docking station in an open and flat area.
	The docking station is powered off or moved manually	Please check whether the docking station is connected to the power supply. Do not move the position of the docking station when the robot is working.
	The home is too large, and the environment is complex	Please refer to the chapter [B1 Special Note] of the manual.
	The robot didn't clean from the docking station	Let the robot clean from the docking station.
Unable to charge	The power supply is not connected, or the plug is loose	Check if both ends of the power cord are connected and if the docking station indicator light is on.
	Poor contact between the robot and the charging electrode of the docking station	Ensure that the charging electrode of the robot and the docking station are fully connected, and clean the charging electrode of the robot and the docking station regularly.
	Battery deterioration caused by non-long-term use	It's recommended to use this product regularly. If not used for an extended period, charge fully, turn off the robot, and ensure it's charged once a month. If the battery can't be charged, please contact after-sales service.

* If the issue cannot be eliminated according to the operation in the table, contact our customer service representative.

Warranty

This warranty covers the repair or replacement of the malfunction device at our company's discretion for a period of 1-year. In addition this certificate is void if altered. The serial number must be provided as well as all accessories to be eligible for warranty coverage. Please kindly fill in below form accurately and completely.

Order Number: _____

Serial Number: _____

Date of Purchase: _____

Important:

When returning this device, carefully pack the product to avoid damage in shipping. Damage in shipping is not covered by the Warranty and shall be the sole responsibility of Buyer. Damage or loss not covered by this Warranty or occurring outside the warranty period will require a fee to cover the cost of handling and shipping. All such fees and costs shall be the sole responsibility of Buyer.

Exclusion

Unless agreed in writing, the warranty will not apply if the defects relate to:

- Consumable parts such as filters, or brushes etc, that are subject to normal wear and tear, and require regular maintenance and/or replacement to ensure the proper functioning of your unit.
- Defects caused by rough or inappropriate handling or use or damage caused by accident, misuse, neglect, fire, water, lighting or other acts of nature, external sources such as weather, electrical outages or power surges.
- Improper operation or maintenance, use not in accordance with the product instructions or connection to improper voltage supply.
- Accident, abuse, misapplication, or any unauthorized repair, modification, or disassembly of the product.
- Any failure to adequately package the product for transportation.
- Use of parts not in accordance with the product instructions.
- Use of parts and accessories other than those produced or recommended by our company.
- Use in a commercial environment as the product is designed for residential use only.
- Consequential and incidental damages.
- Any product(s) purchased from unauthorized dealers/resellers.
- Products used outside the country of purchase.
- Lost and/or stolen products.

OKP

 Website: www.okplife.com

 Email: NA: support-us@okprobot.com

EU: support-eu@okprobot.com

JP: support-jp@okprobot.com

 Facebook: [@okplifeofficial](https://www.facebook.com/okplifeofficial)

OKP Technologies Corp

Building 2, Fashion Brand Industrial Park, E'Bu Town,
Shenzhen-Shanwei Special Cooperation Zone, Shenzhen, Guangdong, China.