

P2

P3



P5



### Playing SD

1. Make sure the units are plugged in and power "ON" status.
2. Plug your SD drive into SD jack of the subwoofer.
3. Press the "INPUT" button by remote or in the subwoofer, switch mode into "SD" which is showing in the LED display of the subwoofer.  
Now you can enjoy the music.

P13

P14

P15

P16

说明：尺寸：140x215mm  
材质：128G铜版纸 四色双面印刷 8张装订本