




Check to make sure you have everything below

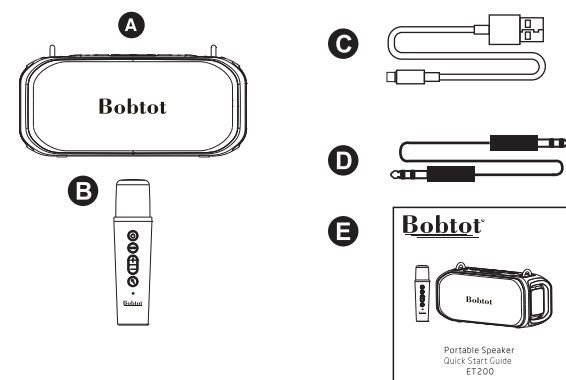

The diagram illustrates the front and back views of the device with numbered callouts:

- 01:** Left speaker grille.
- 02:** Microphone.
- 03:** Power button.
- 04:** Volume down button.
- 05:** M (Music) button.
- 06:** Play/Pause button.
- 07:** Volume up button.
- 08:** Right speaker grille.
- 09:** AUX port.
- 10:** DC 5V port.
- 11:** USB port.

Low battery

Charging

Fully charged

Charging Port (USB Type-C) DC 5V

1-----Power ON/OFF

2-----ECHO +


3-----Volume +

4-----Volume -

5-----Short press : Mon
Voice/Female Voice

6-----Indicator Light

7-----DC 5V Type-C Charge

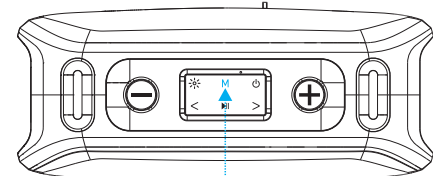

Short Press

AUX / USB / BT
Plug AUX or USB flash drive into the speaker, it will automatically play. When using one of the connection ways, please make sure the other source is disconnected.

A hand icon points to a 'x1' label. Below it, a circular arrow connects three ports: 'BT' (blue dot), 'AUX' (red dot), and 'USB' (purple dot).

Here at Bobtot, we take customer care very seriously. Our customers are our first priority, and we are committed to providing the highest quality service.

If you have any questions or concerns, please don't hesitate to reach out to us.

We will be happy to assist you:

Call or Message: +1 888 572 1718

Email: service@bobtot.net

bobtot.net

©2024 BOBTOT // Features and specifications are subject to change and or improvement without notice.

4. 四色双面印刷