
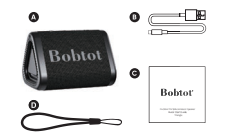


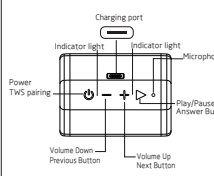


<p><b>Bobtot®</b></p> <p>Outdoor Portable Wireless Speaker Triangle</p>	<p><b>What's in the Box?</b> Check to make sure you have everything below.</p>  <p>A: 1*Triangle Portable Speaker B: 1*USB Charging Cable (Type-C) C: 1*Quick Start Guide D: 1*Handy Carry Strap</p>	<p><b>Device Overview</b></p> 	<p><b>Buttons and Ports</b></p> <ul style="list-style-type: none"> <li><b>Power/TWS</b> Long press to turn the speaker on/off Double click to TWS connect or disconnect with two speakers.</li> <li><b>Volume Down/Previous Button</b> Short Press to turn down the volume Long Press to go to previous song</li> <li><b>Volume Up/Next Button</b> Short Press to turn up the volume Long Press to go to next song</li> <li><b>Mode/Play/Pause</b> Short press to pause/play the music. Short press to accept an incoming call. Long press to reject an incoming call. Long press 2s disconnect with BT. Double click to call back.</li> </ul>	<p><b>Charging Your Device</b></p> <p>Plug the included USB type-C cable into the speaker's charging port, and connect the other end of the cable to a power adapter (not included). Allow approximately 2.5 hours to full charge the battery.</p> <p>The indicator light is red color when it's charging. The red light will be off when it's full charged.</p> <p>Note: We recommend using a USB wall adapter with a DC 5V=1A output.</p> 	<p><b>Initial Setup</b></p>  <ol style="list-style-type: none"> <li>Once your speaker is fully charged, press and hold the <b>Power</b> button until you hear a voice prompt indicating the device has entered BT pairing mode.</li> <li>On your smartphone or tablet, search for the BT device named "Triangle" and tap to connect.</li> <li>A prompt will play once pairing is successful.</li> </ol> <p><b>Note:</b></p> <ol style="list-style-type: none"> <li>When you turn on the speaker but no connection, it will automatically shut down after 10 minutes.</li> <li>When you connected the speaker but no playback, it will automatically shut down after 20 minutes.</li> </ol>	<p><b>TWS Sync Mode</b></p>  <ol style="list-style-type: none"> <li>Long press the <b>Power</b> about 2s on both speakers to turn them on, and the blue light flashes.</li> <li>Quickly double-click the <b>Power</b> on any one speaker, a prompt sound "connected" indicates the speakers enter into pairing mode, the indicator light of one speaker turned solid blue.</li> <li>On your smartphone or tablet, search for the BT device named "Triangle" and connect it, you could hear the sound "connected" again, which means connect successfully. You can enjoy the music with two speakers together.</li> </ol> <p><b>Notes:</b></p> <p>*In TWS Mode, turn off one of the speakers, both of them are off. *Double-click the <b>Power</b> button will be disconnected.</p>	<p><b>Bobtot®</b></p>
---	---	---	--	---	---	---	-----------------------

<p><b>Hands-Free Calling</b></p> <ul style="list-style-type: none"> <li><b>Volume Down</b> Short Press once to decrease volume</li> <li><b>Volume Up</b> Short Press once to increase volume</li> <li><b>Mode/Answer Button</b> Short press to accept an incoming call. Long press to reject an incoming call. Long press 2s disconnect with BT. Double click to call back.</li> </ul> <p><b>Resetting Your Device</b></p> <p>If your speaker is not operating properly, you may reset it. To do so, press and hold the <b>Power</b> button for approximately 8s until the speaker powers off, and then power it on again as usual.</p>	<p><b>Specifications</b></p> <ul style="list-style-type: none"> <li>-Model Name: Triangle</li> <li>-Outdoor Portable Wireless Speaker</li> <li>-Input Power: 5V = 1A</li> <li>-Impedance: 4Ω</li> <li>-Signal to Noise Ratio: &gt; 78dB</li> <li>-IPX7 water-resistant, sprayproof</li> <li>-Built-in rechargeable battery</li> <li>-Built-in Mic</li> <li>-Range: 33ft(10m)</li> <li>-Frequency Response: 180Hz-12KHz</li> <li>-TWS Sync Mode(Pair 2 of these speakers together)</li> <li>-Up to 10 hours of playtime (battery life is measured as number of playtime with volume set at 50%)</li> </ul>	<p><b>FCC Warning</b></p> <p>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection</p>	<p><b>FCC Warning</b></p> <p>against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>- Reorient or relocate the receiving antenna.</li> <li>- Increase the separation between the equipment and receiver.</li> </ul>	<p><b>FCC Warning</b></p> <ul style="list-style-type: none"> <li>- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>- Consult the dealer or an experienced radio/TV technician for help.</li> </ul> <p>This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.</p> <p>FCC ID: 2A243-ET2240A</p>	<p><b>Need help?</b></p> <p><b>Customer Care Guide</b> At our company, we strive to provide exceptional customer care to every one of our clients. We believe that building strong relationships with our customers is essential to the success of our business. To help us achieve this goal, we have put together the following customer care guide.</p> <p><b>Time</b> We understand that our customers' time is valuable, so we will respond to any inquiries within 24 hours.</p> <p><b>Feedback</b> We know that our customers are the heart of our business so we value your feedback. We encourage you to share your thoughts and ideas with us.</p> <p><b>Solutions</b> If our customers encounter any issues, we will try our best to find a quick and efficient solution that meets your needs.</p>	<p><b>Need help?</b></p> <p>Here at Bobtot, we take customer care very seriously. Our customers are our first priority, and we are committed to providing the highest quality service. If you have any questions or concerns, please don't hesitate to reach out to us. We will be happy to assist you. Call or Message: +1 888 572 1718 Email: service@bobtot.net</p> <p>bobtot.net</p> <p><small>©2023 BOBTOT. All Features and specifications are subject to change and/or improvement without notice.</small></p>	
---	---	---	---	--	--	---	--

**技术要求:**

1. 成品尺寸90\*90mm展开尺寸720\*90mm
2. 128g铜版纸
3. 风琴折，红色虚线为压线无需印刷出来。
4. 单黑色双面印刷