


# Bobtot®

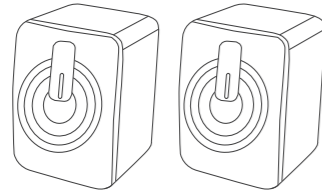


MINI2A BT Version  
Multimedia speaker

## USERS MANUAL

### SPECIFICATIONS

1. Impedance: 4 Ω
2. Distortion: ≤0.5%
3. Power supply: (DC 5V-1A)
4. Signal to noise ratio: ≥88dB
5. Frequency response: 45Hz~16KHz
6. Speaker specifications: 2 inches X2
7. Power Output: RMS 3W X 2 (THD=10%)
8. Connection options: BT & 3.5mm AUX-in
9. Power Input: USB direct plug (no built-in battery)
10. Adjustment form: wire-controlled volume adjustment

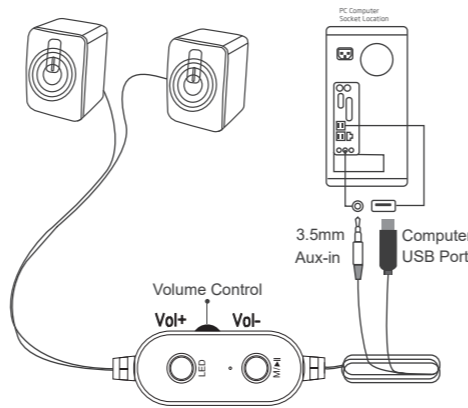

Please note that this is a volume control that you need to roll up or down to adjust the volume.

### Function Description About The Controller

1. **Adjust the volume**  
Use the Volume control to adjust the volume. Scroll "-" or "+" to adjust the volume.
2. **LED indicator display different mode (M/▶)**
  - a) AUX Mode: The Green LED light blinks when USB power supply is inserted.
  - b) BT mode: The blue LED light blinks quickly when it is pairing and will be steady when the connection is successful.
3. **Switch RGB light mode ( Turn off the light )**  
Short press the LED button to change the light mode or turn off the light.  
You can switch RGB fast blinking - RGB slow blinking - Red - Green - Blue - Lights off.
4. **Switch the mode between BT and wired ( M/▶)**
  - a. Long press the M/▶ button for 2 seconds to switch modes (AUX/BT).
  - b. Short press the M/▶ button play/pause (AUX/BT mode can play/pause).
  - c. Double press the M/▶ button to disconnect BT when BT connection is successful.
5. **Disconnect BT device and use a new device to connect**  
Double press the M/▶ button.  
When you hear "disconnect", search for a BT device with the name "MINI2", click Connect, you will hear a voice that says "Connected."

### Connecting to PC and MAC



1. Your PC will automatically detect the MINI 2 when you plug in the USB cable and 3.5mm AUX-in cable. RGB light will be working.
2. For wireless audio streaming, pair the MINI 2 to your device via BT, just long press the M/▶ button to BT mode, when you hear "dududu", please search for "MINI 2" and tap to connect, you will hear a sound prompt "connected".

Note: If you do not hear any audio playing from the speaker, please check the output device list from the "Sound" setting and set the "MINI 2" as the output speaker.

### Connecting to MP3/Mobile Phones/ other Audio Devices



You can also connect the speaker to your device via 3.5mm AUX-in cable or BT mode(double click to BT mode and search for "MINI2").

Note: The speaker has to be powered via USB while connected via AUX-in.

### Troubleshooting

#### About Sound

If there is no sound response after plugging it into the computer USB port, please make sure:

1. The USB interface of your computer can work normally or not?
2. The audio driver of your computer sound is up to date or not?
3. Click the "Speaker" icon in the taskbar, and make sure that "Headset(Realtek(R)Audio)" is selected as your computer playback device.

#### About BT Connection

1. Make sure the BT of the speaker is not connected by other devices.
2. Unplug the 3.5mm AUX-in cable from your device.
3. Delete "MINI2" memorized on your device, then search for "MINI2" and connect again.

### FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### Need help?

#### Customer Care Guide

At our company, we strive to provide exceptional customer care to every one of our clients. We believe that building strong relationships with our customers is essential to the success of our business. To help us achieve this goal, we have put together the following customer care guide.

#### Time

We understand that our customers' time is valuable, so we will respond to any inquiries within 24 hours.

#### Feedback

We know that our customers are the heart of our business so we value your feedback. We encourage you to share your thoughts and ideas with us.

### Solutions

If our customers encounter any issues, we will try our best to find a quick and efficient solution that meets your needs.

Here at Bobtot, we take customer care very seriously. Our customers are our first priority, and we are committed to providing the highest quality service. If you have any questions or concerns, please don't hesitate to reach out to us. We will be happy to assist you: Call or Message: +1 888 572 1718  
Email: service@bobtot.net

bobtot.net

2023 BOBTOT//Features and specifications are subject to change and or improvement without notice.

# Bobtot®

Company: MOSWS INTERNATIONAL LIMITED  
Add: FLAT/RM 07, BLK B, 5/F KING YIP FACTORY BUILDING,  
59 KING YIP STREET, KWUN TONG, KOWLOON HONGKONG  
999077 Production Standard: IEC/EN60065  
MADE IN CHINA



## 技术要求:

1. 成品尺寸65\*65mm
2. 128g铜版纸
3. 风琴折
4. 黑色单色印刷

## 深圳市恩科电子有限公司

## SHENZHEN CITY ENKOR ELECTRONICS LTD

设计绘图	测试员	品质经理	业务经理	产品经理	研发经理	客户品牌	内部型号	零件名称	材料	单位	版本	
										MM	1.2	
料号					部门		研发部	PMC	采购部	品管部	木箱部	生产部
BZ0-MINI2SMSB03							✓		✓	✓		✓