

MAGNEMA

CD/Radio/Cassette Boombox CB-600CR



USER'S MANUAL

One (1) Year Replacement for Defective Product.

Questions or Problems? Contact Us:

✉ support@magnema.co

🗨 Amazon Buyer-Seller Messaging

Contents

Contents	01
Welcome	02
Safety information	02
Your boombox	03
Overview of the boombox	04
Cassette Controls	07
Setting up your boombox	08
Disc (Audio CD and MP3/WMA CD) Notes	09
Using your CD Player	10
Troubleshooting	18
Maintaining your boombox	20
Specifications	21
Legal notices	21
12 Months Warranty	22

Welcome

Congratulations on your purchase of a high-quality MAGNEMA product. Your MAGNEMA CB-600CR is designed for reliable and trouble free performance, we wish you great satisfaction in using it.

Safety information

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.



- INVISIBLE LASER RADIATION WHEN OPEN
- DONOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS

Lens

Keep the lens on the boombox clean and do not touch it. If you do so, the lens may be damaged and the boombox will not operate properly.

Discs

Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this boombox. Attempting to do so may damage the boombox. Do not use such discs.

Placement

Do not leave the boombox in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unlevelled surface, or in a car with its windows closed.

Water

Do not let water splash or drip onto your boombox.

Power sources

When you are not using the boombox for a long time, disconnect all power sources from the boombox.

Your boombox

Features

- Features CD player, cassette player, AM/FM radio, Bluetooth wireless, USB player, and 3.5 mm auxiliary input for the ultimate playback flexibility
- Blue backlit display for input and status
- Built-in stereo speakers , along with a headphone jack for private listening
- 30 preset stations for FM radio and 20 preset stations for AM radio
- CD player plays CD/CD-R/CD-RW media
- Can be powered by AC or 6 UM-2 ("C") batteries (not included)
- Compact form factor allows for easy transportation and fits in tight spaces
- Battery playtime:
 - CD player: up to 5 hours
 - Cassette player: up to 5 hours
 - FM radio/USB player/Aux input: up to 10 hours

 
NOTES: Playtime varies with volume, and music contents, etc.

What's in the box


Check and identify the contents of your package:



boombox

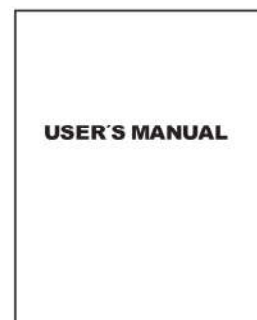


User's Manual

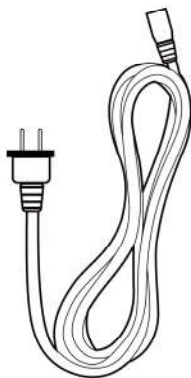 



AC Cord

    
Overview of the boombox

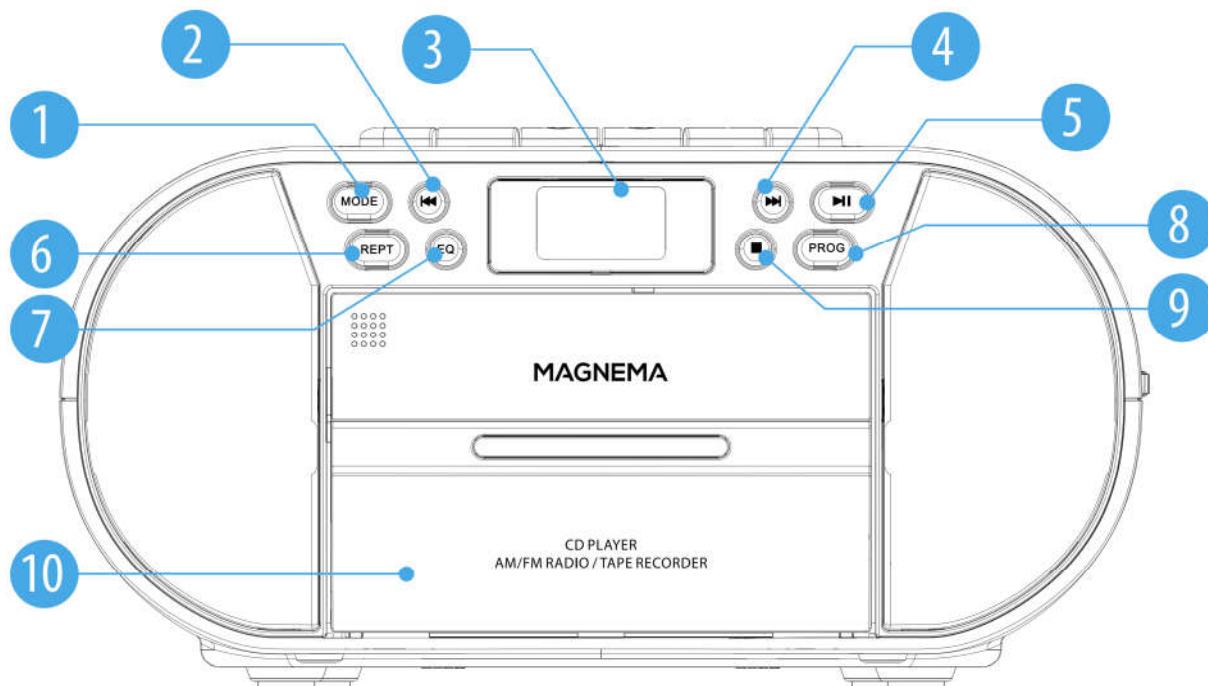
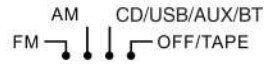



#	ITEM	DESCRIPTION
1	MODE	Press to cycle through the sound sources (CD>USB>AUX>BT).
2	⏮ (Previous)	In radio mode, press to skip to the previous lower preset station, or press and hold to tune to the previous lower station. In CD or USB mode, press to skip to the previous track, or press and hold to search backward. In Bluetooth mode, press to skip to the previous track.
3	LCD Display	Displays information including mode, total track, radio frequency, playback time etc.
4	⏭ (Next)	In radio mode, press to skip to the next higher preset station, or press and hold to tune to the next higher station. In CD or USB mode, press to skip to the next track, or press and hold to search forward. In Bluetooth mode, press to skip to the next track.
5	⏸ (Play/Pause)	Press to begin CD, USB, or Bluetooth playback. Press again to pause playback. In radio mode, press and hold to search AM/FM stations from low to high. The searched stations are saved automatically as presets.

 
6	REPT	<p>In CD mode, press once to repeat the current song, press twice to repeat all tracks, press a third time to play all tracks in random order, press a fourth time to cancel Repeat mode.</p> <p>In USB mode, press once to repeat the current song, press twice to repeat all tracks in current folder, press a third time to repeat all tracks, press a fourth time to repeat all tracks in random order, press a fifth time to cancel Repeat mode.</p>
7	EQ	<p>Press to select a specific sound field (equalization). Selections include Classic, Rock, Pop, Jazz, and Flat.</p>
8	PROG	<p>When CD or USB playback is stopped by pressing ■ button, press this button to program the player to play up to 99 tracks in your favorite order.</p>
9	■ (Stop)	<p>In CD or USB mode, press to stop playback.</p>
10	Cassette Door	<p>Opens and closes to allow insertion and removal of cassette tapes.</p>

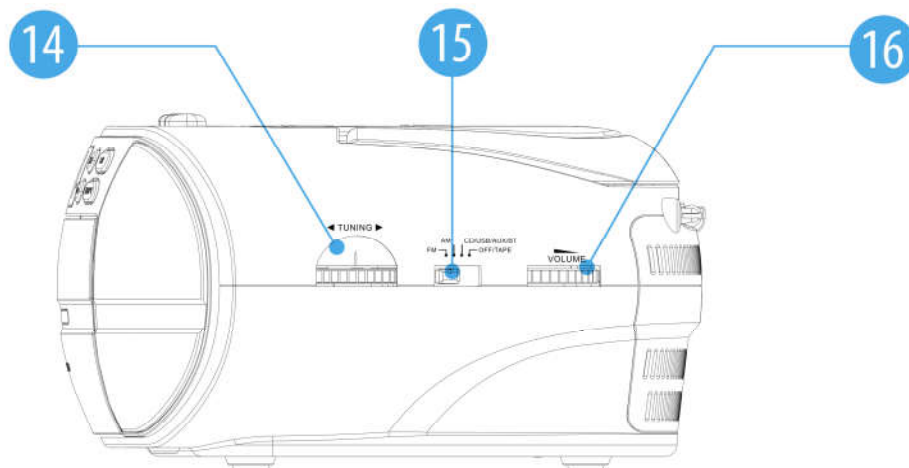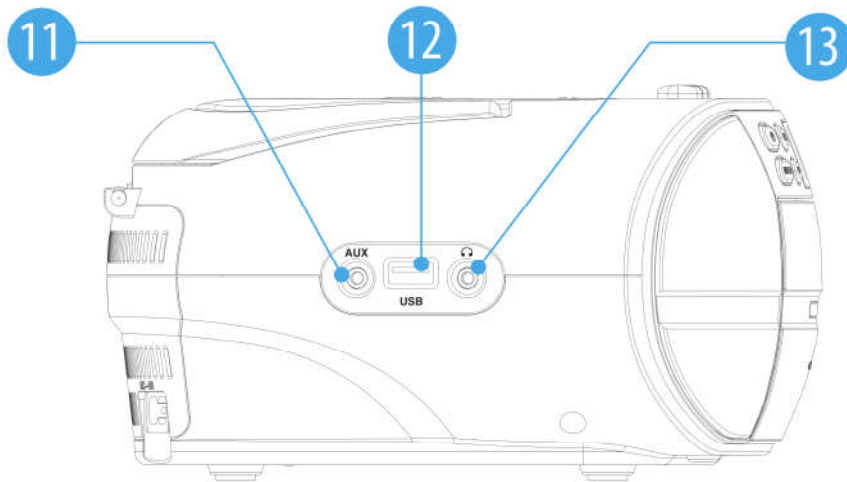

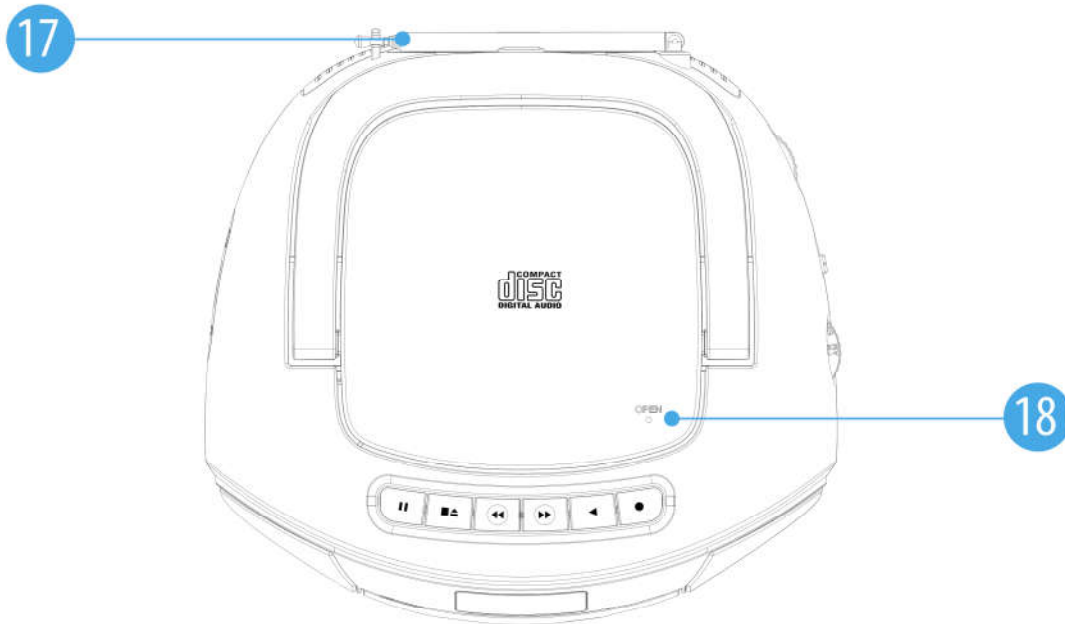

11	AUX IN jack	Connect an external audio device to this jack.
12	USB	Connect a USB flash drive to play audio tracks.
13	 (Headphone/ Earphone) Jack	Headphone/Line out jack.
14	TUNING (Radio Fine Tune) Knob	Turn clockwise to tune the AM/FM radio to a higher frequency or counterclockwise to a lower frequency.
15		Function Selector (Power Off/ Tape – CD/USB/AUX/BT – AM – FM)
16	 VOLUME	Turn the dial to increase or decrease volume.
17	FM Telescope Antenna	Provides an improved FM signal.
18	OPEN	Open the CD lid to place the CD in the disc compartment, label side up, close it to begin playback.

Cassette Controls

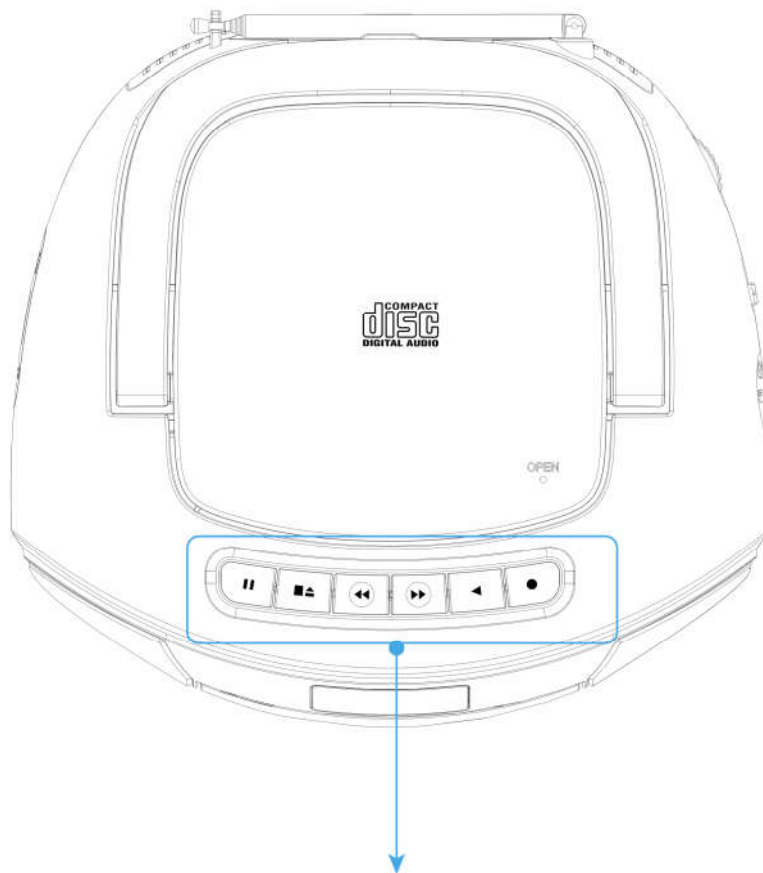

II(Pause)	In tape mode, press to pause playback.
■▲	Press to stop tape playback and open the cassette door.
◀◀	In tape mode, press fast forward.
▶▶	In tape mode, press to rewind.
▶	Press to start tape playback.
●	Press to record audio to a cassette tape.

Setting up your boombox

Connecting the AC cord

- 1 Make sure that your local AC power source matches the voltage shown on the plate located on the bottom of the boombox.
- 2 Insert the small connector at the end of the AC cord into the **AC IN** socket on the back of your boombox.
- 3 Plug the AC cord into a wall power outlet.

NOTES:

- Unplug the AC cord when not in use.
- The batteries are automatically bypassed when the AC cord is used.
- Power electrical specs: 110-130V ~ 50/60Hz.

Installing the batteries

- 1 Turn your boombox over, then open and remove the door of the battery compartment.
- 2 Insert six (6) UM-2 ("C") size alkaline batteries into the battery compartment. Make sure that you match the + and – symbols on the batteries with the + and – symbols in the battery compartment.
- 3 Reinstall and close the battery compartment door and return your boombox to the upright position.

NOTES:

- The AC cord must be disconnected from both the AC IN socket on the back of your boombox and the AC power outlet in order for your boombox to operate on battery power.
- Alkaline batteries are recommended, for they support longer playtime than carbon zinc batteries.

CAUTIONS:

Follow these precautions when using batteries in this device:

- Use only the size and type of batteries specified.
- Make sure that you follow the correct polarity as indicated in the battery compartment when installing batteries. Reversed batteries may cause damage to your boombox.
- Do not mix different types of batteries together or semi-used batteries with fresh ones.
- If your boombox is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries not intended to be recharged, because they can overheat and rupture. (Follow battery manufacturer's directions.)
- Do not throw batteries into a fire. Dispose of used batteries as hazardous waste.

Disc (Audio CD and MP3/WMA CD) Notes

Precautions for Playback

Compact discs (CDs) with the following logo on the label surface can be used. Do not use discs designed for purposes other than audio, such as CD-ROMs for PC use. Abnormal noise could damage the unit and/or speakers.



- The CD player supports CD-R and CD-RW discs.
Note that some discs may not playback because of the disc characteristics, scratches, contamination or the recording state. A disc recorded with an audio CD recorder will not playback unless it is finalized.

Never use discs that have a special shape (such as hearts or octagons). These types of discs could damage the unit.



CD Playback with Copy-control Function

Some audio CDs with copy-control function do not comply with official CD standards. These are special discs and cannot be played with the unit.

Playback of MP3/WMA Discs

MP3/WMA files recorded on a CD-R/CD-RW can be played with the unit.

- Use discs which have been recorded following the ISO 9660 Level 2 file system. (The supported directory depth is eight levels, the same as ISO 9660 Level 1)
- Discs must be closed (finalized).
- Only MP3/WMA files with the extension ".mp3" or ".wma" are supported.
- MP3 files recorded using MPEG 1 audio layer 3 at sampling frequencies of 32/44.1/48 kHz and a bit rate of 32 -320 kbps are supported.
- WMA files recorded using MPEG 1 audio layer 3 at sampling frequencies of 11.025/22.05/44.1 kHz and a bit rate of 32 -192 kbps are supported.

NOTES:

 
- A disc recorded with a recorder or personal computer may not play in some cases. (Cause: Disc's characteristics, damaged or dirty disc, dirt on player's lens, dew condensation, etc.)
- A disc recorded on a personal computer might not play depending on the application settings or environment. Record the disc in a format supported by the unit.
- A disc with insufficient storage capacity may not playback properly.
- Files are played back in the same order as they are recorded on the disc.

Using your CD Player

Basic operations

Turning on/off the boombox

Slide the Function Selector from **OFF/TAPE** position to **CD/USB/AUX/BT** position, **AM** position or **FM** position to turn on the boombox, slide back to **OFF/TAPE** position to power off.

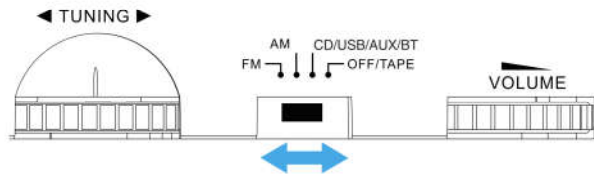

Selecting the sound source


- Slide the Function Selector selector to **FM** position, to select **FM** radio mode, or **AM** position to select **AM** radio mode.
- With the Function Selector in **CD/USB/AUX/BT** position: press **MODE** button repeatedly to cycle through the sound sources: **CD>USB>AUX>BT**(Bluetooth).
- Slide the Function Selector selector back to **OFF/TAPE** position, to turn off the boombox or select **TAPE** mode.

TIPS: Next time you turn on the boombox by sliding the Function Selector from **OFF** position to **CD/USB/AUX/BT** position, it returns to CD source.



Adjusting the volume

Turn the **VOLUME** dial to increase or decrease volume.

Using headphones

You can connect a pair of stereo headphones (ø3.5 mm, 1/8-inch phone plug) to the boombox  jack for private listening.

NOTES:

- Always turn down the volume before connecting your headphones.
- While the headphones plug is inserted in the  jack, the speakers are turned off.
- The  jack can be used as stereo audio output, by connecting it to the stereo audio input of your external audio system.

Selecting sound effect (EQ) presets

Press **EQ** button repeatedly to select your desired sound effect (EQ) preset. Selections include **Classic, Rock, Pop, Jazz, and Flat**.

Using repeat mode

- 1 During CD or USB playback, press **REPT** button to cycle through the playback modes.
The following appears on the display:
 - **ONE** —Repeat current track
 - **F ILE** —Repeat all tracks in current folder (MP3 CDs or USB sticks only)
 - **ALL** —Repeat all tracks
 - **SHUF** —Random playback
- 2 To cancel repeat mode, press **REPT** until the **OFF** icon appears on the display.

NOTE: Repeat function is applicable to **CD/USB** modes only.

Playing the radio

- 1 Slide the Function Selector to **AM/FM** position to turn on the radio.
- 2 Slide the Function Selector to **AM** position to select **AM** radio mode, or Function Selector position to **FM** select **FM** radio mode. The correspondence indicator AM or FM and the radio frequency will appear on the LCD Display.
- 3 Press and hold **▶▶** (next) or **◀◀** (previous) for two seconds to automatically tune to the next or previous station.
- 4 If the reception is not good, turn the **TUNING** Knob for better reception.
- 5 Adjust the volume to a comfortable level by turning **VOLUME** dial clockwise or counter clockwise.
- 6 When finished listening, slide the Function Selector to **OFF/TAPE** position to turn off the boombox.

Improving reception

- Fully extend the FM antenna. You may have to reposition the antenna for best reception.
- When necessary, relocate the boombox for better reception.

Using auto-scan & presets

- 1 Slide the Function Selector to **AM/FM** position to turn on the radio.
- 2 Slide the Function Selector to **AM** position to select **AM** radio mode, or Function Selector position to **FM** select **FM** radio mode. The correspondence indicator AM or FM and the radio frequency will appear on the LCD Display.
- 3 To automatically scan for stations from low to high, press and hold **▶▶** button for 2 seconds. The searched stations are automatically saved to presets.
- 4 To select a preset station, press **▶▶** (next) or **◀◀** (previous) repeatedly until you reach your desired station.

NOTES:

- Up to 20 AM stations and 30 FM stations can be preset and presets are stored in frequency order.
- Depending on your location, a preset may be stored with no station, and you'll hear only noise when you select it.

Using manual-scan & presets

- 1 Slide the Function Selector to **AM/FM** position to turn on the radio.
- 2 Slide the Function Selector to **AM** position to select **AM** radio mode, or Function Selector position to **FM** select **FM** radio mode. The correspondence indicator AM or FM and the radio frequency will appear on the LCD Display.
- 3 Press and hold **▶▶** (next) repeatedly to search your desired station from low to high, or **◀◀** (previous) from high to low, the frequency of the searched station will display.
- 4 Press **PROG** button, the boombox will display a default preset number for you to save the searched station.
- 5 Or you can press **▶▶** (next) or **◀◀** (previous) repeatedly to select another preset number to save it.
- 6 Press **PROG** button again to confirm your selection and save the searched station to the selected preset, the boombox will display its frequency and start playing it automatically.

Playing CDs

You can play standard and 3" audio CDs, CD-Rs, and CD-RWs.

CAUTION: Do not try to play DVDs, VCDs. You may damage your boombox.

- 1 Slide the Function Selector to **CD/USB/AUX/BT** position to turn on the CD. An indicator "CD" will appear on the LCD display.
- 2 Press **MODE** button repeatedly to select CD mode, if needed.
- 3 Push the **OPEN** Area on the CD Door to open it, indicator "OP" will appear on the display.
- 4 Insert a CD, label side up.
- 5 Close the CD door by pushing the **OPEN** area. Wait a few seconds, playback begins automatically, and the total tracks appears on the LCD Display.
- 6 Press **■** to stop the CD before it is finished. The total number of tracks appears on the display.
- 7 When finished listening, slide the Function Selector to **OFF/TAPE** position to power off the boombox.

NOTES:

- If a CD is inserted incorrectly, is dirty, or is damaged, or is not present at all, indicator "□□" appears on the display.

- To prevent damage to the CD, never open the CD door while the CD is rotating and never touch the lens.
- Do not use the carrying handle when playing a CD. The CD player should only be used on a steady surface.

Pausing CD playback

- 1 Press **▶II** (play/pause). Playback stops but the CD continues to spin and the elapsed time of the current track blinks on the display.
- 2 Press **▶II** (play/pause) again to resume normal CD playback.

Skipping or searching a CD track

- 1 During playback, press **▶▶** (next) or **◀◀** (previous) to skip to the next or previous track, respectively.
- 2 Press and hold **▶▶** (next) or **◀◀** (previous) to quickly search the current track forward or backward, respectively.

Programmed playback

- 1 Press **■** button to stop playback. In CD STOP playback mode, press the **PROG** Button. "**PROG 1 --**" will appear on the display and blink.
- 2 Select the first specific track to be programmed by pressing the **▶▶** (next) or **◀◀** (previous) repeatedly.
- 3 Press the **PROG** Button to store the selected track into the memory.
- 4 Repeat steps 2 and 3 until all the specific tracks are stored into the memory.
- 5 Press the **▶II** (play/pause) Button to start program playback. The program indicator "**PROG**" will stop blinking.
- 6 To stop playback, press the **■** button.
- 7 To erase the program, press the **■** Button again in stop mode. The program indicator will disappear on the display.

Playing USB flash drives

- 1 Slide the Function Selector to **CD/USB/AUX/BT** position to turn on your boombox.
- 2 Press **MODE** button repeatedly to select USB mode, the indicator "**USB**" will appear on the display.
- 3 Connect the USB flash drive to the USB port. Make sure that you insert your USB drive all the way into the USB port.
- 4 Press **▶II** (play/pause) to begin/pause playback.
- 5 Press **■** to stop playback, and the number of the total tracks will appear on the display.
- 6 When finished listening, slide the Function Selector to **OFF/TAPE** position to power off the boombox.

NOTES:

- Not all USB flash drives are supported.
- Supports USB flash drives of a maximum capacity of up to 128GB.
- FAT16/FAT32 file systems are supported (NTFS not supported).
- Supports MP3/WMA music files only.
- USB hubs are not supported.
- Do not connect the boombox's USB port to a USB port on your computer.
- The USB flash drives will only fit in one direction.
- Music files are played back in the same order as they are saved in the USB flash drive. However, playback may change if the files or folders in the USB flashdrive are deleted or renamed on a computer, etc.

Listening to an external audio device

- 1 Make sure that the boombox is turned off.
- 2 Plug one end of the 3.5 mm AUX cable into the **AUX IN** jack on the boombox.
- 3 Plug the other end of the cable into the **Line-out** jack on the audio device, such as an iPod, smartphone, or other MP3 player.
- 4 Slide the Function Selector to **CD/USB/AUX/BT** position to turn on your boombox.
- 5 Press **MODE** button repeatedly to select AUX mode, the indicator "**AUX**" will appear on the display.
- 6 Play the music on the connected external Audio Player as usual.
- 7 Turn the **VOLUME** Knob to adjust volume level as desired.
- 8 When finished listening, slide the Function Selector to **OFF/TAPE** position to power off the boombox.

NOTES:

- Only AUX mode is available with aux cabled plugged in.
- If the volume level of your external audio device is substantially low, the volume adjustment on the boombox may not be sufficient. In such a case, raise the volume level on the external audio device.
- If the input level is raised excessively, the sound may distort. If this occurs, adjust the input level appropriately.

Playing Tapes

- 1 Slide the Function Selector to **OFF/TAPE** position to turn on the TAPE mode.
- 2 Press the **■▲** button on the top to open the Cassette Door, insert a cassette tape, and close the Cassette Door.
- 3 Use the cassette controls to play, pause, rewind, and fast forward audio from the cassette.
- 4 Turn the Volume dial to turn adjust the volume.

Recording Audio to a Cassette Tape

- 1 Open the Cassette Door, insert an audio recording cassette tape, and close the Cassette Door. Make sure the tape is not write protected before beginning a recording.
- 2 Adjust the Source Switch switch to one of the other settings (FM/AM/CD/USB/Bluetooth).
- 3 While playing from the Source, press the Record button. Audio from the Source will be copied to the tape.

Listening to a Bluetooth sound source

Before you can use your boombox with a Bluetooth device, you need to pair your device to the boombox. After your boombox is plugged in and turned on, do the following:

NOTES:

- Your boombox must be turned on to make a Bluetooth connection.
- Place the Bluetooth device within 33 ft. (10 m) of your boombox.
- Bluetooth is used as a convenient connection to your sound source.

Pairing your devices

- 1 Slide the Function Selector to **CD/USB/AUX/BT** position to turn on your boombox.
- 2 Press **MODE** button repeatedly to select Bluetooth mode, the indicator "BT" will appear on the display.
- 3 Navigate to your device's Bluetooth settings, turn on Bluetooth, then search for available devices. For additional information on pairing your device, see your device's documentation.
- 4 On your Bluetooth device, select "**Magnema CB-600CR**" from the device list. Repeat steps 1-2 if "**Magnema CB-600CR**" is not displayed.
- 5 If a PIN code is requested, try "0000" or "1234".
- 6 When the Bluetooth connection has been established, the indicator "BT" will stop flashing.
- 7 You may now play music with your external BT Device.
- 8 During playback:
 - Turn the **VOLUME** Knob to adjust volume level as desire.
 - Press the **▶|** (play/pause) Button to pause; press again to resume normal playback.
 - Press the **▶▶** (next) or **◀◀** (previous) repeatedly to skip the tracks.
- 9 When finished listening, slide the Function Selector to **OFF/TAPE** position to power off the boombox.

NOTES:

- Your boombox can only be connected and play content from one device at a time.
- When you turn on your boombox, it automatically connects to the last connected device if that device is in range. To connect to a different paired device, turn off Bluetooth or unpair from the currently paired device and manually connect to the other paired device.

Important: Make sure that the device you connect and select as your sound source is outputting sound to the boombox. See your device's user manual for more information.

Disconnecting your devices

- Turn off the Bluetooth function on your device.
- Press and hold **▶II** (play/pause) on your boombox to disconnect with your current device and start a new connection, the indicator "BT" will start flashing again.

Reconnecting to a paired device

When you select "bt" mode, your boombox automatically connects to a previously paired device. If it fails to connect, please check the following:

Your boombox loses the Bluetooth connection if you...	To reconnect...
Turn it off.	Turn on your boombox. Your boombox searches for the last connected Bluetooth device and reconnects.
Move the Bluetooth device out of range.	Move your Bluetooth device within 33 ft. (10m) of your boombox.
Turn off your Bluetooth device.	Turn on your Bluetooth device, then make sure that Bluetooth is on.
Turn off Bluetooth on your Bluetooth device.	Turn on Bluetooth on your Bluetooth device.
Connect your Bluetooth device to another Bluetooth device.	Disconnect your Bluetooth device from the other Bluetooth device, then set your device to pairing mode. Select "Magnema CB-600CRT" on your Bluetooth device.
Change your boombox's input source.	Change the boombox's input source back to Bluetooth.

Note: If a device does not automatically reconnect, you may need to reselect "Magnema CB-600CRT" on your Bluetooth device.

Connecting to a different device




- 1 On your Bluetooth device, turn off the Bluetooth function or unpair the boombox in your Bluetooth device list. The boombox can now be connected to another Bluetooth device.
- 2 Follow the section Pairing your devices on page **15** to connect a new device.

Receiving a phone call while playing music

- When you receive a call while playing music through your phone, the music stops automatically.
- When you hang up, depending on the setting of your phone, the current track may resume playback.

Pair a Secondary CB-600CR via TWS

You can pair with a secondary CB-600CR (to be purchased separately) via its built-in Wireless Stereo Pairing (TWS) technology, to enjoy true wireless stereo sound effects with left and right sound channels separated. The two CB-600CRs will work as one wireless stereo speaker system with one Bluetooth pairing ID only.

- 1 Slide the Function Selector to **CD/USB/AUX/BT** position to turn on your boombox.
- 2 Press **MODE** button repeatedly to select Bluetooth mode, the indicator “” will appear on the display.
- 3 Repeat step 1 for the secondary CB-600CR, and ensure it is not connected to any Bluetooth device.
- 4 Double press the  (play/pause) button of the first boombox to pair the other via TWS. The pressed CB-600CR will beep, and start searching for the other to pair via TWS, a prompt tone will sound once they are paired with each other. Once paired, the two CB-600CRs will work as one wireless stereo speaker system, with the double-pressed one as left sound channel, and the other as right sound channel.
- 5 Follow the instructions on page 15 and 16 to use the TWS paired players as one Bluetooth speaker system to enjoy wireless streaming music.
- 6 Double press  (play/pause) button on either boombox, you can disconnect their TWS pairing, and use them separately.

Troubleshooting

CAUTION: Do not try to repair the boombox yourself. Doing so will invalidate your warranty.

Problem	Solution
Your boombox will play.	<ul style="list-style-type: none"> • Unplug your boombox for a few moments, then plug it back in. • Make sure that the AC outlet is working by plugging another device into it.
The CD player will not play.	<ul style="list-style-type: none"> • Make sure that you have put a CD in the CD compartment. • Make sure that the CD is inserted label side up. • Try a different CD. • Make sure that the CD player is not paused. • Make sure that the CD mode is selected. • Make sure that you are using a compatible CD. Your boombox can play standard and 3" audio CDs, CD-Rs, and CD-RWs.
A CD skips while playing.	<ul style="list-style-type: none"> • Wipe the CD with a cloth to clean it. See Cleaning discs on page 20. • Try a different CD. • Make sure that the CD is not warped, scratched, or damaged. • Make sure that your boombox is not being affected by vibration or shock. Move the boombox if necessary. • Make sure that you are using a compatible CD. Your boombox can play standard and 3" audio CDs, CD-Rs, and CD-RWs.
I hear noise or distorted sound on FM radio broadcasts.	<ul style="list-style-type: none"> • Extend the FM antenna. • Rotate your boombox until the best reception is obtained. • Try turning off electrical appliances near your boombox, such as hair dryers, vacuum cleaners, or fluorescent lights.
I don't hear any sound.	<ul style="list-style-type: none"> • Increase the volume. • Plug in the AC power cord and slide the Function Selector to turn on your boombox. • Make sure that you have installed fresh batteries and that they are installed correctly.

Problem	Solution
	<ul style="list-style-type: none"> • Make sure that you have selected the correct source. • If you are in AUX mode, make sure the volume has not been muted on your playback device.
The sound seems very low.	<ul style="list-style-type: none"> • If you are using AUX mode, make sure that the volume is turned up on both your audio source and your boombox.
A USB drive will not play.	<ul style="list-style-type: none"> • Disconnect the USB drive and insert it back to the USB port all the way in. • Make sure your USB drive is formatted in FAT32, not in NTFS or EXFAT. • Make sure the capacity of your USB drive is not exceeding 128GB. • Make sure the format of your stored music is in MP3 or WMA format.
My boombox won't connect to my Bluetooth device.	<ul style="list-style-type: none"> • Shorten the distance between your boombox and your Bluetooth device. • Turn your devices off, then on. Re-pair your boombox and your Bluetooth device. • Make sure that your boombox is not paired to another Bluetooth device. • Make sure that your boombox and Bluetooth device are both in pairing mode. • Make sure that your Bluetooth device is not paired to any other device. • Make sure that you have selected "Magnema CB-600CR" on your Bluetooth device.
My Bluetooth device keeps unpairing.	<ul style="list-style-type: none"> • Shorten the distance between your boombox and your Bluetooth device. • If the battery on your Bluetooth device is low, recharge the battery.
"Magnema CB-600CR" does not appear on my Bluetooth device.	<ul style="list-style-type: none"> • Shorten the distance between your boombox and your Bluetooth device. • Put your boombox into pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your Bluetooth device. • Make sure that your Bluetooth device is visible to other devices. For more information, see the documentation that came with your Bluetooth device.

Maintaining your boombox

Care and handling of discs

Handling discs

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc.



Storing discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

Cleaning discs

Fingerprints and dust on the disc can cause poor sound quality and distortion.

Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.



Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

Cleaning the CD lens

If your CD lens gets dirty it can cause poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the literature accompanying the lens cleaner.

Cleaning your boombox

To prevent fire or shock hazard, disconnect your boombox from the AC power source when cleaning.

The finish on your boombox may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.

Mild soap and a damp cloth may be used on the front panel.

Specifications

AC input	110-130V ~ 50/60Hz
Radio frequency	FM: 87.5 - 108.0 MHz AM: 530 - 1710 KHz
Dimensions (HxWxD)	9 x 8.4 x 4.6 in. (230 x 215 x 118 mm)
Power cord length	3.9 ft. (1.2 m)

Legal notices

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

12 Months Warranty

Thank you for choosing MAGNEMA.

MAGNEMA Electronics warrants your new product to be free from defects in materials and workmanship for a period of twelve (12) months, from the date of receiving. This warranty is in addition to your rights under Amazon's return and refund policies which apply to your purchase.

MAGNEMA will provide you with a brand-new replacement (where possible) for this product if it becomes defective within the warranty period. MAGNEMA will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please contact our Customer Service with your order ID and description of the problem, for warranty claim or any difficulties with your product:

Email: support@magnema.co

Amazon Buyer-Seller Messages: Go to Your Orders then find your order in the list, open the order and on the order page click **Get help** button.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Always there to support you

Get support at:
www.magnema.co

Question?
Contact MAGNEMA:
support@magnema.co

