


# NAUTICA

## PORTABLE BLUETOOTH OUTDOOR SPEAKER

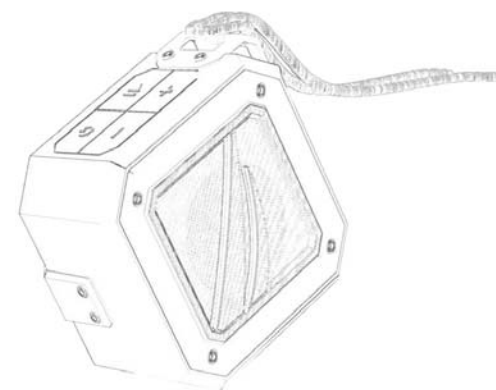

S100

Thank you for purchasing Nautica NTSP01 Portable Bluetooth Outdoor Speaker S100.

You are getting a high quality product that's built to combine technology and design for your everyday use.

Please read the below info carefully to get the most out of your new product.

For more detailed info on care, use and warranty, please visit [technofashion.com](http://technofashion.com).

### Safety Information

Before you use the device, read the following precautions carefully to ensure optimal product performance.

Keep speaker away from heat sources, direct sunlight, humidity, water and any liquids.

Do not use speaker if it has been dropped or damaged.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.


Do not insert objects into any of the openings.

Keep speaker free from dust, lint etc.

Do not use this speaker for any other purpose than intended.

Keep speaker out of reach of children. Batteries (battery pack or batteries installed) shall not be exposed to excessive place, such as direct sunshine, fire etc.

### Product Description

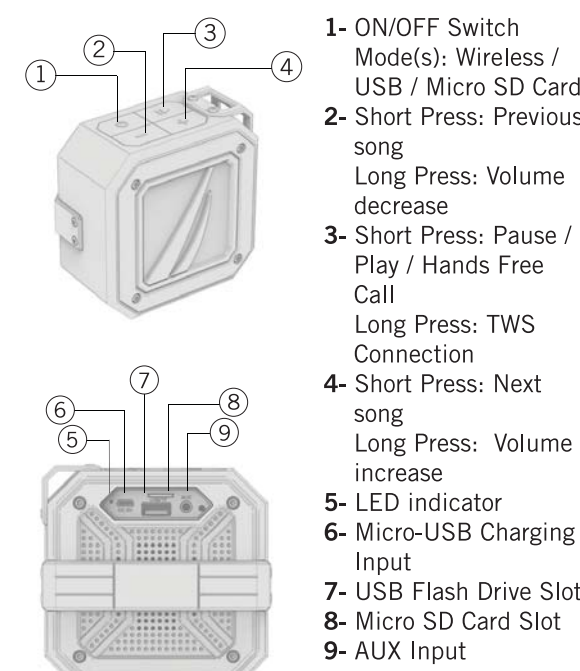

- 1- ON/OFF Switch Mode(s): Wireless / USB / Micro SD Card
- 2- Short Press: Previous song Long Press: Volume decrease
- 3- Short Press: Pause / Play / Hands Free Call Long Press: TWS Connection
- 4- Short Press: Next song Long Press: Volume increase
- 5- LED indicator
- 6- Micro-USB Charging Input
- 7- USB Flash Drive Slot
- 8- Micro SD Card Slot
- 9- AUX Input

### Package Content



### Operational Guide

**Charging**  
The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn off automatically. Please recharge the battery. Operation method: Plug the micro USB end of the included USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED light illuminates indicating that the device is being charged. It needs 2-3 hours to complete charging. Once the speaker is fully charged, LED light would turn OFF.

**Pairing**  
After connecting Nautica S100 Wireless Outdoor Speaker to a power source for the first time, the speaker will be in Bluetooth pairing mode and the status light will be ON. If it is not ON, press and hold the source selection button for three seconds until the light turns on. Now that your Nautica Wireless Outdoor Speaker is searching for a Bluetooth device to pair with, follow the instructions listed below:

- Go to the "settings" menu on your Bluetooth device and turn Bluetooth "ON".
- Locate the list of available Bluetooth connections on your device. The speaker will appear on your device.
- Once a pairing is established the speaker will play an audible tone beep, and your device is now paired, connected and ready to use. Simply start playing audio on your Bluetooth device and enjoy the sound of your speaker.

**Stream music from Micro SD Card or USB Flash Drive**

- Turn ON the speaker.
- Insert the Micro SD Card or USB Drive preloaded with songs, into the Micro SD Card Slot or USB Card Slot of the speaker correspondingly, Speaker would automatically start playing songs from the Micro SD Card or USB Drive.

**Play Music Through "Auxiliary (AUX)" Mode**

- Turn ON the speaker.
- Insert one end of the AUX cable (included) into the AUX port, plug the other end to the audio device (such as phone / Player / computer / tablet etc.)

- Select your favourite song to play.
- Long press to increase the volume or press to decrease the volume.

**Note:** Media can be controlled only through the source devices, while playing music in AUX mode.

**Quick Tip !**  
Between Wireless Play / AUX In / USB / Micro SD Card, when the speaker is not in use, turn it OFF to save battery power.

**Listening to Music Wirelessly**  
Please ensure that your device (Mobile Phone, Tablet or other devices) is paired with Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

- + Long press: Increase volume
- Long press: Decrease volume
- ▶ Short press: Play
- ▶ Short press: Pause
- ◀ Short press: Previous song
- + Short press: Next song

**Note:** The above functions can be used in all models, such as Wireless mode, USB Drive Play mode, TF Card Play mode. In AUX input mode, you need to control the media through the media source devices. You need to operate with the source devices for previous / next track.

**Hands free Calling Function**  
Please ensure your mobile phone is paired with device.

- ▶ Short press: Answer incoming call
- ▶ Long press 3 seconds: Reject incoming call
- ▶ Short press: End call
- + Long press: Increase volume
- Long press: Decrease volume
- ▶ Short press key 2 times: Redial last number

**TWS Connection**

- Turn ON each wireless speaker by pressing ON/OFF Button
- Long press the PLAY/PAUSE button on each of the wireless speakers and hear "Ding Dong" sound, then the speakers are connected successfully in TWS mode.
- Search for your device in your mobile phone and pair it with device.
- Enjoy your music. If you don't need TWS mode, long press the button, hear "Ding Dong" sound then the speakers are not in TWS mode.

### Specifications

- Wireless Version: v5.0 + EDR
- Play Time: Up to 15 hours
- Charging Time: 3 hours
- IPX5 Splashproof
- Output Power / Horn Type: 1 x 5W / 4 Ω 52mm
- 15W PMPO
- Wireless Distance: Up to 33 ft / 10m
- Power Input: DC 5V ( 1A )
- Built-in Rechargeable Battery: 3.7V / 1200mAh
- Micro SD Card/USB Drive: Support up to 32GB

- Multiple Functions: Wireless Play / USB Drive / Hands-Free Call / Micro SD / AUX Input

- Product Dimensions: 4.3\*4.2\*2.4 in / L109\*H106\*D60mm

- TWS Connection

### Maintenance

Read the following recommendations before using your device to be able to enjoy your product for many years.

Do not expose the unit to liquid, moisture or humidity to avoid product's internal circuit being affected.

Do not use abrasive cleaning solvents to clean the unit.

Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

Do not dispose of the unit in fire as it will result in an explosion.

Do not expose the unit to contact with sharp objects as this will cause scratches and damage.

Avoid dropping the unit onto the floor. The internal circuit might get damaged.

Do not attempt to disassemble the unit as it may get damaged.

### Caution

Please do not disassemble, repair or transform the product.

This product uses lithium battery, please do not discard or put it in the fire.

Do not expose this product to rain or humidity, to avoid damage to the device.

Do not recharge the device repeatedly, or the lithium battery inside would be aging quickly.

### Warranty Information

We do our best to make sure that this product is free from defects in materials and workmanship for a period of 1 year.

The following conditions must be met for your warranty claim to be approved:

You must have purchased the product from a Nautica or Technofashion authorized dealer.

You must provide proof as to the date of purchase from the Nautica or Technofashion authorized dealer.

You must have used the product only as intended and in accordance with the product's care instructions.

Within 12 months after the purchase, in case the product is determined to be defective (at the date of original purchase) due to improper materials or workmanship, you are entitled to free repair or exchange of goods. The product should be returned to Technofashion.

The warranty does not cover defects caused by third-party modifications, repairs or replacement parts.

Punctures, scratches, normal wear and tear and the natural breakdown of colors and materials over extended time and use are not warranted. Warranty applies to the USA only.

We will make every effort to replace limited edition or discontinued products but cannot guarantee availability for replacement.

Any limited edition or discontinued product still under its applicable warranty that cannot be replaced with an identical product will be replaced with the equivalent model based on availability.

We may make changes to products and designs in the time you purchased your product and submitted a warranty claim.

Products repaired or replaced under this warranty may or may not incorporate these changes.

### Support

For any questions, email us at [support@technofashion.com](mailto:support@technofashion.com)

**FCC ID: 2AZBO-N00010**  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found complying with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# NAUTICA

Designed, manufactured, distributed by

## TECHNOFASHION

© 2021 Technofashion, Inc.  
All Rights Reserved.  
Designed in USA, Made in China.  
May be patented, see [technofashion.com/patents](http://technofashion.com/patents)

