 


# NAUTICA

## MAGNETIC WIRELESS CHARGER

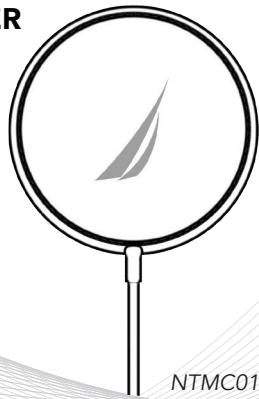

Thank you for purchasing an original **Nautica Magnetic Wireless Charger**

You are getting a high-quality product that's built to combine technology and design for your everyday use.

 
Please read the below info carefully to get the most out of your new product.

**This guide is ENGLISH only. For other languages and more detailed info on care, use and warranty, please visit [technofashion.com](http://technofashion.com)**

### WHAT'S IN THE BOX



NAUTICA MAGNETIC WIRELESS CHARGER

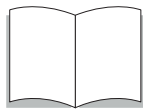


USER'S MANUAL

### HOW TO USE

 Place your Nautica Magnetic Wireless Charger on a flat, smooth surface. Place your mobile phone on the charger pad and make sure it is aligned in the center.

Failure to align your device in the center of the charger will prevent charging.

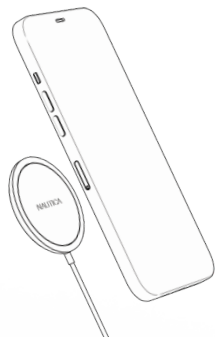

#### APPLICABLE DEVICES

Nautica Magnetic Wireless Charger is compatible with Qi-enabled devices.

### TECHNICAL SPECIFICATIONS

Output	15W, 10W, 7.5W, 5W
Wireless max output power	15W
Input power	12V / 1.66A , 9V / 2A , 5V / 2A
Input voltage	QC(5V / 9V), PD(5V / 9V / 12V)
Number of copper wire	40
Number of magnets	8
Effective distance	≤ 0.12 in / 3 mm
Over voltage protection	Yes
Over current protection	Yes
Short circuit protection	Yes
Over temperature protection	Yes
PPS compatible	Yes
Cable length	5 ft / 1.5 m
Dimensions	2.2*2.2*0.2 in / 56*56*5.3 mm
Weight	1.58 oz / 45 g

### SAFETY AND MAINTENANCE

Before you use the device, read the following precautions carefully to ensure optimal product performance.

Avoid dropping and exposing your product to liquids, moisture, direct sunlight and extreme heat and cold. Immediately unplug the charger from the power source if it gets wet.

Do not put any metal objects between your wireless charger and your device. Keep credit cards with magnetic strips and the like away from the wireless charger to prevent any damage to the cards.

Clean your magnetic wireless charger with a soft dry cloth, do not use any chemical detergents. Make sure the charger is unplugged before cleaning.

Do not modify, disassemble and attempt to repair this product. Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not use your magnetic wireless charger for any other purpose than intended.

This product is not a toy. Keep it out of reach of children.

### WARRANTY INFORMATION

We do our best to make sure that this product is free from defects in materials and workmanship for a period of 1 year.

The following conditions must be met for your warranty claim to be approved:

You must have purchased the product from a Nautica or Technofashion authorized dealer.

You must provide proof as to the date of purchase from the Nautica or Technofashion authorized dealer.

You must have used the product only as intended and in accordance with the product's care instructions.

Within 12 months after the purchase, in case the product is determined to be defective (at the date of original purchase) due to improper materials or workmanship, you are entitled to free repair

or exchange of goods. The product should be returned to Technofashion.

The warranty does not cover defects caused by third-party modifications, repairs or replacement parts.

Punctures, scratches, normal wear and tear and the natural breakdown of colors and materials over extended time and use are not warranted. Warranty applies to the USA only.

We will make every effort to replace limited edition or discontinued products but cannot guarantee availability for replacement.

Any limited edition or discontinued product still under its applicable warranty that cannot be replaced with an identical product will be replaced with the equivalent model based on availability.

We may make changes to products and designs in the time you purchased your product and submitted a warranty claim.

Products repaired or replaced under this warranty may or may not incorporate these changes.

### SUPPORT

For any questions, email us at [support@technofashion.com](mailto:support@technofashion.com)

**FCC ID: 2AZBO-N00011**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The distance between user and products should be no less than 20 cm.

# NAUTICA

designed, manufactured, distributed by  
**TECHNOFASHION**

© 2021 Technofashion, Inc. All Rights Reserved.  
Designed in USA. Made in China.  
May be patented. See [technofashion.com/patents](http://technofashion.com/patents)

