

Video Baby Monitor

User Manual




5"HD Video Baby Monitor
Model:SM50

1. Warning and Safety Instructions/avertissements et consignes de sécurité/Warn- und Sicherheitshinweise/avvertenze e istruzioni di sicurezza/警告と安全注意/advertencias e instrucciones de seguridad

Follow these safety precautions to prevent fire, injury or damage to the product.

Read and keep instructions: it is very important that you read all the safety and operating

Warnings:

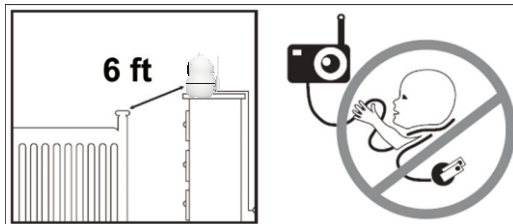

STRANGULATION HAZARD: Children can become entangled in cords. Make sure the baby unit, parent unit and mains adapter cables are kept out of reach of you baby and other young children at all times, at least 6 feet away.

CHOKING HAZARD: This product contains small parts which may cause choking. Exercise care when unpacking and assembling the product and keep the small parts away from children.

RISK OF SUFFOCATION: Keep all packaging materials and protective foils out of reach of children.

DANGER FROM POWER CORDS: To avoid possible danger from power cords the cords should be secured and never be hung on or near the crib. Never place the baby unit or parent unit inside your baby's crib, bed or playpen.

DO NOT HANDLE ROUGHLY, DROP OR THROW: Baby monitor is a high-quality electronic device which must be handled with care.

WATER AND MOISTURE: The product should not be exposed to rain, moisture, or splashing. Never use or place the product in or near moisture or water.

THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION: Your video monitor is designed to be an aid and should not be used as a substitute for responsible and proper adult supervision of a child.

VENTILATION: This product should not be used on a bed, sofa rug or similar surface that may block the ventilation or speaker openings, or be placed in an enclosed area, such as a bookcase or drawer that may

impede air flow. Never cover the product with clothes, towels. Never cover the product with clothes, towels, blankets or any other item.

THIS PRODUCT IS NOT A TOY: It should be kept out of children's reach.

KEEP AWAY FROM SOURCES OF HEAT: This unit should not be exposed to direct heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat. The unit should not be left in direct sunlight.

BATTERY: Before you use the product, we recommend you fully charge the battery of the parent unit, so that it continues to work if you disconnect it from the power supply to carry it to another location.

INSTALLATION LOCATION: The installation location plays an important role in ensuring proper operation. Therefore, maintain a distance of at least 5 feet from other electronic equipment, such as microwave ovens or Wi-Fi routers, otherwise they could cause interference. If this occurs, move the baby and parent units to another location.

RANGE: Range of all baby monitor is always measured in an open space. The actual range may be shortened due to environmental obstacles (such as concrete walls).

DAMAGE REQUIRING SERVICE: This product should be serviced by qualified personnel only.

DO NOT TRY TO OPEN AND REPAIR THE PRODUCT: If you have any problems with the product, please contact the authorized distributor.

In case of unusual noises or smells originating from the device, immediately disconnect the product from the power outlet and contact authorized.

If the product becomes dirty, use a lightly damp soft cloth to wipe surfaces, taking care to not allow water into any openings.

IMPORTANT: This baby monitor is designed only for hearing the baby's voice and seeing the images of the baby. This product is not a medical device and should not be used as a substitute for responsible adult supervision. It is important that you regularly check on your baby personally.

1.2 Safty Instructions for AC Power Adapter

The adapter should not be exposed to direct heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat.

During continual use, the power adapters may become warm to the touch. This is normal and should not be a cause of concern.

Examine intactness of the power cord and its plug.

The adapter must be handled with care: Do not handle roughly, drop or throw.

When removing the power adapter from the wall outlet, hold and pull from the receptacle.

Do not pull on the cable itself or bend the cable as that will put additional stress on the cable and could lead to damages.

Do not touch the power adapter with wet hands or allow liquids to spill on it.

Make sure the mains adapter cables are kept out of reach of your baby and other young children at all times.

To avoid possible danger from power cords, the cords should be secured and never be hung on or near the crib. Do not replace the plugs or cable on your power adapter. This product should only be used with the AC power adapter supplied by the manufacturer, as included in this package.

Never cut, damage or bend the power cord.

Do not put any objects on top of the power cord, which could cause overheating, damage, combustion and electronic cution

Do not leave the power adapter connected to the wall outlet when it is not plugged into the baby or parent unit.

WARNING:

Do not replace the power cord with non-original substitutes. Improper connection may cause electrocution. Do not place the AC adaptor cable in a high wear and tear location. Never use a frayed or compromised cord. intended for indoor use only

1.3 SaftyInstructions for Li-ion battery(Non removable pre-installed battery)

Do not attempt to repair or adjust any of the electrical or mechanical functions of the unit.

Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries.

If a battery leaks, do not let the battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, and seek medical assistance.

The battery should not be exposed to direct sunlight or heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use only the battery pack supplied with the product or the same type, sold by the manufacturer or its authorized distributors. Improper use or use of unapproved batteries may present a risk of fire, explosion, or other hazards, and may invalidate the warranty.

If you believe the battery is damaged, remove product from the charge and stop using the product. Never use a damaged battery.

1.4 Information on disposal of product


Always dispose of your product (with the non removable pre-installed battery) at the end of their life in an environmentally responsible way and in accordance with your local waste disposal requirements. All cardboard and paper packaging materials should be recycled in accordance with your local council waste regulations.

2. Overview/Généralites/Überlick/panoramica/概要/Visión general

2.1 Packinkg List

- Parent Unit x1
- Baby Unit(Camera) x1
- AC Power Adopter x2
- Wall mount shim x1
- User Manual x1

2.2 Parent unit

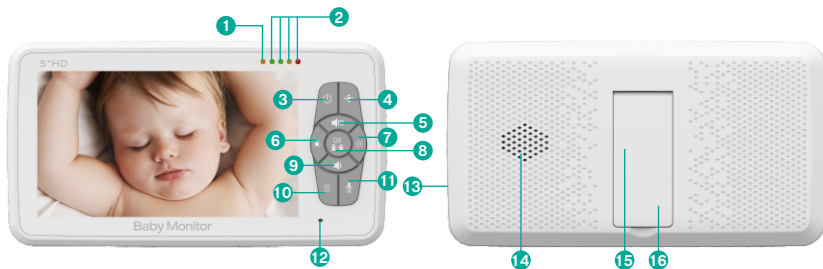


1. Power/Charging LED
2. Volume LED
3. Power on/off
4. shortcut
5. Volume+ /Up
6. Brightness- /Left
7. Brightness+ /Right
8. OK/Swift

9. Volume- /Down
10. Menu
11. Talk to baby
12. Mic
13. DC-jack
14. Speaker
15. Stand
16. Reset (under the stand)

2.3 Baby Unit



- 17. Light sensor
- 18. CMOS sensor
- 19. MIC
- 20. Antenna

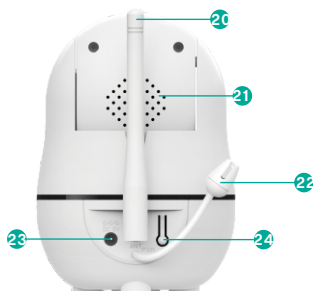

- 21. Speaker
- 22. Temperature sensor
- 23. DC-jack
- 24. Pair key



----- Lullaby



----- VOX



----- Zoom



----- Camera



----- Setting



----- Temp C/F



----- Time Format



----- Brightness



----- Timer



----- Alert Volume


50/60Hz

----- Frequency Setting




----- Temp


3. Getting Started/Commencer/anfangen/iniziare/始める/Empezar

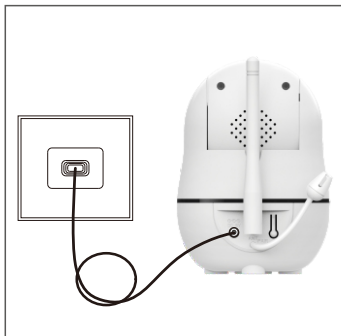

Step2 Turn on the baby unit

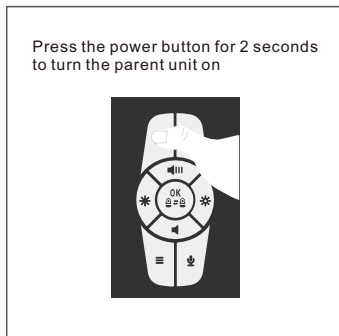

Step1 Turn on the parent unit

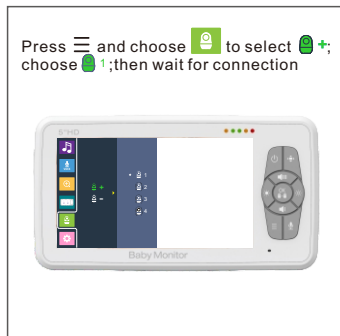







Step3 Prepare for connecting




Step4 Pair the baby monitor





4.Function operation/opération de fonction/Funktionelle Funktion/ operazione funzione/機能操作/funcionamiento de la función

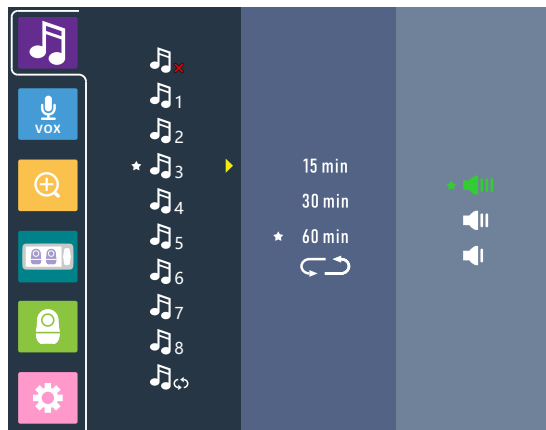
4.1 Lullaby setting/La berceuse joue/Wiegenlied spielen/ninna nanna giocando/ 子守歌が流れる/canción de cuna





- 1.Press menu button  to access menu.choose  and press 
- 2.Press the lullaby you want to play
- 3.Navigate with  to select the duration and music volume
- 4.In order to stop the lullaby playback,select 
- 5.Press  to exit the menu.

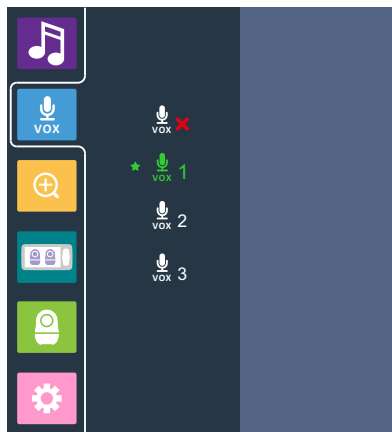

4.2 Vox mode/mode vox/Modus des Vox/Modello vox/voxモ — ㄣ/Modo vox

1. Press menu button  to access menu. choose  and press 
2. Navigate with  to select the duration and music volume






-  — Constant transmission — no standby mode
-  1 — Low sensitivity level — higher sound level is required to reactivate the transmission
-  2 — Medium sensitivity level — medium sound level is required to the transmission
-  3 — High sensitivity level — low sound level is required to the transmission

NOTE: To resume the video and audio signal manually on your parent unit when Vox function is on, briefly press any key on your parent unit.





4.3 Digital zoom/Zoom numérique/Digitaler Zoom/Zoom digitale/デジタルズーム/ zoom digital

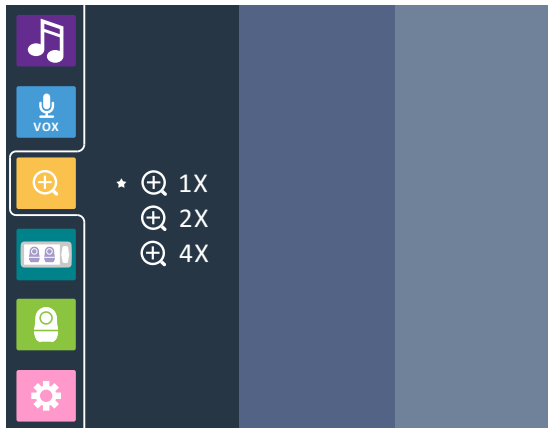
Press and hold  for 2 seconds to operate zoom in/out

1. Press the  button once to activate "X2" zoom option.
2. Press the  button twice to activate "X4" zoom option.





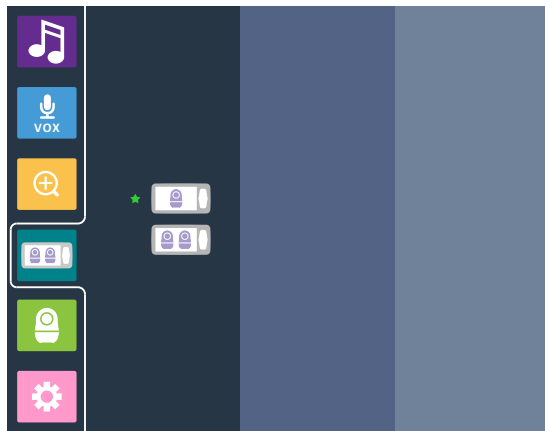


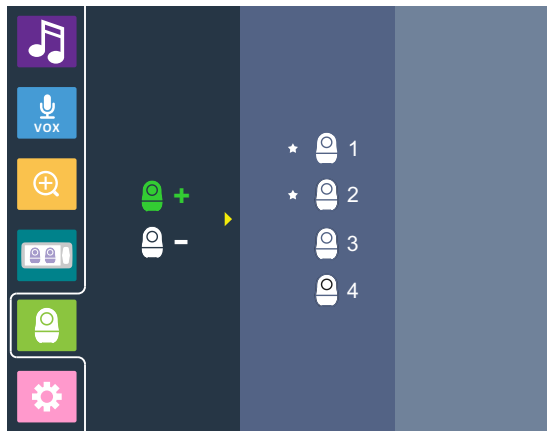
4.4 Split screen set/ensemble d'écran partagé/geteilter Bildschirm eingestellt/ set di schermate divise/分割画面セット/conjunto de pantalla dividida

1. Press menu button  to access menu. choose  and press 
2. Navigate with  to select the duration and music volume








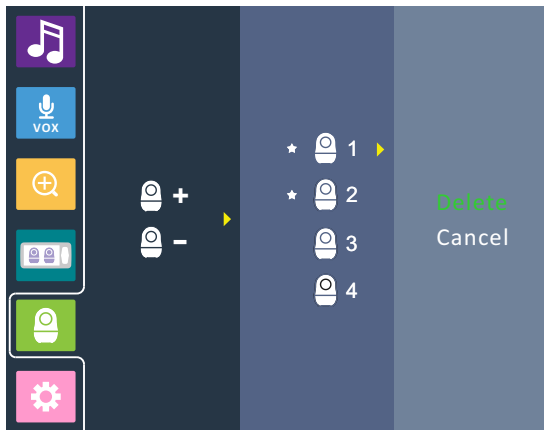
4.5 Pair the baby unit with the parent unit/jumeler le moniteur de bébé/ den Babymonitor koppeln/accoppiare baby monitor/ペアベビーモニター/ par monitor de bébé

1. Press menu button  to access menu. choose  and press .
2. Navigate with  to select the camera you want to pair.
3. Press menu button  to exit menu.









4.6 Delete the baby unit/Supprimer le moniteur bébé/Babyphone löschen/ eliminare baby monitor/ベビーモニターを削除/Eliminar monitor de bebé


1. Press menu button  to access menu. choose  and press .
2. Navigate with  to select the camera you want to delete.
3. Press menu button  to exit menu.









4.7 Baby monitor setting

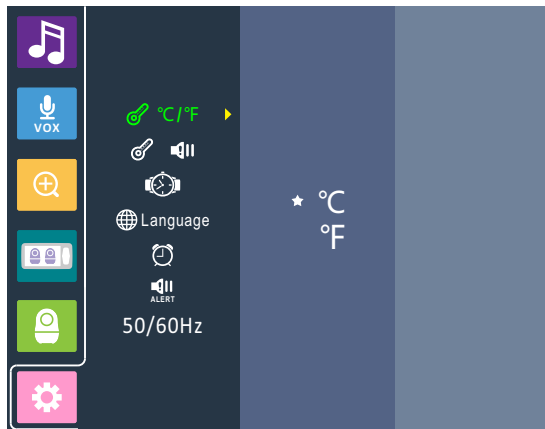
4.7.1 Temperature scale setting/Réglage de l'échelle de température/ Einstellung der Temperaturskala/Impostazione della scala di temperatura 溫度尺度設定/Ajuste de escala de temperatura

 1. Press menu button  to access menu. choose  and press .
2. Press  and press OK
2. Navigate with  to select the desire scale.
3. Press menu button  to exit menu.

 




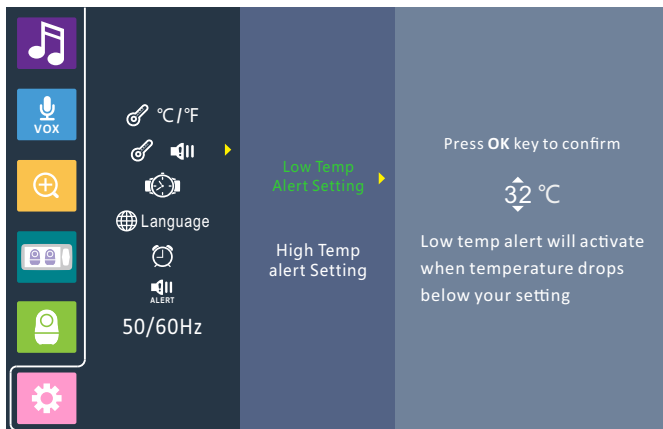


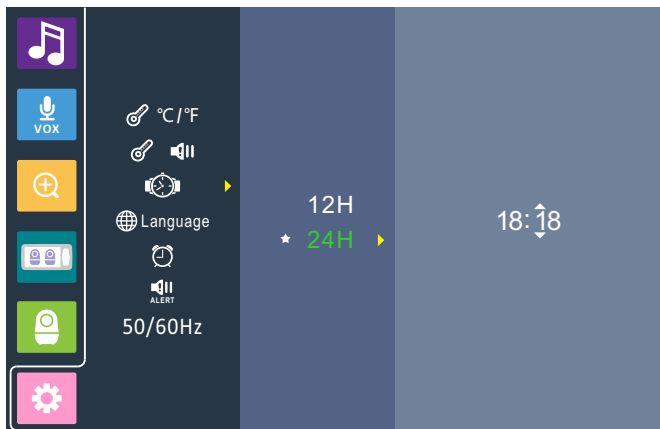
4.7.2 Temperature alert setting/Réglage de l'alarme de température/ Alarm für die temperatur/Impostazione dell'allarme temperatura/ 温度アラーム設定/Ajustes de alarma de temperatura

1. Press menu button  to access menu. choose  and press 
2. Press  and press OK
2. Navigate with  to select the desire scale.
3. Press menu button  to exit menu.










4.7.3 Time and time format setting/Paramètres de format d'heure et d'heure/ Einstellen Von zeit und zeitformat/Impostazioni ora e formato ora/ 時間と時間フォーマット設定/Formato de tiempo y tiempo

1. Press menu button  to access menu, choose  and press .
2. Press  and press OK
2. Navigate with  to select the desire format, and set the time.
3. Press menu button  to exit menu.







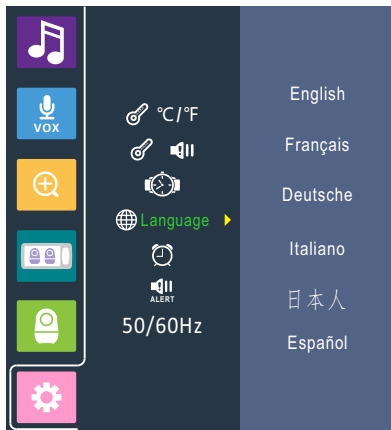


4.7.4 Language setting/Paramètres de langue/Ändert die einstellungen/ Impostazioni linguistiche/言語設定/Configuración del idioma

1. Press menu button  to access menu. choose  and press 
2. Press  Language and press OK
3. Navigate with  to select the camera you want to delete.
4. Press menu button  to exit menu.







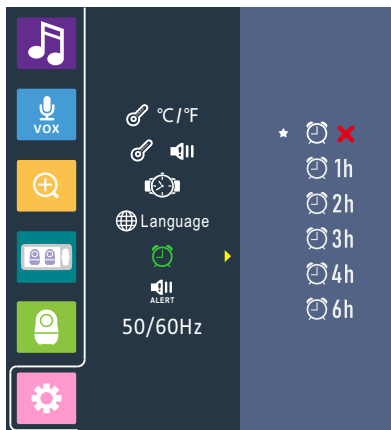


4.7.5 Timer setting/Réglage du minuteur/Timer einstellen/Timer-Einstellung/ タイマー設定/Configuración del temporizador

1. Press menu button  to access menu. choose  and press 
2. Press  and press OK
3. Navigate with  to select the desire time.
4. Press menu button  to exit menu.





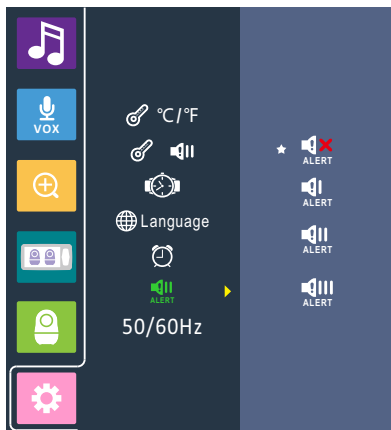


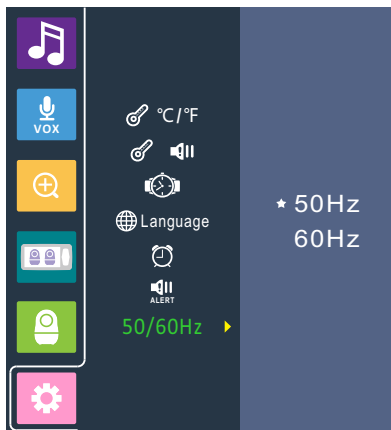
4.7.6 Warning alert volume setting/Réglage du volume de l'alarme/ Einstellung der Alarmlautstärke/Impostazione del volume dell'avviso 警報音量設定/Ajuste del volumen de la alarma

1. Press menu button  to access menu, choose  and press .
2. Press  and press OK
2. Navigate with  to select the desire alert volume.
3. Press menu button  to exit menu.




4.7.7 Frequency setting/réglage de la fréquence/Einstellung der Frequenz/ Impostazione della frequenza/周波数設定/Ajuste de frecuencia

1. Press menu button  to access menu. choose  and press 
2. Press **50/60Hz** and press OK
3. Navigate with  to select the desire frequency.
4. Press menu button  to exit menu.



4.7.8 Volume adjustments/Réglage du volume/Lautstärkeregelung/Regolazioni del volume/
ボリューム調整/Ajustes de volumen

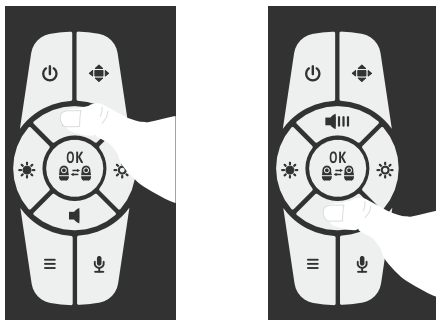




4.7.9 Switching between the paired baby unit (cameras) /basculer entre la caméra/
zwischen der Kamera wechseln/passare da una fotocamera all'altra/カメラの間を切り替える/
cambiar entre la cámara

Briefly press the  button(8) on your parent unit




4.7.10 Scan mode-automatic switching between the paired baby unit/mode de balayage/ Scan-Modus/modalità di scansione/スキャンモード/modo de escaneo

1. Press and hold  button(8)to activate the automatic **SCAN** mode.
2. Press  button to deactivate the scan menu.

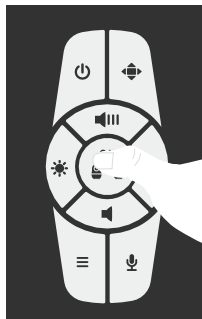

4.7.11 Talk to baby/Parler au bébé/Mit dem baby sprechen/Parla al bambino/赤ちゃんと話す/Hable al bebé

- Press and hold the  to talk to your baby
Release the button when you are finished

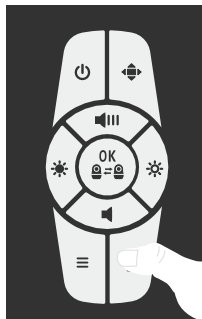

5.Troubleshooting/dépannage/Fehlerbehebung/Risoluzione dei problemi relativi/トラブルシューティング/solución de problemas/

Problem	Possible cause/solution
No reception on the parent unit	<ul style="list-style-type: none"> • The power adapters may not be properly connected. • Ensure that the baby and parent units are on. • Adjust the monitor antenna to vertical position. • Make sure the baby and parent units are not far away from each other. • Baby and parent units may not be properly paired. Follow pairing instructions.
Interference or poor reception	<ul style="list-style-type: none"> • Move the baby unit closer to parent unit. • Use of other 2.4GHz product, such as wireless networks(Wi-Fi routers), Bluetooth systems, or microwave ovens, may cause interference with this product, so keep the baby monitor at least 5ft(1.5m)away from these types of products or turn them off if they appear to be causing interference. • The baby or parent units may be too close to metal objects. • The battery power may be too low.
Image frozen on the parent unit	<ul style="list-style-type: none"> • Restart the baby unit(unplug the power adapter from the wall outlet, wait for approx 5 seconds and plug it back into the wall outlet). • Reset the parent unit by pressing the Reset button(16), located at the back of the parent unit, under the stand.
A high-pitched is heard from the unit (feedback, static)	<ul style="list-style-type: none"> • The baby unit and parent unit may be too close to each other. Move them further apart. • THE volume on the parent unit may be set too high. Lower the volume.
Cannot hear the baby sounds on the parent unit	<ul style="list-style-type: none"> • Volume setting on the parent unit may be too low. Increase the volume. • Battery power may be too low. Recharge the battery.
Background noises	<ul style="list-style-type: none"> • In a quiet environment, surrounding the parent unit, decrease the volume on your parent unit to level 3 and below • In a loud environment, surrounding the parent unit, increase the volume to the maximum level.
Picture is black and white	<ul style="list-style-type: none"> • Automatic night vision mode may be on. Increase lighting around the camera to force monitor out of night vision mode.

5.Specifications/Spécifications/Spesifikationen/Le specifiche/規格/Especificación

Product Model	Sm50
Frequency	2.4GHz FHSS
Type of Modulation	GFSK
Transmission Power	18dBm Max
Operation Enviroment	In door use only; Temperature:32-104°F/0-40°C; Humidity:5% to 90% rh(relative humidity)
Transmission Range	Up to 900 feet(straight line and open space)
Power Adapter	Input: 100-240VAC 50/60Hz, 300mA Max; Output
LCD Screen	5.0 HD LCD(1280*720 pixels)
Rechargeable battery (pre-installed in parent unit)	3.7V, 4000mAh
Operating time with fully-charged battery (parent unit)	Up to 10 hours(VOX on)
Image Sensor Type	940nm

6.Maintenance and Warranty/entretien et garantie/Wartung und Garantie/manutenzione e garanzia/メンテナンスと保証/Mantenimiento y garantía

6.1 Maintenance

All of the following maintenance procedures should only be performed when baby and parent units are unplugged and off

Clean the surfaces of the baby and parent units with a soft, fluff-free cloth.

Never use cleaning agents or solvents.

If the units become dirty, use a lightly damp cloth to wipe surfaces, taking care not to allow water into any openings.

6.2 Warranty terms

We take quality very seriously. This is why all of our products come with three months warranty (replace or refund) and lifetime technical support from the original purchase date against defects in workmanship and materials. The warranty terms do not apply to any product that has been subject to abuse, misuse, negligence or accident. Defects caused by this warranty.

If you have warranty or support issues, please contact the customer service of Amazon seller before leaving your review.

7.Information on disposal of product/informations sur l'élimination du produit/Informationen zur Entsorgung des Produkts/informazioni sullo smaltimento del prodotto/製品の廃棄に関する情報/Información sobre el procesamiento de productos

Always dispose of your product (with the non-removable pre-installed battery) at the end of their life in an environmentally responsible way and in accordance with your local waste disposal requirements.

All cardboard and paper packaging materials should be recycled in accordance with your local council waste regulations.

All rights reserved

The features described in user's manual are subject to modifications without prior notice.



WARNING:

Keep the small parts away from children

Printed in China

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.