

ANMEATE

BABY MONITOR SM650

(Digital Wireless Video Baby Monitor With 5.0 inches Color Screen)

USER MANUAL



CATCH EVERY PRECIOUS MOMENT OF YOUR BABY

Thanks for Choosing ANMEATE:)

We provide 24h Professional Service Center.

Lifetime Manufacturer's Technical Support.

And 30 Days Money-Back Service.

Ensures Long-lasting Enjoyment of Your Purchase.

If you have any questions, feel free to contact us.

Scan the QR Code & Start Chatting

USE YOUR PHONE
CAMERA TO SCAN ME

support@anmeate.com



Congratulation!

Now you can take care of your babies anywhere and anytime!

Please read the user manual before use!

Please retain your original dated sales receipt for your records.

For warranty service of your baby monitor, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

Before you use the product, we recommend you fully charge the battery in the parent unit, so that it continues to work so that it continues to work even when disconnected from the power supply for transferring to another location.

Please read the safety instructions.

Please make sure you have the following in the packing.

1. Parent unit x 1
2. Baby unit x 1
3. Adapter x 2
4. User manual x 1

CONTENT

1.SAFETY INSTRUCTIONS	-----	1-2
2.PRODUCT OVERVIEW	-----	3
2.1 Package list	-----	3
2.2 Parent unit(monitor)	-----	4-5
2.3Baby unit(camera)	-----	6
2.4 Icon overview	-----	6
3. USING THE BABY MONITOR	-----	7-8
4. FUNCTION OVERVIEW	-----	9
4.1 Vox setting	-----	9
4.2 Feeding timer setting	-----	10
4.3 Lullaby setting	-----	11
4.4 Pairing the camera and monitor	-----	12
4.5 Delete the camera	-----	13
4.6 Temperature settings	-----	14
4.6.1 Temperature alarm setting	-----	14
4.6.2 Temperature Hi/Lo alert limits	-----	15
5. TECHNICAL DATA	-----	16
5.1 System general	-----	16
6. TROUBLE SHOOTING	-----	17-18
FCC STATEMENTS	-----	19

1. SAFETY INSTRUCTIONS :

CAUTION: Keep small parts away from children.

Strangulation Hazard: Children can become entangled in cords. Power cords should be kept more than 3 feet away from the crib and baby's reach all the time. Baby monitors and cameras with power cords should never be hung on or near the crib. This product is not a toy and should be kept out of children's reach. This product contains small parts. Be care when unpacking and assembling the product.

Read and keep instructions: All the safety and operating instructions should be read before the video baby monitor is operated.

This product cannot replace responsible adult supervision.

Water and moisture: This product is designed for indoor use only. The unit should not be exposed to rain, moisture, dripping or splashing. No objects filled with liquid should be placed on top of, or beside the product, such as a glass or vase. This item should not be used near water.

DO NOT USE THE APPLIANCE:

- If the cord or plug is damaged.
- If your baby monitor is not operating properly or has suffered any damage.

Contact service: The service center to request inspection and repair it in order to avoid any possible risk.

DO NOT: Attempt to repair or adjust any of the electrical or mechanical functions of the unit since, if you do, the guarantee will be made void.

Ventilation: This baby monitor should not be used on a bed, sofa, rug or similar surface that may block the ventilation openings, or be placed in an

enclosed area, such as a bookcase or drawer that may impede air flow.

Keep away from sources of heat: This unit should not be exposed to direct heat sources such as a candle, replace, radiator, heat register, stove or other appliance that emits heat. The unit should not be left in direct sunlight.

Power source: This unit should only be used with the adapter included in this package.

Damage requiring service: This unit should be serviced by qualified personnel.

 **WARNING:** IR emitted from this product. Do not stare at operating lamp !!
 **CAUTION:** RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

2. PRODUCT OVERVIEW**2.1 Package List**

Baby unit x 1



Parent unit x 1




Adapter x 2



User manual x 1

2.2 Parent Unit (Monitor)

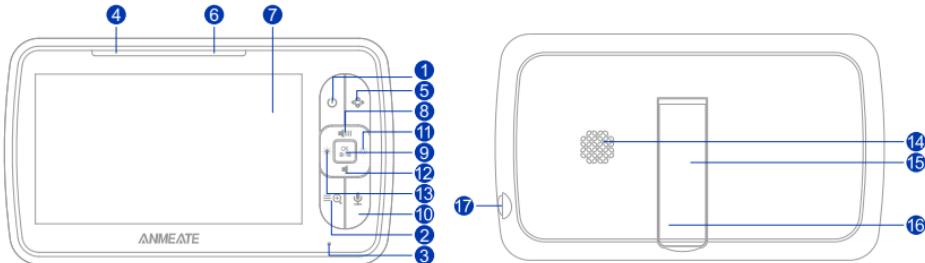

① Power key:

Long press to turn on / off the monitor ; short press to screen on / off

② Menu/Exit:

Press short Menu / Exit key the menu will pop up, and press again to EXIT.

③ MIC:

When talking to the baby, collect the voices of the parents.

④ Power&Charging Indicator LED:

*The LED shows red when charging when the display is off.

*The LED displays shows green and red when charging under the power-on state.

*The LED displays shows green after the battery is fully charged.

⑤ Pan/Tilt

Needs to press this button first to adjust the direction of the camera.

⑥ Volume LED:

When the baby unit detects the voice, the indicator light will be on, The louder the detected sound, the more lights will light up.

⑦ LCD screen:

Display the baby's picture and the adjustment of each button function

⑧ Volume + / Up key:

Press the UP key to increase the volume.

⑨ OK:

Press OK key to view / scan camera or to confirm.

⑩ Talk to baby:

*To talk , press and hold the talk key on the front of the monito; release to turn it off.

*Bear in mind that you can't listen to your baby whilst you're talking to them ; to listen to it , you will have to stop pressing this button.

⑪ Brightness + / Right key:

Press the Right key to increase the brightness.

⑫ Volume - / Down key:

Press the DOWN key to decrease the volume

⑬ Brightness - / Left key:

Press the Left key to decrease the brightness.

⑭ Speaker:

Hear the sound from the baby.

⑮ Stand:

Monitor placement stand

⑯ Reset key (under stand):

Long press the reset button with a pin to reset the display


⑰ DC-jack:

Charge the monitor by connecting the Power Adapter to the monitor and a socket

Note:

If you want to adjust the Volume/Brightness, you have to exit the Zoom mode before your operate it.

2.3 Baby Unit (Camera)

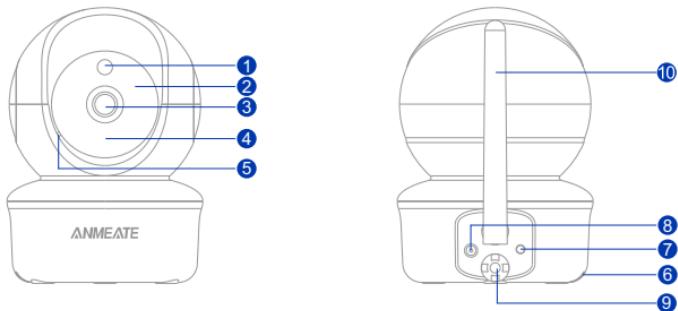

- ① Light sensor
- ② infrared LEDs
- ③ CMOS sensor
- ④ Power LED
- ⑤ MIC

- ⑥ Speaker
- ⑦ Pair key
- ⑧ DC-Jack
- ⑨ Temperature sensor
- ⑩ Antenna


2.4 Icons Overview:

	Signal		Volume		Zoom
	Alarm		Brightness		Night vision
	Lullaby		VOX		Talk to baby
	Camera		Battery		Temperature

3. USING THE BABY MONITOR


Step1:

Charge the monitor by connecting the A/C adapter included in this package to the monitor and a socket . It takes about 4 hours for the monitor to be fully charged.

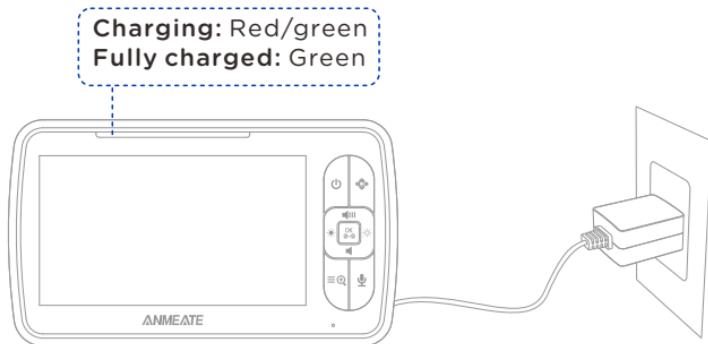

Step2:

Use the provided AC adapter included in this package to connect the wall outlet with the baby unit.

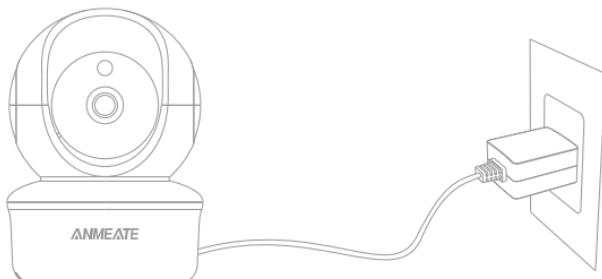

Step3:

Place the camera at least 3ft / 1m away from your baby. Gently press and hold the Power Button for 3s to turn on the monitor, then you can see the live view.

Step4:

Follow your needs to adjust the sound, brightness, and reasonable placement of the camera.

Note:

To use the baby monitor, you must be able to establish a radio link between the monitor and camera, and the range will be affected by environmental conditions:

*Any large metal object, like a refrigerator, a mirror, a filling cabinet, metallic doors or reinforced concrete between the baby and parent unit may block the radio signal.

*The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TV, computers, cordless or mobile phones, fluorescent lights or dimmer switches.

*When using the other 2.4GHz product, such as wireless networks (Wi-Fi routers), Bluetooth systems, or microwave ovens, may cause interference with this product, so keep the baby monitor away at least 5ft(1.5m) from these type products.

4. FUNCTION OVERVIEW

4.1 VOX SETTING

This mode allows you to control the sound activation of your baby monitor.


The VOX default setting is OFF. If there is no sound around the camera within 30 Seconds, it will stop transmitting.

The monitor screen turns off when the camera is not transmitting.

When the camera detects the sound is louder than set sensitivity level, it will start transmitting the signal to the monitor again change the VOX level, please follow the next instructions:

Step1:

Press the Menu / Exit key  and the menu will pop up.

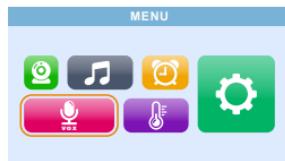

Step 2:

Select the VOX icon  and press OK key  to enter into sub-menu.



Step 3:

Press OK key  to confirm.

Step 4:


Press the Menu / Exit key  to Exit.

4.2 FEEDING TIMER SETTING

You can use the alarm to remind yourself to feed baby/change diapers/sleep,etc

Step1:

Press Menu / Exit key  and the menu will pop up.

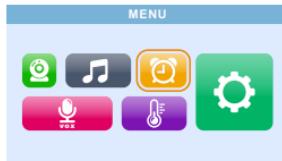

Step2:

Select the alarm icon  and press OK key  to enter into sub-menu.

Step3:

Press the NAVIGATION key to select desired alert time.

Step4:

Press OK key  to confirm.

Step5:

Press the Menu / Exit key  to Exit.



Tip:


If the alarm is ringing and no one to answer, then the ringing will last 1 minute and then stop, after 3 minutes the ringing will start again. The ringing will sound up three times total if no one answer.

4.3 LULLABY SETTING

You can soothe the baby to sleep by playing a gentle lullaby from the baby unit.

Step1:

Press Menu / Exit key  and the menu will pop up.

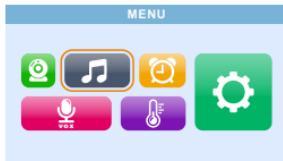

Step2:

Select the lullaby icon  and press OK key  to enter into sub-menu.



Step3:

Press the NAVIGATION key to select desired alert time.

Step4:

Press OK key  to confirm.


Step5:

Press the Menu / Exit key  to Exit.

4.4 PAIRING THE CAMERA AND MONITOR

Step1:

Press Menu / Exit key  and the menu will pop up.

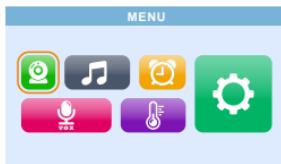

Step2:

Select the camera icon  and press OK key  to enter into sub-menu, press the LEFT key  or RIGHT key  to select the camera to be paired.



Step3:

Press OK key  to start the pairing . While the screen shows pairing then press the PAIR button  on the back of camera.



Step4:

Once paired , then the screen will display the image from the camera.


Step5:

If unsuccessful, please repeat above steps.

4.5 DELETE THE CAMERA

Step1:

Press Menu / Exit key  and the menu will pop up.

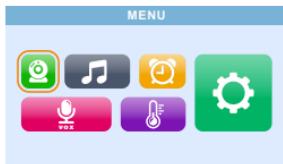

Step2:

Select the camera icon  and press OK key  to enter into sub-menu, press the LEFT key  or RIGHT key  to select the camera to be canceled.



Step3:

Press OK key  and select the icon.



Step4:

Select YES, the camera will be deleted.



4.6 TEMPERATURE SETTINGS

4.6.1 Temperature Alarm Setting


Step1:

Press Menu / Exit key  and the menu will pop up.



Step2:

Select the temperature icon  and press OK key  to enter into sub-menu.

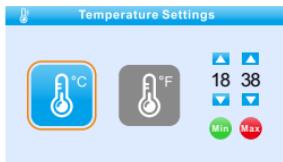

Step3:

Press the LEFT key  or RIGHT key  to select between °C or °F,
Follow up your needs to set the maximum and minimum alarm temperatures.

Step4:

Press OK key to  confirm.

Step5:


Press the Menu / Exit key  to Exit.

4.6 TEMPERATURE SETTINGS

4.6.2 Temperature Hi/Lo Alert Limits

Step1:

Press LEFT key ☼ or RIGHT key ☼ to select Max (red) or Min (green) for Hi/Lo limits settings.

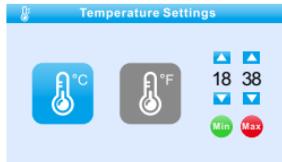

Step2:

Press the up key/down key to adjust the Hi limit when Max (red) is selected.

Step3:

Press the up key/down key to adjust the Lo limit when Min (green) is selected.

Note:

Press OK The high temperature alarm default setting is 31°C, and the low temperature alarm default is 14°C. When the temperature goes above or below the settings, the temperature icon will display on the screen, It will alert user by beeps. Press any key on the parent unit to stop beeping and flashing.

5. TECHNICAL DATA

5.1 System General

Frequency	2.4GHz FHSS
Operation Environment	Indoor use only; Temperature: 0-40 °C ; Humidity: 5% to 90% rh. (relative humidity)
Operating Range	Up to 900 feet (straight line and open space)
Power adapter	Input: 100-240VAC 50 / 60Hz, 300mA Max Output: 5V, 700mA
LCD	5.0" LCD Screen
Rechargeable battery for monitor	Model: 503450; 3.7V, 2100 mAh
Operating time with battery fully charged (parent unit)	Up to 12 hours (VOX on)
Image sensor type	1/6.5" Color CMOS image sensor
IR LED Type	940 nm

6. TROUBLE SHOOTING

Q1. Why the camera can't be paired with the monitor?

- *the camera is properly connected to the power supply, try to replace the charging cable and charger and try again.
- *Make sure the camera and the monitor are within the effective transmission distance.
- *Press the reset key at the back of Parent unit and try to pair them again

Q2. Why are the camera and display always disconnecting?

- *The camera or monitor may be placed too close to many metal objects.
- *Other electronic devices may be interfering with the signal.
- *The battery power may be too low.
- *Restart Baby unit and Parent unit.
- *Press the reset key at the back of Parent unit.

Q3. Why is there a harsh noise coming from the device?

- *The camera and monitor may be too close together.
- *The volume on the monitor may be set too high.
- *Press the reset key at the back of Parent unit.

Q4. Why I can't hear the baby on the parent unit?

- *Turn up the monitor volume.
- *Turn on Sound Alarm on the monitor, then speak loudly near the camera, and check whether the sound detection indicator in the lower right corner will light up.

Q5.What should I do if the picture on the display frozen?

Restart the baby unit (plug out the adapter then plug it into the socket again). Press the reset key at the back of parent unit (hide behind the stand).

Q6.Why the temperature is inaccurate?

- *The temperature sensor is positioned very close to the baby unit and when it warms up during operation.
- * Stretch out the sensor so it would be far enough from the baby unit, Place the baby unit in an area with good air circulation
- * If the above strategies do not work, restart the parent unit

Tip:

If the above suggestions can't help you solve the problem, contact us for professional solutions. Any questions or problems let us know!



CUSTOMER SUPPORT

If you encounter any problems in the process of using the product, please feel free to contact us, we will reply to you within 24 hours and resolve the issue in a way that satisfies you.

Customer service e-mail address:

support@anmeate.com

ANMEATE

Live Chat Support

Learn more about ANMEATE, please visit us at



<https://anmeate.com>



Or
Scan QR Code &
Send to us



Printed in China

support@anmeate.com

www.anmeate.com

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.