 



size: 199.6\*114.6 mm

## 7" HD screen video baby monitor

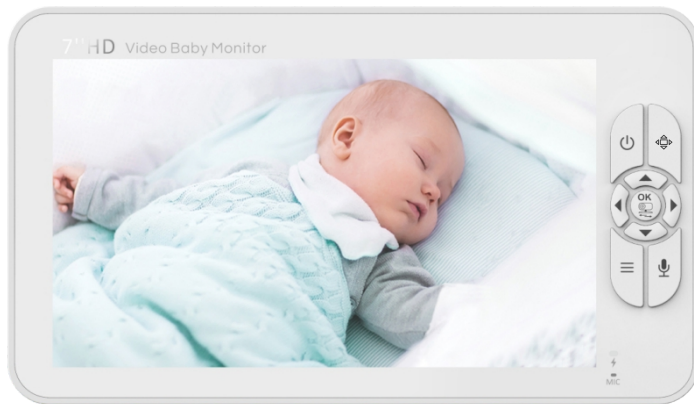
 
### WARNING:

Keep this cord out of reach of children.  
The cord needs to be at least three feet  
away from the child at all times.  
Do not use with an extension cord.  
Do not remove this tag.  
Children have STRANGLED in cords.

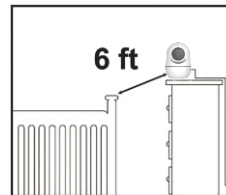



## Content

 
1. WARNING AND SAFETY INSTRUCTIONS	1-2
2. PRODUCT OVERVIEW	3
2.1 Parent unit overview	3
2.2 Baby unit overview	3
2.3 Icon overview	3
2.4 Product list	4
3. POWERING ON YOUR PRODUCT	4
4. USING THE BABY MONITOR	5
4.1 Music setting	5
4.2 VOX setting	5
4.3 Zoom in/out setting	6
4.4 Split screen	6
4.5 Add camera	7
4.6 Delete camera	7
4.7 Temp unit setting	8
4.8 Temp alert setting	8
4.9 Time Setting	9
4.10 Language setting	9
4.11 Timer setting	10
4.12 Alert volume setting	10
4.13 Frequency setting	11
5. TROUBLE SHOOTING	12
6. TECHNICAL DATA	13-15
7. FCC REQUIREMENT	16
8. MAINTENANCE AND WARRENTY	16

## 1. WARNING AND SAFETY INSTRUCTIONS

Follow these safety precautions to prevent fire, injury or damage to the product.

Read and keep instructions: it is very important that you read all the safety and operating

Warnings:

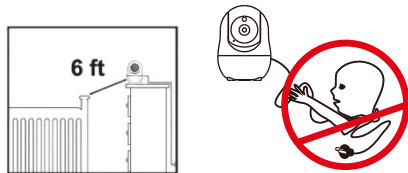

**STRANGULATION HAZARD:** Children can become entangled in cords. Make sure the baby unit, parent unit and mains adapter cables are kept out of reach of you baby and other young children at all times, at least 6 feet away.

**CHOKING HAZARD:** This product contains small parts which may cause choking. Exercise care when unpacking and assembling the product and keep the small parts away from children.

**RISK OF SUFFOCATION:** Keep all packaging materials and protective foils out of reach of children.

**DANGER FROM POWER CORDS:** To avoid possible danger from power cords the cords should be secured and never be hung on or near the crib. Never place the baby unit or parent unit inside your baby's crib, bed or playpen.

**DO NOT HANDLE ROUGHLY, DROP OR THROW:** Baby monitor is a high-quality electronic device which must be handled with care.

**WATER AND MOISTURE:** The product should not be exposed to rain, moisture, or splashing. Never use or place the product in or near moisture or water.

**THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION:** Your video monitor is designed to be an aid and should not be used as a substitute for responsible and proper adult supervision of a child.

**VENTILATION:** This product should not be used on a bed, sofa, rug or similar surface that may block the ventilation or speaker openings, or be placed in an enclosed area, such as a bookcase or drawer that may impede air flow. Never cover the product with clothes, towels, blankets or any other item.

**THIS PRODUCT IS NOT A TOY:** It should be kept out of children's reach.

**KEEP AWAY FROM SOURCES OF HEAT:** This unit should not be exposed to direct heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat. The unit should not be

left in direct sunlight.

**BATTERY:** Before you use the product, we recommend you fully charge the battery of the parent unit, so that it continues to work if you disconnect it from the power supply to carry it to another location.

**INSTALLATION LOCATION:** The installation location plays an important role in ensuring proper operation. Therefore, maintain a distance of at least 5 feet from other electronic equipment, such as microwave ovens or Wi-Fi routers, otherwise they could cause interference. If this occurs, move the baby and parent units to another location.

**RANGE:** Range of all baby monitor is always measured in an open space. The actual range may be shortened due to environmental obstacles (such as concrete walls).

**DAMAGE REQUIRING SERVICE:** This product should be serviced by qualified personnel only.

**DO NOT TRY TO OPEN AND REPAIR THE PRODUCT:** If you have any problems with the product, please contact the authorized distributor. In case of unusual noises or smells originating from the device, immediately disconnect the product from the power outlet and contact authorized. If the product becomes dirty, use a lightly damp soft cloth to wipe surfaces, taking care to not allow water into any openings.

**IMPORTANT:** This baby monitor is designed only for hearing the baby's voice and seeing the images of the baby. This product is not a medical device and should not be used as a substitute for responsible adult supervision. It is important that you regularly check on your baby personally.

## 1.2 Safety Instructions for AC Power Adapter

The adapter should not be exposed to direct heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat.

During continual use, the power adapters may become warm to the touch. This is normal and should not be a cause of concern.

Examine intactness of the power cord and its plug.

The adapter must be handled with care: Do not handle roughly, drop or throw.

When removing the power adapter from the wall outlet, hold and pull from the receptacle.

Do not pull on the cable itself or bend the cable as that will put additional stress on the cable and could lead to damages.

Do not touch the power adapter with wet hands or allow liquids to spill on it.

Make sure the mains adapter cables are kept out of reach of your baby and other young children at all times.

To avoid possible danger from power cords, the cords should be secured and never be hung on or near the crib.

Do not replace the plugs or cable on your power adapter. This product should only be used with the AC power adapter supplied by the manufacturer, as included in this package.

Never cut, damage or bend the power cord.

Do not put any objects on top of the power cord, which could cause overheating, damage, combustion and electronic damage.

Do not leave the power adapter connected to the wall outlet when it is not plugged into the baby or parent unit.

### Warning

Do not replace the power cord with non-original substitutes. Improper connection may cause electrocution. Do not place the AC adaptor cable in a high wear and tear location. Never use a frayed or compromised cord.

intended for indoor use only.

## 1.3 Safety Instructions for Li-ion battery (Non removable pre-installed battery)

Do not attempt to repair or adjust any of the electrical or mechanical functions of the unit.

Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries.

If a battery leaks, do not let the battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, and seek medical assistance.

The battery should not be exposed to direct sunlight or heat sources such as a candle, stove, radiator, heat register or other appliance that emit heat.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use only the battery pack supplied with the product or the same type, sold by the manufacturer or its authorized distributors.

Improper use or use of unapproved batteries may present a risk of fire, explosion, or other hazards, and may invalidate the warranty.

If you believe the battery is damaged, remove product from the charge and stop using the product.

 
Never use a damaged battery.


## 1.4 Information on disposal of product

Always dispose of your product (with the non removable pre-installed battery) at the end of their life in an environmentally responsible way and in accordance with your local waste disposal requirements. All cardboard and paper packaging materials should be recycled in accordance with your local council waste regulations.

 
## 2.PRODUCT OVERVIEW

### 2.1 Parent unit overview:

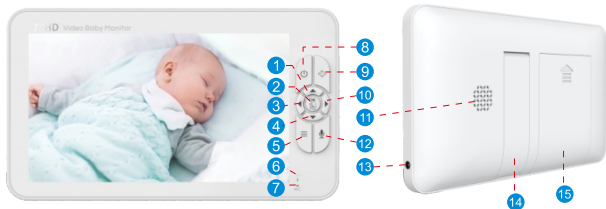





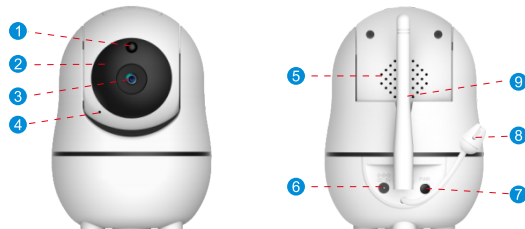





- 1 Volume up**  
Press Volume+ to increase the volume.
- 2 OK key**  
Press the OK key to confirm.
- 3 Brightness down**  
Press the Bright- to decrease the brightness.
- 4 Volume down**  
Press volume- to decrease the volume.
- 5 Menu**  
Short press the menu key the menu will pop up, and press again to Exit.  
Press and hold the Menu key around 2 seconds to operate Zoom in/out.
- 6 Power&Charging LED**  
\*The LED shows red when charging under the display is turn off state.  
\*The LED shows orange when charging under the turn on state.  
\*The LED shows green after the battery is fully charged.
- 7 Microphone**  
When talk to the baby, collect the voices of the parents.
- 8 Power key**  
Long press to turn on/off the monitor; short press to screen on/off.
- 9 Pan/Tilt**  
Press the key  to enter into the Pan/Tilt mode.
- 10 Brightness up**  
Press the Bright+ to increase the brightness.
- 11 Speaker**  
Hear the sound from the baby.
- 12 Talk to baby**  
To talk, press and hold the talk key on the front of the monitor.
- 13 DC jack**  
Charge the monitor by connecting the Power Adapter to the monitor and a socket.
- 14 Stand**  
Monitor placement stand.
- 15 Battery door**

### 2.2 Baby unit overview:



- |                          |                       |                               |
|--------------------------|-----------------------|-------------------------------|
| <b>1</b> - Light sensor  | <b>4</b> - Microphone | <b>7</b> - Pairing key        |
| <b>2</b> - Infrared LEDs | <b>5</b> - Speaker    | <b>8</b> - Temperature sensor |
| <b>3</b> - CMOS lens     | <b>6</b> - DC jack    | <b>9</b> - Antenna            |

### 2.3 Icon overview:

 
	----- Lullaby		----- Time Format
	----- VOX		----- Brightness
	----- Zoom		----- Timer
	----- Camera		ALERT ----- Alert Volume
	----- Setting	50/60Hz ----- Frequency Setting	
°C/°F ----- Temp C/F			----- Temp

## 2.4 Product list:

- Parent Unit x1
- Baby Unit(Camera) x1
- AC Power Adapter x2
- Screw Set x1
- Wall mount shim x1
- User Manual x1



Baby Unit

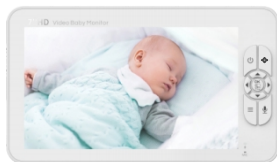

Parent Unit



User Manual



AC Power Adapter




Wall mount shim



Screw Set

## 3. POWERING ON YOUR PRODUCT

 **Step1:** Charge the baby unit

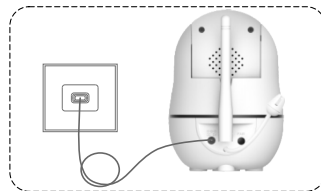




**Step2:** Press  for two seconds to Power on the parent unit.



**Step3:** Set the parent unit to prepare for connecting.




 **Step4:** Press the PAIR button for two seconds until it has been paired (the  symbol appears before ).

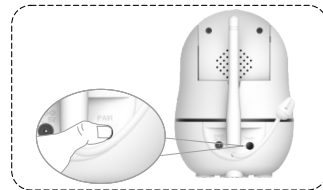

**NOTE:** If the baby unit and parent unit has been connected, the steps 3 and 4 are unnecessary.

## 4. USING THE BABY MONITOR

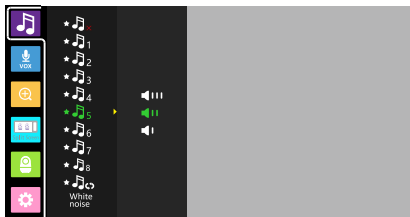 

ENGLISH: Music setting







日本語: 音楽設定

Deutsche: Musikeinstellungen

 
Français: Paramètres de musique

Italiano: Impostazioni della musica

Español: Configuración de música

1. Press menu button  to access menu.  
choose  and press 
2. select the lullaby you want to play and press 
3. Press the NAVIGATION key to select the duration and music volume.
4. In order to stop the lullaby playback, select 
5. Press menu button  to exit the menu.

NOTE: The lullaby default setting is off.

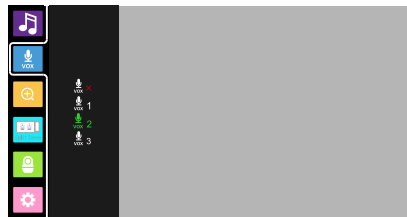

ENGLISH: VOX setting








日本語: VOX設定

Deutsche: VOX-Einstellungen

Français: Paramètres VOX

 
Italiano: Impostazioni VOX

Español: Configuración de VOX





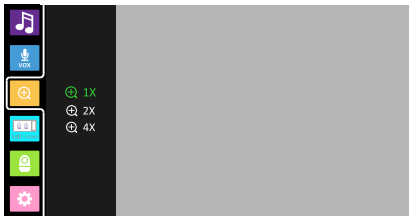


1. Press menu button  to access menu.  
choose  and press 
2. Press the UP key  or DOWN key  to select the VOX level.
3. Press  to confirm.
4. Press menu button  to exit the menu.

 
NOTE: To resume the video and audio signal manually on your parent unit when VOX function is on, briefly press any key on your parent unit.










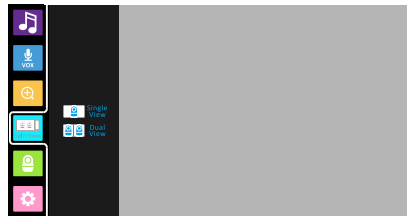

ENGLISH: Zoom in / out setting  
日本語: ズームイン/アウト設定  
Deutsche: Zoomeinstellung  
Français: Réglage du zoom  
Italiano: Impostazione dello zoom  
Español: Configuración de zoom

 
1. Press menu button  to access menu.  
choose  and press .
2. Press the UP key  or DOWN key  to select the magnification.
3. Press  to confirm.
4. Press menu button  to exit the menu.



ENGLISH: Split screen  
日本語: 画面を分割  
Deutsche: Geteilter Bildschirm  
Français: Écran divisé  
Italiano: Schermo diviso  
Español: Pantalla dividida

1. Press menu button  to access menu.  
choose  and press .
2. Press the UP key  or DOWN key  to select the desire options.
3. Press  to confirm.
4. Press menu button  to exit the menu.

 NOTE: This function is only available when two or more cameras are paired.

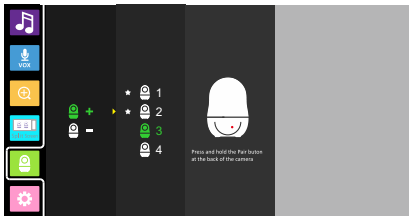

ENGLISH: Add camera








日本語: 送信機を追加する

Deutsche: Sender hinzufügen

 
Français: Ajouter un émetteur

Italiano: Aggiungi trasmettitore

Español: Agregar transmisor

1. Press menu button  to access menu.  
choose  and press .
2. Press the UP key  or DOWN key  to select the camera to be paired.
3. Press  to start the pairing, while the screen shows pairing then press PAIR button on the back of the camera.
4. Press menu button  to exit the menu.

NOTE: Before you begin pairing, make sure to have the baby and parent unit side by side and turned on.

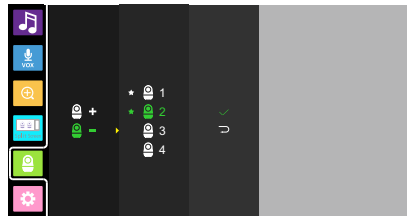

ENGLISH: Delete camera








日本語: 送信機を取り外します

 
Deutsche: Sender ausbauen

Français: Retirer l'émetteur

Italiano: Rimuovere il trasmettitore


Español: Quitar transmisor

1. Press menu button  to access menu.  
choose  and press .
2. Press the UP key  or DOWN key  to select the camera to be canceled.
3. Press  to confirm.
4. Press menu button  to exit the menu.

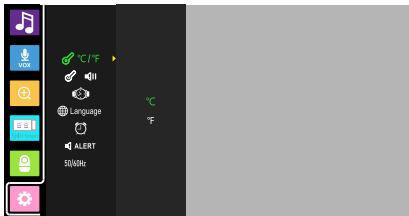


ENGLISH: Temp unit setting  
 日本語: 温度単位設定  
 Deutsche: Einstellung der  
 Temperatureinheit  
 Français: Réglage de l'unité de  
 température  
 Italiano: Impostazione dell'unità  
 di temperatura  
 Español: Ajuste de la unidad  
 de temperatura

  1. Press menu button to access menu.  
 choose and press
2. Select and press
3. Press the UP key or DOWN key to select °C or °F
4. Press to confirm.
5. Press menu button to exit the menu.

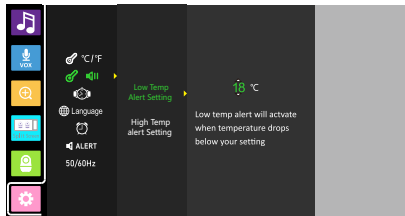





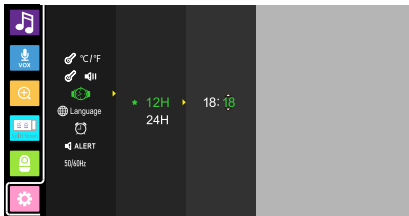




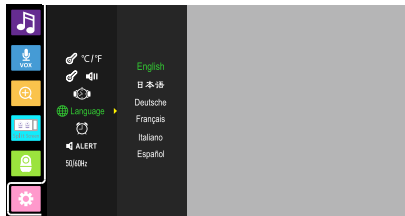 
ENGLISH: Temp alert setting  
 日本語: 温度アラーム設定  
 Deutsche: Temperatur  
 alarmeinstellung  
 Français: Réglage de l'alarme  
 de température  
 Italiano: Impostazione del  
 l'allarme di temperatura  
 Español: Ajuste de alarma  
 de temperatura

1. Press menu button to access menu.  
 choose and press
2. Select and press
3. Press the UP key or DOWN key to set the maximum and minimum alarm temperatures.
4. Press to confirm.
5. Press menu button to exit the menu.












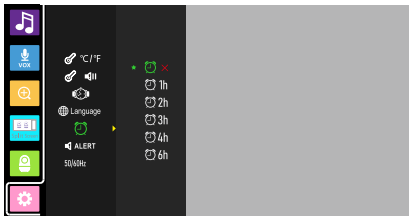 
ENGLISH: Time setting  
日本語: 時間設定  
Deutsche: Zeiteinstellung  
Français: réglage de l'heure  
Italiano: impostazioni orario  
Español: configuracion de hora

1. Press menu button  to access menu.  
choose  and press .
2. Select  and press .
3. Press the UP key  or DOWN key  to select 12H or 24H
4. Press  to confirm.
5. Press menu button  to exit the menu.



 
ENGLISH: Language setting  
日本語: 言語設定  
Deutsche: Spracheinstellungen  
Français: Paramètres de langue  
Italiano: Impostazione della lingua  
Español: Configuración de idioma

1. Press menu button  to access menu.  
choose  and press .
2. Select  and press .
3. Press the UP key  or DOWN key  to select the language.
4. Press  to confirm.
5. Press menu button  to exit the menu.




ENGLISH: Timer setting  
 日本語: タイマー設定  
 Deutsche: Timer-Einstellung  
 Français: Réglage de la minuterie  
 Italiano: Impostazione del timer  
 Español: Ajuste del temporizador

1. Press menu button to access menu.  
 choose and press
2. Select and press
3. Press the UP key or DOWN key to select the desired alert time.
4. Press to confirm.
5. Press menu button to exit the menu.

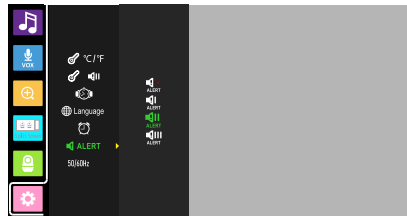


ENGLISH: Alert volume setting  
 日本語: アラーム音設定  
 Deutsche: Alarmtoneinstellung  
 Français: Réglage du son de l'alarme  
 Italiano: Impostazione del suono di allarme  
 Español: Configuración de sonido de alarma

 1. Press menu button to access menu.  
 choose and press
2. Select and press
3. Press the UP key or DOWN key to select the desired alert volume.
4. Press to confirm.
5. Press menu button to exit the menu.

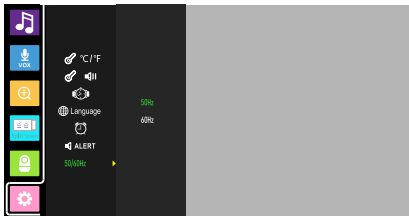

ENGLISH: Frequency setting  
 日本語: 周波数設定  
 Deutsche: Frequenzeinstellung  
 Français: Réglage de la fréquence  
 Italiano: Impostazione della  
 frequenza  
 Español: Ajuste de frecuencia

 1. Press menu button to access menu.
- choose and press .
2. Select **50/60Hz** and press .
3. Press the UP key or DOWN key to select **50Hz** or **60Hz**.
4. Press to confirm.
5. Press menu button to exit the menu.

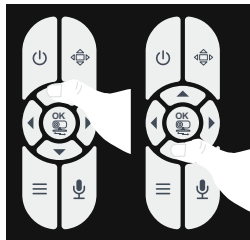

#### Volume/Brightness adjustments

Press or to increase/decrease the sound of the parent unit  
 Press or to increase/decrease the brightness of the parent unit



#### Switching between the paired baby unit

Briefly press the switch button on your parent unit



#### Scan mode

Press and hold the button to activate the automatic scan mode  
 Press the button to deactivate the scan mode



#### Talk to baby

Press and hold the button to talk to your baby  
 Release the button when you are finished talking

## 5.TROUBLE SHOOTING

Trouble shooting	
No reception on the Parent Unit	<ul style="list-style-type: none"><li>● The power adapters may not be properly connected.</li><li>● Ensure that the Baby and Parent Units are ON.</li><li>● Make sure the Baby Unit and Parent Unit are not far away from each other.</li><li>● Baby Unit and Parent Unit may not be properly paired. Follow PAIRING instructions</li></ul>
Interference or poor reception	<ul style="list-style-type: none"><li>● Move the Baby Unit closer to Parent Unit.</li><li>● The Baby or Parent Unit may be too close to metal objects.</li><li>● Other electronic devices may be interfering with the signal.</li><li>● The battery power may be too low.</li></ul>
Image frozen on the Parent Unit	<ul style="list-style-type: none"><li>● Restart the Baby Unit (pull out the power adapter from the wall outlet, wait for approx. 5 seconds and plug it back in).</li><li>● Reset the Parent unit by opening the battery compartment and disconnecting the battery. wait for 30 seconds and then reconnect the battery.</li></ul>

A high pitched ear piercing noise is heard from the units (feedback, static)	<ul style="list-style-type: none"><li>● The Baby Unit and Parent Unit may be too close to each other, move them further apart.</li><li>● The volume on the Parent Unit may be set too high.</li></ul>
Cannot hear the baby sounds on the Parent Unit	<ul style="list-style-type: none"><li>● Volume setting on the Parent Unit may be too low. Increase the volume.</li></ul>
Background noises	<ul style="list-style-type: none"><li>● In a quiet environment surrounding the Parent Unit, decrease the volume on your Parent Unit to level 3 and below.</li><li>● In a loud environment surrounding the Parent Unit, increase the volume on your Parent Unit to the maximum level.</li></ul>
If above tips are not help; maybe the system crashed, please disconnect the battery and the power adapter with your unit; then plug in it again and turn your unit	

## 6. TECHNICAL DATA SHEET

### English

Technical data sheet	
Frequency	2.4GHz
Type of modulation	GFSK
Transmission range	Up to 960 feet/300 meters(Open space -No obstructions)
Input voltage	5V, 1/1.2A
Power adapter	Input: 100-240VAC 50/60Hz, 200mA Max
LCD screen	7"HD TFT LCD(1024*600 Pixels)
Rechargeable battery	Model: YB905560 3.7V, 4000mAh
Transmission Power	18dB
Image sensor type	1/4" Color CMOS
IR LED Type	940 nm
Operating environment	Indoor use only; Temperature: 32-104F / 0-40 °C; Humidity: 5%-90%rh(relative humidity)

### 日本語

テクニカルデータシート	
周波数	2.4GHz
変調のタイプ	GFSK
送信範囲	最大960フィート/ 300メートル (オープンスペース-障害物なし)
入力電圧	5V, 1/1.2A
電源アダプタ	Input: 100-240VAC 50/60Hz, 200mA Max
液晶画面	7"HD TFT LCD(1024*600 Pixels)
充電式バッテリー	Model: YB905560 3.7V, 4000mAh
送電力	18dB
イメージセンサー	1/4" Color CMOS
IR LEDタイプ	940 nm
操作環境	屋内使用のみ。温度: 32-104 F / 0-40 °C; 5%-90%rh (相対湿度)



## Deutsche

Technisches Datenblatt	
Frequenz	2.4GHz
Reichweite	GFSK
Übertragungsbereich	Up to 960 feet / 300 meters(Open space - No obstructions)
Eingangsspannung	5V, 1/1.2A
Netzteil	Eingang:100-240VAC 50/60Hz,200mA
LCD-Display	7" HD TFT LCD (1024*600 Pixels)
Ladebatterie	Modell:YB905560 3.7V, 4000mAh
Sendeleistung	18dB
Typ Bildsensor	1/4" Color CMOS
Typ IR LED	940 nm
Arbeitsumgebung	Nur für Nutzung im Innenraum, Temperatur: 0–40 °C Feuchtigkeit: 5–90 % (relative Feuchtigkeit)

## Français

Fiche technique	
Fréquence	2.4GHz
Type de modulation	GFSK
Portée de transmission	Jusqu'à 960 pieds/300 mètres (espace ouvert – sans obstacles)
Tension d'entrée	5V, 1/1.2A
Adaptateur secteur	Entrée:100-240VAC 50/60Hz,200mA Max
Écran LCD	7" HD TFT LCD (1024*600 Pixels)
Batterie rechargeable	Modèle:YB905560 3.7V, 4000mAh
Puissance de transmission	18dB
Capteur d'image	1/4" Color CMOS
Type de LED infrarouge	940 nm
Environnement de fonctionnement	Utilisation uniquement à l'intérieur. Température de fonctionnement : de 32 à °104F, soit de 0 à °40C. Humidité : de 5 à 90 % d'humidité relative.

## Italiano

Scheda tecnica	
Frequenza	2.4GHz
Tipo di modulazione	GFSK
Raggio d'azione	Sino a 960 piedi / 300 m (spazio aperto – senza ostacoli)
Tensione d'ingresso	5V, 1/1.2A
Adattatore di alimentazione	Entrata:100-240VAC 50/60Hz,200mA Max
Schermo LCD	7" HD TFT LCD (1024*600 Pixels)
Batteria ricaricabile	Modello:YB905560 3.7V, 4000mAh
Potenza di trasmissione	18dB
Tipo di registratore di immagini	1/4" Color CMOS
Tipo dei LED infrarossi	940 nm
Ambiente di utilizzo	Solo per uso interno; Temperatura: °104-32F / °40-0C ; Umidità: dal %5 al %90 rh. (umidità relativa)

## Español

Ficha técnica	
Frecuencia	2.4GHz
Tipo de modulación	GFSK
Rango de transmisión	Hasta 960 pies / 300 metros (espacio abierto – sin obstáculos)
Voltaje de alimentación	5V, 1/1.2A
Adaptador de alimentación	Entrada:100-240VAC 50/60Hz,200mA Max
Pantalla LCD	7" HD TFT LCD (1024*600 Pixels)
Batería recargable	Modelo:YB905560 3.7V, 4000mAh
Potencia de transmisión	18dB
Tipo de sensor de imagen	1/4" Color CMOS
Tipo de LED IR	940 nm
Ambiente de operación	Solamente para uso en interiores; Temperatura:32-104°F / 0-4-°C Humedad: %5 a %90 (humedad relativa)

---

## 7. FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## 8. Maintenance and Warranty

### 8.1 Maintenance

All of the following maintenance procedures should only be performed when baby and parent units are unplugged and off.

Clean the surfaces of the baby and parent units with a soft, fluff-free cloth.

Never use cleaning agents or solvents.

If the units become dirty, use a lightly damp cloth to wipe surfaces, taking care not to allow water into any openings.

### 8.2 Warranty terms

We take quality very seriously. This is why all of our products come with three months warranty (replace or refund) and lifetime technical support from the original purchase date against defects in workmanship and materials. The warranty terms do not apply to any product that has been subject to abuse, misuse, negligence or accident. Defects caused by this warranty. If you have warranty or support issues, please contact the customer service of Amazon seller before leaving your review.

### 8.3 Information on disposal of product

Always dispose of your product (with the non-removable pre-installed battery) at the end of their life in an environmentally responsible way and in accordance with your local waste disposal requirements. All cardboard and paper packaging materials should be recycled in accordance with your local council waste regulations.



