

Smart Portable Projector Instructions

Remoter

Power

HOME

OK

Left

Bluetooth audio key

Mute

Volume-

Flying mouse

Focus camera

Setting

Page up

Right

Page down

Return

Volume +

Serial No	Material name	Unit	QTY
1	Charger	PCS	1
2	User Manual & Warranty card	PCS	1
3	Remote controller	PCS	1
4	Projector	PCS	1

The diagram shows the back of the HP Z800 G2 Mini PC. On the left, a vertical view shows the bottom edge with the following ports from left to right: HDMI, DC-IN, a small circular port, and USB2.0. On the right, a horizontal view shows the top edge with a circular feature labeled 'TOF Focus'.

Set up network

Before initial using, go to "setting" - "network Setting", choose the WIFI you want to connect and input password it may need.

The screenshot shows the Windows 8 Start screen with a light blue background. On the left, there is a vertical sidebar with icons for 'Start', 'All apps', 'Work Folders', and 'User Accounts'. The main area displays several colorful tiles representing system functions:

- Device Function:** A blue tile with a white Wi-Fi symbol and the text 'Wireless'.
- System Function:** An orange tile with a white trapezoid symbol and the text 'Trapezoid'.
- Brightness:** A green tile with a white sun symbol and the text 'Brightness'.
- Project:** A green tile with a white four-pointed star symbol and the text 'Project'.
- Set wall:** A yellow-green tile with a white picture icon and the text 'Set wall'.
- Sound:** A green tile with a white speaker icon and the text 'Sound'.
- Time zone:** A blue tile with a white 'A' symbol and the text 'Time zone'.
- Version:** A red tile with a white gear icon and the text 'Version'.
- Restore:** A blue tile with a white circular arrow icon and the text 'Restore'.

(Customer name) _____

(Telephone No.) _____

(Address) _____

(Model No.) _____

(Remark) _____

(1) Purchase Date: _____

(2) Receipt Date: _____

(3) Serial Number on Projector Bottom: _____

(4) What help do you need? _____

(5) Manufacturer Action: _____

Please use the original charger and charging cable that are standard with this product for charging. After connecting the charging cable, the indicator light on the top of the shutdown state will flash. The charging time will be relatively slow when the machine is working, and the charging time of the rechargeable battery is about 6 hours in the off state.

Thank you!

©2019-2021 Anxonit Inc all right reserved.the Anxonit® logo and associated characters,trademarks and design elements are owned and licensed by Anxonit company.
www.anxonit.com

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.