

HB-001-00001 WIRELESS HEADPHONE

Key Operating Instructions:

1. POWER/PLAY

Turn on/off key, Long press three seconds is power on/off

In Wireless mode when get the calling: Short Press is answer the calls; Long Press is Refuse to listen, continuous push 2 times is redial

In Wireless mode, Short Press: play/pause;

In MP3 mode, Short Press: Play/Pause

In FM mode, Short Press: Automatic searching the broadcasting station.

2. -PREV/VOL-

In Wireless mode, Short Press: Previous; Long Press: volume-

In MP3 mode, Short Press: Previous; Long Press: volume-

In FM mode, Short Press: Previous a frequency; Long Press: volume-

3. +NEXT/VOL+:

In Wireless mode, Short Press: next; Long Press: volume+

In MP3 mode, Short Press: next; Long Press: volume+

In FM mode, Short Press: next frequency; Long Press: volume+

4. MODE:

Short Press to change the mode, Wireless/MP3/FM Radio/AUX LINE IN;

LED Indicator:

In Wireless mode, the blue/red light will be twinkle flash, when the headphone matches the phone successfully, the blue light will slow falshing when connection successful.

In MP3 mode, the blue light will slow flashing when playing;

In FM mode, the blue light is on steadily when hearing the FM radio, the light twinkles fast when searching the FM radio

In charging mode: the red light is on steadily when charging, when it's fully charged, the red light will be off.

Wireless using the operating manual:

1. Long Press the power key three seconds to open the power, it is Wireless of the default open

2. The blue/red light twinkles fast, Wireless into pairs.

3. When your mobile phone searches the Wireless product, the Wireless name is TM-061

4. When your mobile phone searches the Wireless product and connects successfully, if it displays need put into the password, the password is 0000

5. The blue light will continuous flash 2 times on each 5 seconds after Wireless connects successfully

6. When you open your mobile phone of music player, you can listen to the music, this product can control the next song and previous song by Wireless, play and pause, answer the phone and redial, etc.

MP3 Operating Instructions

1. Long Press power key three seconds to open the power;

2. Insert TF card that the MP3 will play automatically. Or long press the mode key and will switch to MP3 mode.

3. Short press the Play key: MP3 play/pause;

4. Short Press Next/Previous :next/previous song

5. Long Press Next/previous: Volume+/-

FM Operating Instructions

1. Long Press power key three seconds to open the power;

2. Short Press Mode key to FM Mode;

3. In FM mode, short press the Play key is automatic searching all the frequency.

4. Short Press Next or Previous; select the frequency that has been searched.

5. Long Press Next or Previous: Volume+/-

LINE Connecting To Audio Jacke:

1. Power on mode, insert the Auxio cable will turn to AUX LINE IN mode.

2. Support mobile phone/iPod/MP4/MP3/CD/PC,etc

Functional Parameter:

USB charge : DC 5V IN

FM Frequency:88.1-107.9MHz

Wireless frequency :2.402-2.480GHz

Wireless distance:10 meters

Frequency :20Hz-20KHz

Output power:35mW

SNR : 88dB

Charging time : ≤2 hours

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.