


版本号: _____

存档编码: _____

AMHEY®


User Manual for Caregiver Pager

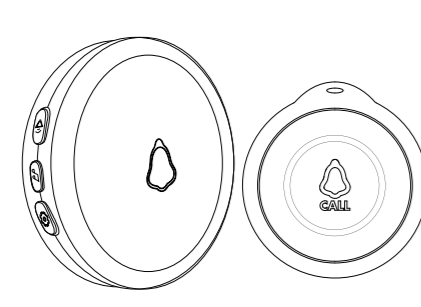


Product Introduction:

Wireless caregiver pager, integrating with 32 songs, adopts advanced wireless transceiver technology, strong microcomputer control system and high-quality voice processing technology with stable and reliable performance. Receivers and transmitters are paired wirelessly by codes. Easy to use (plug and play) plug the receiver into a power outlet. Suitable for villas, apartments, storefronts, hotels, homes, office buildings, conference rooms and other occasions as a doorbell. The call light reminds people with hearing impairments, especially the elderly, to take care of each other.


Product Structure Diagram:

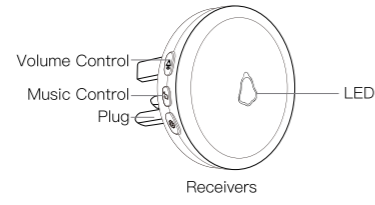


Transceiver



Hang on the neck



Hang on the neck




Features:

- 32 available tones
- 4 adjustable volume levels (Including Mute Model)
- Memory function to retain settings when the receiver is unplugged or off.
- Different tones can be set to different transmitters.

Operating instructions

Adjust the Volume:
press the **【☞】** repeatedly to cycle through 4 volume settings. (After the power is cut off, when power is restored, The volume will be automatically adjusted to maximum)

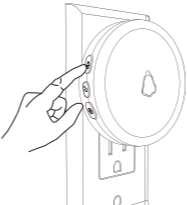

Select the Tune:
Press the **【♫】** 1s: Loop tones in sequence and play the current tones.
Long press **【♫】** 5s: Change tones loop direction. (Select a tone that you like, wait 3s after the ring tone finishes, press **【♫】** 1s to select the ring tone.)


Pairing Additional Transmitters/ Accessories:
There are two options in pairing your receivers transmitters/accessories. VARIABLE mode and FIXED mode. (Note: Caregiver Pager have been paired and set to default chime (Ding Dong) before leaving the factory)

1. VARIABLE Mode


- Plug-in the receiver, pressing and holding the **【☞】** on the receiver for 5s, the receiver will beep once, which means the receiver get into pairing mode.
- Press the push button, the receiver will beep twice with LED indicator flashes 1s.
- Press the push button again, the receiver will beep once with LED indicator flashes 1s, which means the pairing is successful.

④ Short press **【☞】** or leave it 20s without any operation, the doorbell will exit the pairing mode.


① Long press 5s

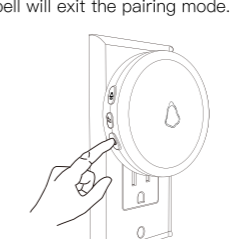


② Press,beep twice,flashes 1s

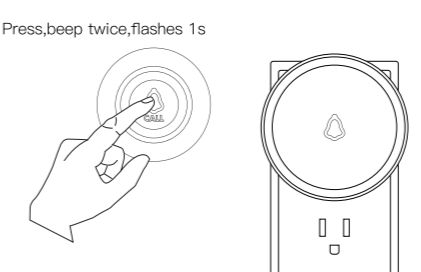

③ Press, beep twice, Flashes 1s

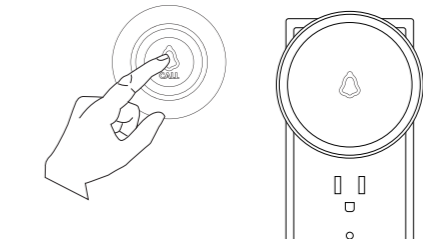

④ Short press

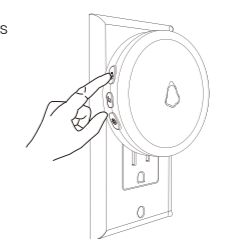


Adding the additional push buttons or receivers please according to the above steps.


1. FIXED - Tone Pairing (only play your saved tone)

- Select a tone that you like.
- Pressing and holding the **【♫】** & **【☞】** button for about 5s until the receiver beeps once, which means the receiver get into pairing mode.
- Press the push button once, the receiver will beep twice with LED indicator flashes 1s.
- Press the push button once again, the receiver will beep once with LED indicator flashes 1s, which means the pairing is successful.
- Short press **【☞】** or leave it 20s without any operation, the doorbell will exit the pairing mode.


① Select music

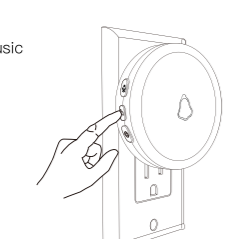


① **【♫】** & **【☞】** Long press 5-7s

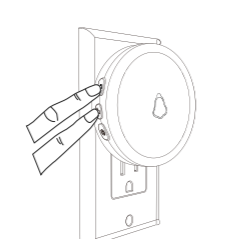


② Press,beep twice,flashes 1s

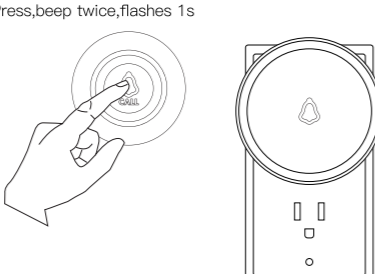

③ Press, beep twice, flashes 1s

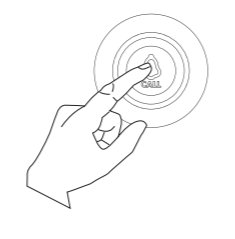


④ Short press

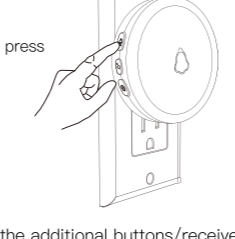


Adding the additional buttons/receivers please according to the above steps.
Note: Pair and set only one transmitter at a time to avoid interference and ensure successful operation.

Reset (Clearing out Settings)

To return all settings to their default settings Hold down **【☞】** and plug it into an outlet. After playing the beep 10 times, all settings will return to factory defaults.
Hold down **【☞】** and plugin.

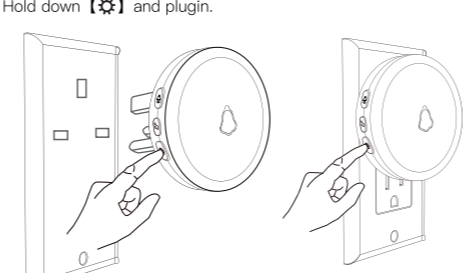

Replace the battery:

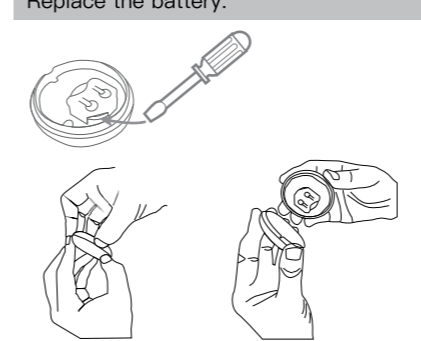

Pry the back cover loose along the seam of the button, and slowly remove the battery cover. Push the battery out of the back of the battery slot, put in new batteries, and then close the battery cover.

Technical Parameters


Product Name	Caregiver Pager
Power	100/240V 50-60Hz AC
Working current	2mA/220AC
Radio Frequency	433.92MHz
Transmitter/battery	CR2450/3V/580mAh
Operation range	150m
Working temperature	-4°F to 140°F

Safety Warning

- Don't operate the product with a damaged cord or plug.
- Don't operate the product if it has been damaged in any way.
- Don't throw or shake the product.
- Keep the product away from fire or explosion may occur.
- Before using the product, read all instruct.
- The operating range will become shorter and the indicator quickly flashes several times if batteries in transmitter is low power. Please try to change the transmitter battery.
- If you encounter problems that cannot be solved, please contact our after-sales team in time.

Warranty:

Our company provides buyers with a warranty period of 18 months from the date of purchase for products damaged due to defects in workmanship and materials. Proof of purchase is required to obtain warranty service. The warranty is for replacement only. No service parts are available for these products. Batteries are not covered under this warranty. For warranty service, please contact Customer Service. Brand: Amhey Email: Amheyservice@outlook.com MADE IN CHINA



单页尺寸: 70*90mm
展开尺寸: 490*90mm
材质: 85g铜版纸
颜色: 黑白
风琴折页 (6折7页)

品牌		彩盒物料编码		绘制日期	2021年12月24日			文件要求
图纸名称	KR-M501+f57说明书	内卡物料编码		公差说明	长	宽	高	打样 做货 <input type="checkbox"/> <input type="checkbox"/>
彩盒尺寸	70*90mm	适用产品	KR-M501+f57		0~2mm	0~2mm	0~2mm	
彩盒材质	85g铜版纸	印刷要求		部门审核	需求部门签字		总经理签字	
内卡 (内托) 尺寸		类型						
		软件版本	CDR16					
内卡 (内托) 材质		比列	CDR原文档 1:1 做					
		绘制人	张芳					

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ -Reorient or relocate the receiving antenna.
- ▶ -Increase the separation between the equipment and receiver.
- ▶ -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.