 


使用说明书

白噪音睡眠仪 灯光音乐助眠器

型号: SA18
使用说明书



主要功能

- 白噪音** 共提供16种独特的白噪音和自然声。按下按键播放白噪音,再次按下,可切换播放下一种白噪声,长按可静音。
- 录音** 可录制长达180秒左右的录音选择。按住按键两秒,所录制音频将显示在倒计时结束后即可开始录音。如果录音停止录音,按住任意键即可结束,并开始播放录音。录音开始前或者结束录音都有系统语音提示。如果需要覆盖原录音,长按两秒重复录音步骤即可。
- 儿童音** 并提供6种独特儿童音,按下按键播放,再次按下,可切换播放下一首声音,长按可静音。
- 定时设置** 选择整晚不间断工作或使用30、60和90分钟倒计时器。
- 暖白光** 亮度6级可调。
- 7彩变色灯** 7彩变色灯:7种环境灯颜色可选。

按键定义

1. 开关/无线音箱
2. 计时
3. 音量
4. 暖白光
5. 7彩环境光
6. 声音组
7. 充电接口 (5V 1A)

无线音箱

1. 短按进入无线音箱模式,会有一个配对提示音。
2. 打开手机设置页面,搜索到SA18进行配对。如果未检测到设备,请再次开关机。
3. 配对成功后可播放手机音乐,如调白噪音,短按声音组按键直接切换。
4. 在自然音,白噪音模式下,短按无线音箱按键,切换回无线音箱模式。

准备步骤

1. 拆开产品包装
2. 这台白噪音睡眠仪由直流 5V USB 端口供电。
3. 将 USB 电线连接到设备背面并连接到5V适配器。(本机请勿使用 9V / 1.2V/1.4V 充电器)

欣赏自然音

1. 按按钮 "O" 2 秒开机。
2. 按相关图标选择您想欣赏的声音。长按对应声音图标可以关闭声音。
3. 音量调节,请按 "d" 或 "q" 直至您所需音量大小。
4. 欣赏音乐后,可长按 "O" 将白噪音机器关闭。

计时功能

默认模式是不间断播放,激活计时器按钮后:

1. 倒计时 30 分钟播放
2. 倒计时 60 分钟播放
3. 倒计时 90 分钟播放

使用灯光

白光:6档亮度
按 "q" 可打开白光。
如果需要调整亮度,请在白光模式下再次按 "q" 以选择所需的亮度级别。
长按可关闭白光。

彩色光:7 种颜色变化
按下 "d" 选择所需的颜色。
颜色转换顺序:红色-橙色-海军蓝-绿色-蓝色-紫色-珊瑚色-七色转换。
长按可关闭彩灯。

Tips: 灯光可以在不开打开关机按键的情况下,独立操作。

电池充电

1. 将Type-C USB 充电线接口插入 USB 端口。
2. 充电时,电源指示灯将亮起。
3. 充电结束后,指示灯将熄灭。

彩盒内包含

 
- 1 X 白噪音睡眠仪 (内置可充电电池)
- 1 X 数据线
- 1 X 说明书

注意

请使用 5V 充电器接头为电池充电。

重要保障措施

1. 为防止触电,请勿将电线、插头或装置浸入水中或其他液体中,注意不要让物体掉落,不要让液体渗透机器中。
2. 请勿在电线或插头损坏的情况下操作,否则设备将出现故障。
3. 该装置应远离热源,如阳光直射、散热器、加热器、炉子或其他产热设备。
4. 清洁时,用湿布或湿布轻轻擦拭,然后用柔软的干布擦掉所有水分。请勿使用刺激性溶剂或化学产品进行清洁。

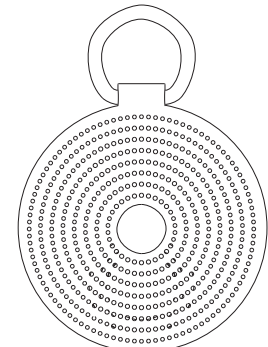

MODEL: SA18
MADE IN CHINA

 


正面

90mm* (70*7页) mm

WHITE NOISE SOUND MACHINE

Instruction
Manual
Model: SA18



The main function

- White Noise Sounds:** White Noise: There are 16 kinds of unique white noise and natural sound. Press the button to play white noise, press again to switch to the next white noise, long press to mute.
- Recording:** Up to 180 seconds of recording options are available. Press and hold the button for 2 seconds to hear the recording beep and start recording after the countdown tone. If you want to stop the recording, press any key to end it and start playing the recording. There will be a system voice prompt before the recording starts or ends. If you want to overwrite the original recording, press and hold for 2 seconds to repeat the recording steps.
- Lullaby:** There are 6 unique children's sounds, press the button to play, press again to switch to the next sound, long press to mute.
- Timing Sleeping Setting:** choose uninterrupted work all night or use 30, 60 & 90 minutes timer.
- Warm White Light:** Six Adjustable Brightness Level.
- Seven colors mood changing light**

Operation

1. On/Off wireless speaker
2. Timer
3. Volume +/-
4. Warm light
5. Mood light
6. Sounds options
7. The USB port (5V 1A)

Recharging the battery

1. Plug the Type-C USB cable to the USB port.
2. The power indicator will light up when charging.
3. When the charging is finished, the charging light will disappear.

Wireless Speaker

1. Press the ON/OFF key to turn on the speaker, if in wireless speaker mode: it will give a notification for pairing.
2. Go to mobile's setting page and find the SA18, after connection, it will have a connected notification.
3. After pairing, you can listen to music from your phone. If white noise is needed, press the sound group button to switch directly.
4. In natural tone mode, press the wireless button to switch back to wireless speaker mode.

Listening to Nature Sounds

1. Press and hold "O" for 2 seconds.
2. Press relevant icon to select the sound you want to hear.
3. You can turn the sounds off by long press the icon. To adjust the volume, press the "d" or "q" the desired level.
4. When finish listening to the sounds, you may turn them off by long-pressing the "O".

Light function

White light: Six Gear Positions Brightness
Press "q" to turn the white light on.
If you need adjust the brightness, in the white light mode, press "q" again to choose the desired brightness level. The White light can be turned off by long press.

Color light: 7-colors changing
Press the "d" to select the color you want.
Color transformation order: Red - Orange Navy - Green-Blue - Purple - Coral - Seven Color Changing.
The color light can be turned off by long press.

Tips: The light can be operated independently without opening the switch button.

Timer Function

The default mode is uninterrupted playback.

- After activating the timer button:
1. On 30 minutes mode, countdown for 30 minutes playing.
 2. On 60 minutes mode, countdown for 60 minutes playing.
 3. On 90 minutes mode, countdown for 90 minutes playing.

Package Contents

 
- 1 X Sound Machine (Built-in rechargeable battery)
- 1 X USB Charging Cable
- 1 X Owner's Manual

Note

Use 5V charging head available to connect the provided cable for charging the battery.

Important Safeguards

1. To protect from electrical shock, do not immerse cord, plug or unit in water or other liquid. Care should be taken so that objects do not fall on and liquids are not spilled through openings in the unit.
2. Do not operate with a damaged cord or plug, or the unit will be malfunctioned.
3. The unit should keep away from heat sources such as direct sunlight, radiators, heat registers, stoves or other heat-producing appliances.
4. To clean, gently wipe with a soft cloth moistened with warm water or mild detergents only, and then remove all moisture with a soft, dry cloth. Do not use harsh solvents or chemicals for cleaning.

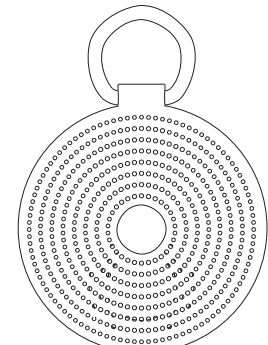

MODEL: SA18
MADE IN CHINA



背面

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in porlable exposure condition without restriction.