

## USING

In order to improve the comfortable using of this product, we recommend that you use lubricant with the product. We also suggest that you NOT use a silicone-based lubricant as it could make the product permanently damaged. A water-based lubricant is always the safest option.


## CLEANING & STORAGE

- ◆ The lifespan of the product will be greatly increased with proper maintenance and care.
- ◆ Please always clean the product before and after each use. Wash the silicone part with water and anti-bacterial soap, rinse with clean water and pat it dry with a lint-free towel. Do not use containing alcohol, petrol or acetone.
- ◆ Store the product in a dust-free place and keep it away from product of other material. Avoid direct sunlight and never expose it to extreme heat.


## WARRANTY SERVICE

- ◆ This product has a period of 1 year warranty after the date of original purchase. If you discover a defect, please notify us during the warranty period, we will give you a free replacement.
- ◆ Please keep your original purchase receipt for the duration of the warranty period.
- ◆ Any attempt to open and take part the product will void the warranty.

# PRODUCT MANUAL

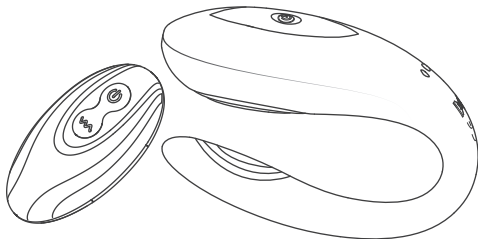

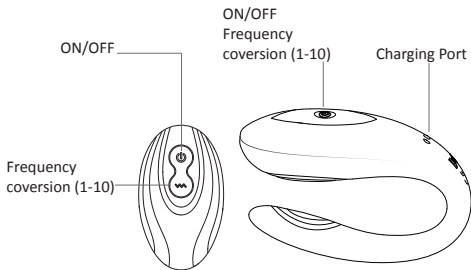


## PRODUCT INSTRUCTION







## OPERATING INSTRUCTIONS

### MODE 1: Couple Vibrator

- ◆ Turn ON: Long press vibrator  button 1.5s to activate your product and vibrating about 0.5s, enter standby mode and no vibrating; single-click vibrator  button to start vibrating and change the frequency (1-10).
- ◆ Turn OFF: Long press vibrator  button 1.5s to turn off your product.

### MODE 2: Remote Controller Couple Vibrator

- ◆ Turn ON: Long press vibrator  button 1.5s to activate your product and vibrating about 0.5s, then enter standby mode; single-click remote control  button to change the frequency (1-10).
- ◆ Turn OFF: Long press remote control  button 1.5s to turn off vibrating; long press vibrator  button 1.5s to turn off your product.

## SPECIFICATION

- ◆ Size: 43.5\*57.5\*90mm, 62\*15.5\*36.5mm
- ◆ Material: FDA silicone, ABS
- ◆ Function: 10 frequencies, dual motors
- ◆ Battery: Magnetic charging 3.7V Li-ion Battery
- ◆ Charging/Using time: 80mins/65mins
- ◆ Waterproof level: IPX6
- ◆ Weight: 80g

## DIRECTION for CHARGE

- ◆ Insert the USB end of the power cable into a USB port, connecting magnetic charging.
- ◆ The LED lights will be flicker to indicate that the product is charging, when it is fully charged, the light will be stop blinking.
- ◆ DO NOT use the product while charging.
- ◆ Each charging process lasts for about 80 minutes, please remember cut off the power supply after charging full.
- ◆ Please try to use the original power cable only and excellent quality USB adapter.

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.