

User Manual

Portable Power Bank

MODEL: B02PW



Company Name: MARWAY Consulting UG(haftungsbeschränkt)
Address: Am Maibusch 108-110, 45883, Gelsenkirchen, Germany
Email: MARWAY.UG@outlook.com
tel: 004917645084650



Company name: KOVA ASSOCIATES LTD
Address: 72a Kingston Road, Portsmouth, Hampshire,
PO2 7PA, United Kingdom
Email: KOVA.Compliance@outlook.com
tel: +44 7312658771

Manufacturer: Yuwei Technology (Dongguan) Co, Ltd
Address: No.15 Longjing Road, Guanjingtou, Fenggang Town,
Dongguan City, Guangdong Province, China
Email: yuwei@support20h.com

[U438]

✉ : chargers@support20h.com

 
f : Top Outdoor Products Support

Kindly Remind:

If you encounter a problem when using this product, but the return window has been closed. You can contact us via the [Service Email \(chargers@support20h.com\)](mailto:chargers@support20h.com), we will send you a Replacement or Refund.





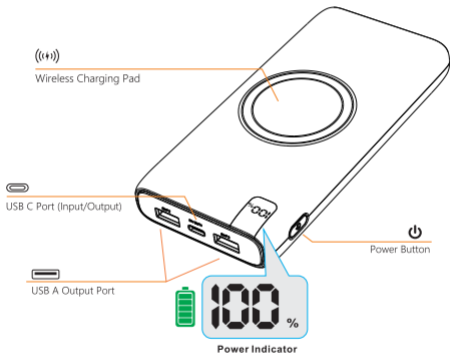

Layout

DE: Layout | FR: Disposition | ES: Diseño | IT: Disposizione



Specification

DE: Spezifikation | FR: Spécifications | ES: Especificación | IT: Specifiche

Model	B02PW
 Wireless	15W (Max)
 Input(IN)	5V \approx 3A 9V \approx 2A (USB-C Port)
 Output(OUT1)	5V \approx 3A 9V \approx 2.22A 12V \approx 1.67A(USB-C Port)
 Output(OUT2/OUT3)	5V \approx 3A 9V \approx 2A 12V \approx 1.5A(USB-A Port)
 Dimensions	15x7.4x2.3cm(5.9x2.9x0.9in)
 Operating Temp Range	0°C to 45°C (32°F to 113°F)

 
Charge your phone or tablet.

DE: Laden Sie Ihr Handy oder Tablet.

FR: Rechargez votre téléphone ou votre tablette.

ES: Cargar tu teléfono o tableta.

IT: Carica il tuo telefono o tablet.

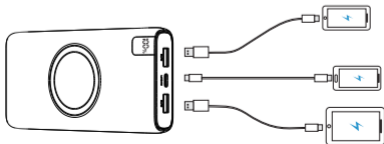


Digital screen shows the accurate readout.

DE: Der digitale Bildschirm zeigt die genaue Anzeige.

FR: L'écran numérique affiche la lecture précise.

ES: La pantalla digital muestra la lectura precisa.

 IT: Lo schermo digitale mostra la lettura accurata.

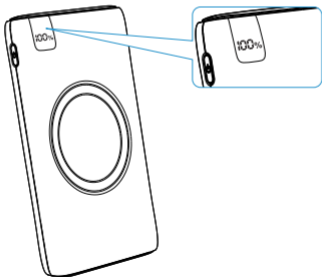


Recharge your power bank. (Use PD/QC adapter to achieve faster charging.)

DE: Laden Sie Ihre Power Bank auf. (Verwenden Sie den PD/QC - Adapter, um noch schneller zu laden.)

FR: Rechargez votre Power Bank. (Utilisez l'adaptateur ou prise PD/QC pour une recharge rapide.)

ES: Recarga tu Batería Externa. (Usa adaptador PD/QC para lograr una carga más rápida.)

 IT: Ricaricate la Power Bank. (Utilizzate l'adattatore PD/QC per ottenere la ricarica veloce.)




How to charge your phone by wireless charging function? (P.S. Your phone must be equipped with Qi charging function.)

DE: Wie lade ich mein Handy mit der Drahtlos-Funktion?
(Achtung: Ihr Handy muss mit Qi Funktion ausgestattet sein.)

FR: Comment charger votre téléphone grâce à la fonction de recharge sans fil?
(N.B: Votre téléphone doit être équipé de la fonction de recharge Qi.)

ES: ¿Cómo cargar el teléfono mediante la función de carga inalámbrica?
(P.D. su teléfono debe estar equipado con la función de carga Qi.)

 IT: Come caricare il telefono tramite la funzione di ricarica wireless?
(P.S. Il telefono deve essere dotato della funzione di ricarica Qi.)

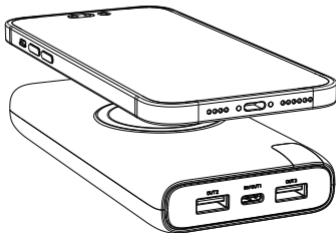

1. Press the Power Button to activate the wireless charging function, then place your phone on the wireless charging pad, making sure that the center of the phone is aligned with the center of the wireless charging pad. In this way, your phone will be charged within 2s, if not, please adjust the location of the phone.



2. The distance between the phone and the wireless charging pad must be less than 3mm, if the phone case is too thick, it will affect the wireless charging function.



3. No metal objects, such as metal phone case, coins, metal sheet etc., can be placed between the device to be charged and the wireless charging pad.

DE:

Drücken Sie den Power Knopf, um das drahtlose Ladegerät zu aktivieren, Platzieren Sie Ihr Handy auf dem drahtlosen Ladefeld und versichern Sie sich, dass das Handy mittig im Zentrum des Felds liegt. So wird Ihr Handy nach 2 Sekunden aufladen. Falls nicht, justieren Sie die Position des Handys.

2. Die Entfernung zwischen Handy und drahtlosem Ladefeld muss weniger als 3mm betragen. Sollte die Hülle des Handys zu dick sein wird sich dies auf die Ladefunktion auswirken.

3. Keine metallischen Objekte, wie zum Beispiel metallene Handyhüllen, Münzen, sonstige Metallstücke etc., dürfen zwischen dem zu ladende Gerät und dem drahtlosen Ladefeld platziert werden.

FR:

1. Appuyez sur le bouton d'alimentation pour activer la fonction de chargement sans fil, placez votre téléphone sur le panneau de chargement sans fil, en vous assurant que le centre du téléphone est aligné avec le centre du panneau de chargement sans fil. De cette façon, votre téléphone sera chargé dans les 2s, si ce n'est pas le cas, veuillez ajuster l'emplacement du téléphone.

2. La distance entre le téléphone et le panneau de chargement sans fil doit être inférieure à 3 mm, si le boîtier de téléphone est trop épais, cela affectera la fonction de chargement sans fil.

3. Aucun objet métallique, tel qu'un étui de téléphone en métal, des pièces de monnaie, une feuille de métal, etc., ne peut être placé entre l'appareil à charger et le panneau de chargement sans fil.

ES:

1. Presione el botón de encendido para activar la función de carga inalámbrica, coloque su teléfono en el panel de carga inalámbrica, asegurándose de que el centro del teléfono esté alineado con el centro del panel de carga inalámbrica. De esta manera, su teléfono se cargará en 2 segundos, si no, ajuste la ubicación del teléfono.
2. La distancia entre el teléfono y el panel de carga inalámbrica debe ser inferior a 3 mm, si la carcasa del teléfono es demasiado gruesa, afectará la función de carga inalámbrica.
3. No se pueden colocar objetos metálicos, como estuches metálicos para teléfonos, monedas, láminas de metal, etc., entre el dispositivo que se va a cargar y el panel de carga inalámbrica.

IT:

1. Premere il pulsante di accensione per attivare la funzione di ricarica wireless, posizionare il telefono su pannello di ricarica wireless, accertandosi che il centro de telefono sia allineato con il centro del pannello di ricarica wireless. In questo modo, il telefono verrà addebitato entro 2 secondi, in caso contrario, regolare la posizione de telefono.
2. La distanza tra il telefono e il pannello di ricarica wireless deve essere inferiore a 3 mm, se la custodia de telefono è troppo spessa, ciò influirà sulla funzione di ricarica wireless.
3. Nessun oggetto metallico, come custodia der telefono in metallo, monete, lamiera ecc., Può essere posizionato tra il dispositivo da caricare e il pannello di ricarica wireless.

When the power bank is fully charged, the screen will show 100%.

DE: Wenn die Power Bank voll aufgeladen ist, wird auf dem Bildschirm 100% angezeigt.

FR: Lorsque la batterie externe est complètement chargée, l'écran affiche 100%.

ES: Cuando el banco de energía está completamente cargado, la pantalla mostrará el 100%.

IT: Quando il power bank è completamente carico, lo schermo mostrerà il 100%.

Please fully charge the power bank before first use.

DE: Bitte laden Sie die Power Bank vollständig auf, bevor Sie sie zum ersten Mal verwenden.

FR: Veuillez recharger complètement le Power Bank avant de l'utiliser pour la première fois.

ES: Por favor cargue completamente el banco de energía antes de usarlo por primera vez.

IT: Si prega di caricare completamente la power bank prima di utilizzarla per la prima volta.

WARNING

DE: Achtung | FR: Attention | ES: Atención | IT: Attenzione



To preserve lifespan, recharge every 3 months.

DE: Laden Sie das Gerät alle 3 Monate auf, um die Lebensdauer zu verlängern.

FR: Afin de préserver la durée de vie de votre Power Bank, il est recommandé de le recharger tous les 3 mois.

ES: Para preservar la vida útil recargue cada 3 meses.

IT: Per preservare la durata della batteria, ricaricate ogni 3 mesi.



Use original or certified cables.

DE: Verwenden Sie original- oder zertifizierte Kabel.

FR: Utilisez uniquement des câbles originaux ou certifiés.

ES: Use los cables originales o certificados.

IT: Utilizzate cavi originali o certificati.



Don't use in rain, wash or place in water.

DE: Nicht im Regen verwenden, waschen oder in Wasser legen.

FR: Ne pas utiliser sous la pluie, ne pas laver ou placer dans l'eau.

ES: No lo use bajo la lluvia, ni lo lave ni lo sumerja en agua.

IT: Non utilizzare sotto la pioggia, lavare o immergere in acqua.



Don't place in a humid environment.

DE: Nicht in eine feuchte Umwelt legen.

FR: Ne pas placer dans un environnement humide.

ES: No lo coloque en un ambiente húmedo.

IT: Non posizionare in un ambiente umido.



Don't disassemble.

DE: Darf nicht auseinandergebaut werden.

FR: Ne pas le démonter.

ES: No desarma.

IT: Non smontare.



Avoid dropping.

DE: Vermeiden Sie Fallenlassen.

FR: Ne pas faire tomber.

ES: Evite dejarlo caer.

IT: Evita di far cadere.



Avoid extreme temperatures.

DE: Vermeiden Sie extreme Temperaturen.

FR: Evitez les températures extrêmes.

ES: Evite temperaturas extremas.

IT: Evita temperature estreme.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.