



AiBook 10

User Manual

Note:

- This manual is mainly for Windows 10. There might be some slight differences if you use other windows systems.
- This manual contains the common functions of most models. Maybe it does not fit very well with your model for some functions, or maybe some of your model functions are not contained in this manual.
- The illustrations in this manual may differ from the actual products. Please prevail in kind


■ Before using the computer, please read the safety precautions and important tips carefully and patiently first!

Content


Chapter 1 - Know your computer.....	3
Front View.....	3
Above Side View.....	4
Bottom Side View.....	4
Left Side View.....	5
Right Side View.....	5
Back View.....	6
Adjusting the tablet's standing angle.....	6
Chapter 2 - Operating Windows10.....	7
Configuring the operating system in initial use.....	7
Operating System Interface.....	7
Start menu.....	8
Keep the computer in sleep mode or shut down.....	9
Tasks view.....	10
Connect to the wireless network.....	11
Chapter 3 - Troubleshooting.....	12
Display issues.....	12
Sleep problems.....	12
Voice problems.....	12
Battery problems.....	13
Other problems.....	13

Chapter 1 - Know your computer

 Front View

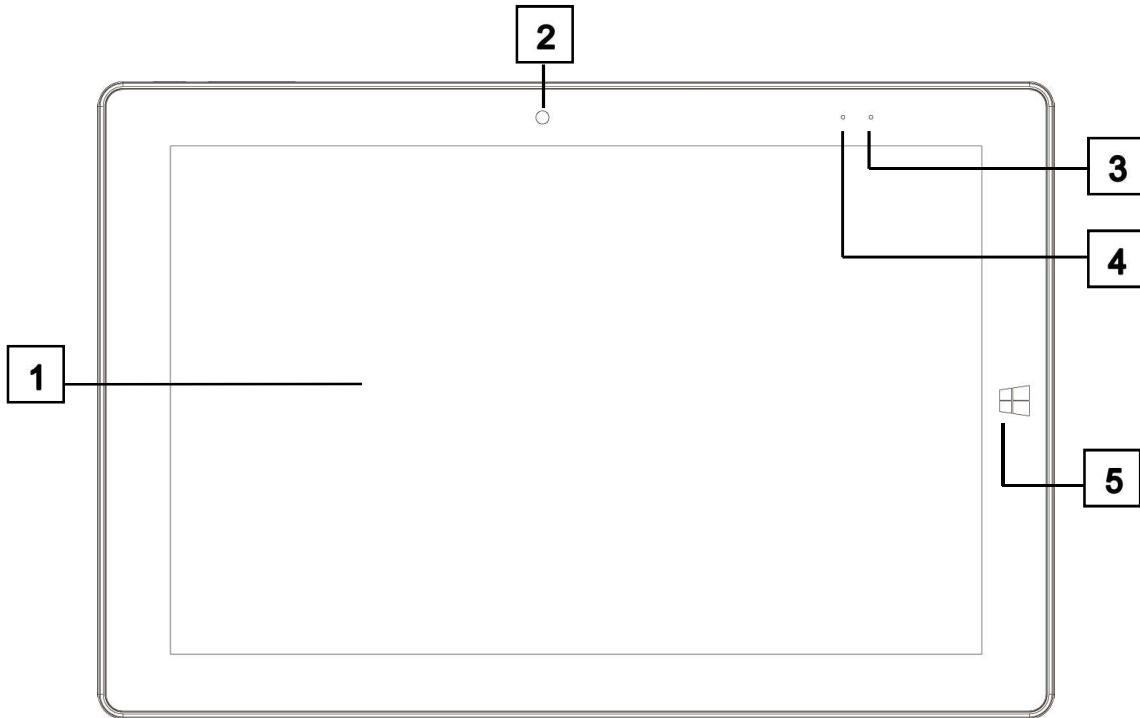

1. LCD / TP	<p>The LCD display with LED backlight provides brilliant visual output.</p> <p>G+G touch screen support 10 points Mutil Touch and Active Stylus.</p>
2. Front Camera	<p>Use the camera for video communication, taking photos.</p>
3. Working indicator	<p>Green LED, turn on during the device starting, turn off while the device started or shutdown, and flick while the device in sleep mode.</p>
4. Power charging indicator	<p>Red LED, turn on while charging, turn off while not charging or full of charged.</p>
5. Windows key (Winkey)	<p>Pressing the Windows key by itself opens the Start menu.</p>

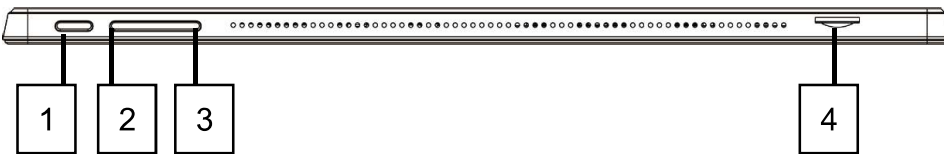 Above Side View

1. Power button	Press to power on/off.
2. Volume down	Decrease the device volume.
3. Volume up	Increase the device volume.
4. MicroSD (TF) card slot	Insert memory card (MicroSD,TF) to expand the device storage.

 
MicroSD(TF) Card Slot:

The computer supports the following types of memory cards:


- Micro Secure Digital (SD) card
- Micro Secure Digital High Capacity (SDHC) card
- Micro Secure Digital Extended Capacity (SDXC) card

Note:


1. You can only insert one memory card in the slot each time.
2. Please insert memory card until into the bottom of the slot.
3. Remove the memory card from the memory card slot and gently pull the memory card out of the slot.
4. Before removing the memory card, safely remove hardware and eject media utility to disable the card to avoid data corruption.

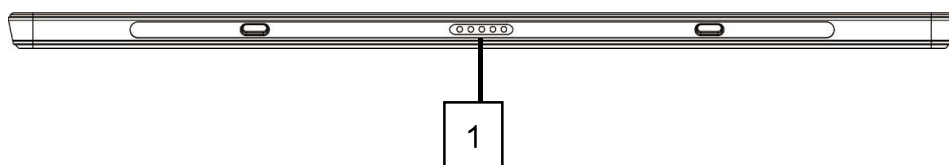Bottom Side View

1. Keyboard socket	Connect the detachable keyboard.
---------------------------	----------------------------------

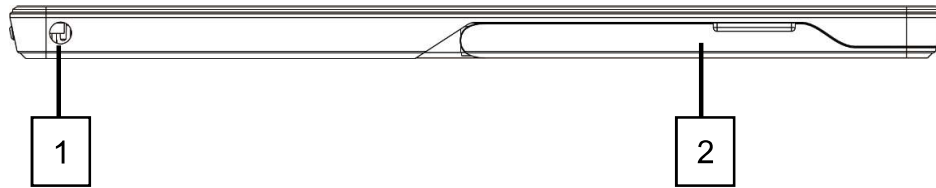 Left Side View

1. Audio jack	Connect to earphone and microphone.
2. Stand bracket	Adjust the tablet's standing angle as need.

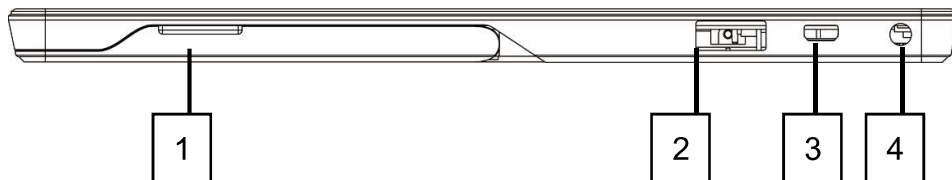 
Right Side View

1. Stand bracket	Adjust the tablet's standing angle as need.
2. USB port	Connect to USB devices (USB 3.0).
3. Micro HDMI port	Output with Micro HDMI cable.
4. Power adapter jack	Connect to the power adapter.

USB Port:

You can connect a USB device to your computer by inserting its USB plug (Type-A) into the USB port on your computer.

 Back View

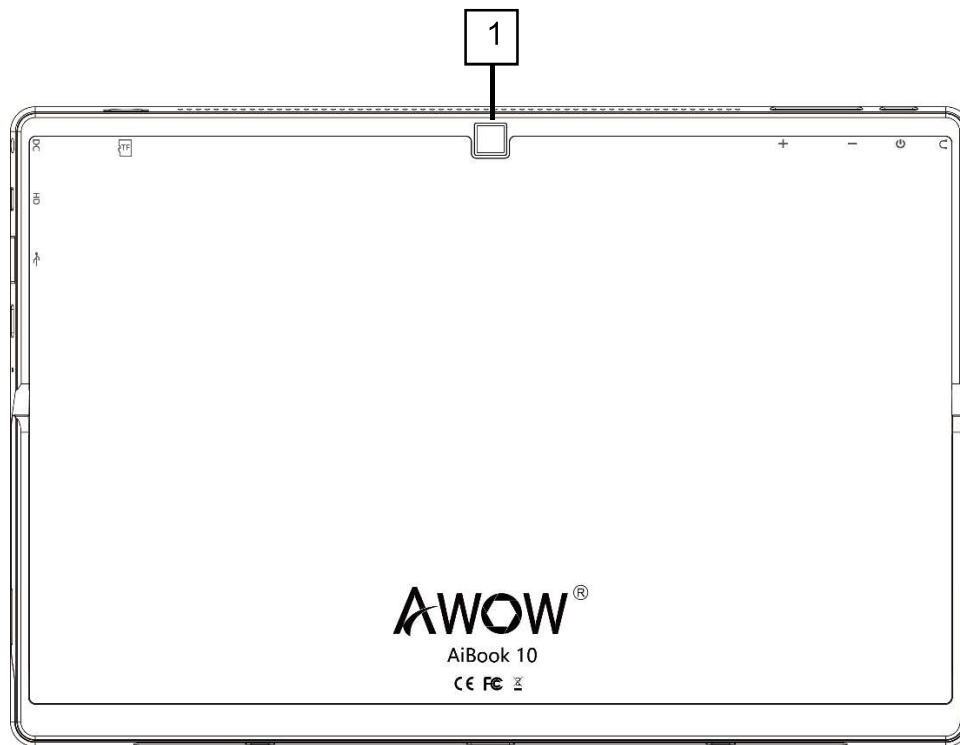

1. Rear Camera	Use the camera taking photos.
-----------------------	-------------------------------

Adjusting the tablet's standing angle

The adjustable stand bracket can support the tablet standing angle max to 145° .



Chapter 2 - Operating Windows10

Configuring the operating system in initial use.



The first time you use, you need to configure the operating system. The configuration process may include the following steps:

 
1. Accepting the End User License Agreement
2. Configuring the Internet connection
3. Registering the operating system
4. Creating a user account

Operating System Interface

Windows 10 comes with a powerful and useful start menu.

To open the start menu, do one of the following:

- Press the Windows key  on the keyboard
- Select Start  on the lower-left corner of the desktop

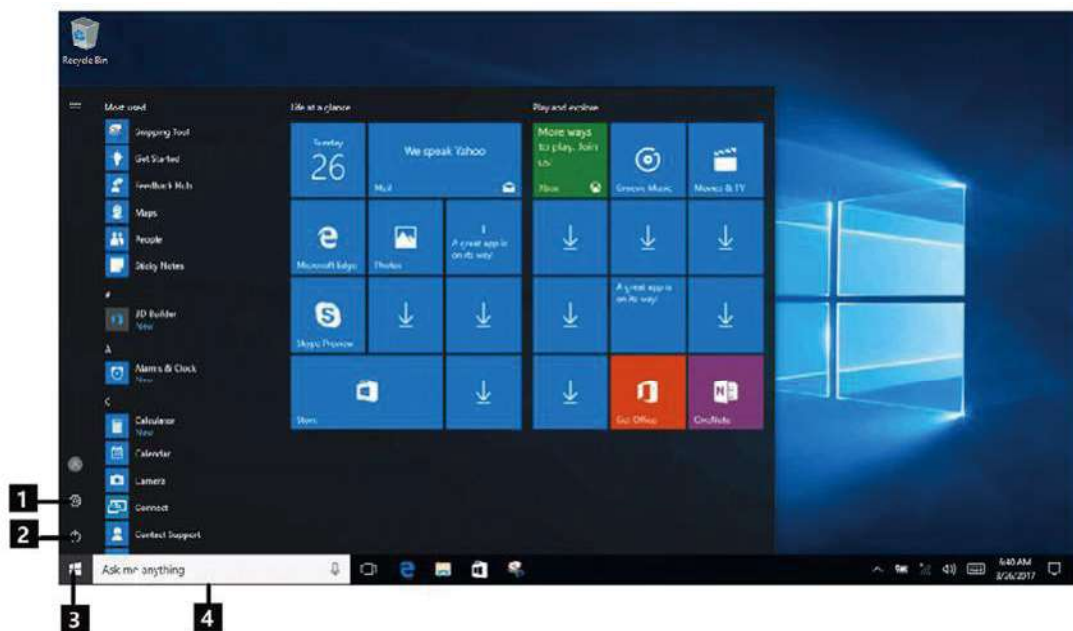

1. Settings button
2. Power button
3. Start button
4. Search box

Settings Button

Settings let you perform basic tasks. You can also search for more settings with the settings search box in the upper-right corner.

To open the settings, do the following: Open the Start menu and select

Settings .

Power Button

The power button is on the Start menu, click it you can choose to shut down or restart the computer, or put the computer into sleep mode.

Start Button

Select the Start button on the taskbar, open the start menu.

Search Box

 
Search for anything, anywhere.

Start menu

You can personalize the start menu with your favorite apps.

To personalize the Start menu, do the following:

Right-click the application which you want to add to the Start menu, then select Pin to Start menu.

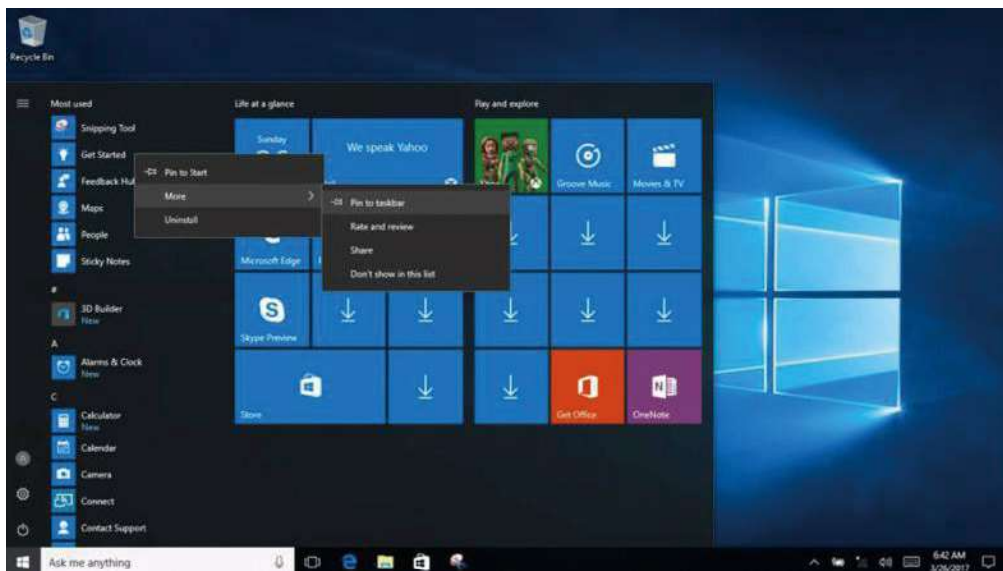

Note: You can also drag apps from the most used or all apps columns to add them to the start menu.

Keep the computer in sleep mode or shut down


When you finish using your computer, you can turn the computer into sleep mode or shut down.

Putting your computer to sleep

If you will be away from your computer for only a short time, put the computer to sleep.

When the computer is in sleep mode, you can quickly wake it to resume use, by passing the startup process.

To turn the computer to sleep mode, do one of the following:

- Close the display lid.
- Press the Power button.
- Open the Start menu, and then select power  - sleep


To wake the computer, do one of the following:

 
- Press any key on the keyboard. (Notebook only)
- Press the power button.

Turn off the computer

If you will not use your computer, please turn off the computer.

To shut down the computer, do one of the following:

- Open the Start menu, and then select power  - shut down.

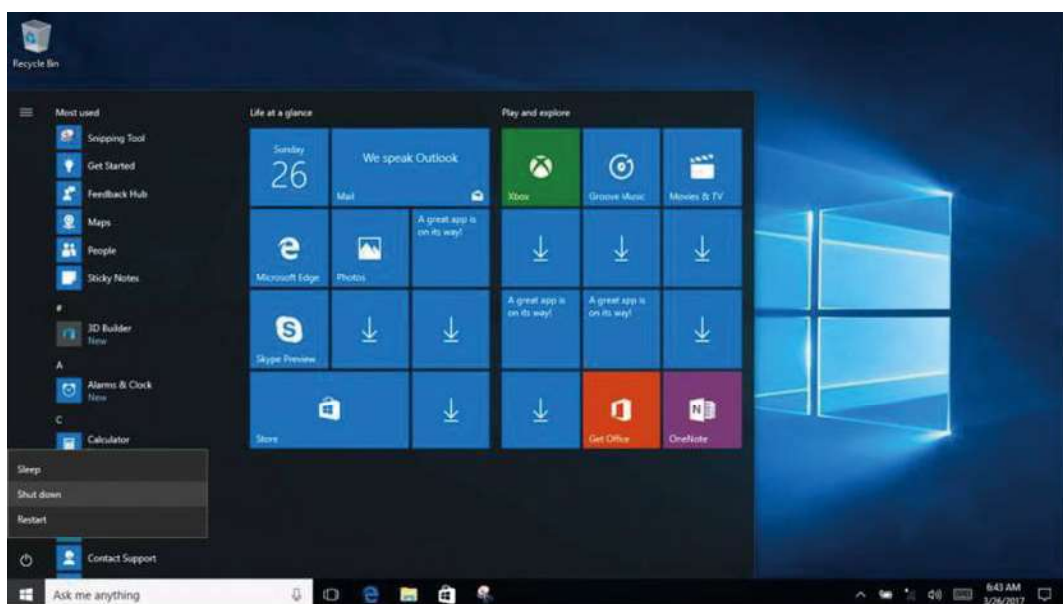

- Right-click the Start button on left bottom, and then select shut down or log off.



Tasks view

To open the task view, do one of the following:


- Select the task view button on the taskbar.
- Press the Windows + Tab key.
- Swipe from the left edge off the screen to the middle.



Connect to the wireless network

 
Enabling wireless connection

To enable the wireless feature, do the following:

- Click the network menu on the right bottom of the taskbar , to open the Network configuration

Connect to a wireless network

- The computer will automatically scan for available wireless networks and list them in the list when wireless is enabled.
- Click the network name in the list to choose, and click Connect.

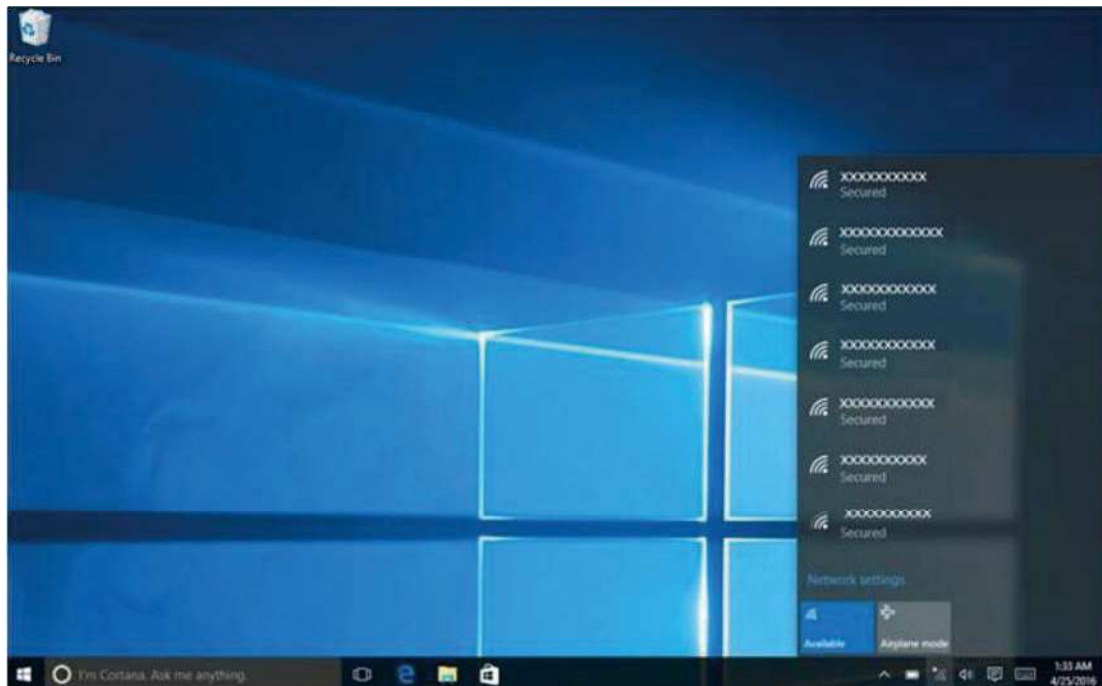

NOTE: Some of the networks need to connect the network on basis of security key or password. You need to enter a security key or password. To connect to such a network, you need to ask your network administrator or Internet, and the service provider for security key or password.

Chapter 3 - Troubleshooting

Display issues

When turn on the computer, nothing appears on the screen.

- If the screen is blank, please make sure:
 - The AC power adapter is connected to the computer, and plugged into a working electrical outlet.
 - The computer power is on. Press the power button again to confirm.
- If these items are properly set, and the screen remains blank, have the computer serviced.

The screen goes blank while the computer is on.

- Your screen saver or power management may be enabled. Do one of the following to resume from sleep mode:
 - Press any key on the keyboard. (Notebook only)
 - Press the power button.

Sleep problems

The critical low-battery error message appears, and the computer immediately turns off.

- The battery power is getting low. Connect the AC power adapter to the computer.

The computer does not return from sleep mode, and the computer does not work.

- If the computer is in sleep mode, please connect the AC adapter to the computer, and then press the Power button.
- If the system still does not return from sleep mode, stops responding, or cannot be turned off, reset the computer. Unsaved data may be lost. To reset the computer, press and hold the Power button for eight seconds or more. If the computer is still not reset, remove the AC power adapter.

Voice problems

Even turn up the volume, you still cannot hear any sound from the speaker.

Make sure that:

- Mute function is turned off.
- Do not use combo audio jack.
- The speakers are selected as a playback device.

Battery problems

Your computer shuts down before the battery indicator shows empty.

- Recharge the battery.

Other problems

The computer is not responding

- To turn off your computer, press and hold the Power button for eight seconds or more. If the computer still does not respond, remove the AC power adapter.
- Your computer might lock when it enters sleep mode during a communication operation. Disable the sleep timer when you are working on the network.

The connected external device does not work

- Do not connect or disconnect the non-USB cable device in the boot state, otherwise you may damage your computer.
- When using high power consumption external devices such as an external USB optical disk drive, use an external device power adapter. Otherwise, the device may not be recognized, or the system may shut down as a result.

Product Specifications

CPU	Intel Celeron N3450
GPU	Intel HD Graphics 500
RAM	8GB LPDDR4
Storage	128GB eMMC
LCD Display	10.1 inch 1280 x 800 HD IPS
Touch Panel	G+G 10 points
Wi-Fi	802.11 b/g/n
Bluetooth	Bluetooth 4.2
Front Camera	Front camera 2.0Mpx
Rear Camera	Rear camera 5.0Mpx
HDMI	1.4a Micro HDMI
USB Slot	USB3.0 x 1
SD Card Slot	1x micro SD (TF) card
Earphones Jack	Combo of ϕ 3.5mm Stereo Headphone
Speaker	Built-in stereo speakers 6R / 1.0W*2
MIC	Built-in microphone
Battery	3250mAh (3.8V)
DC Slot	DC 12V/3A
Dimension	256.5mm x 171.6mm x 9.6mm
Weight	640g



Email: awow_support@cqteq.com.cn



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement, the device can be used in portable exposure condition without restriction