

2. Device Connection

	How to attach?	Photo	Video	Focus	Zooming	C1 Button
Sony with Bluetooth	1. Choose Bluetooth setting on the camera and turn on Bluetooth 2. Pair camera with the Bluetooth remote: Long press C1 Button and Record Button on the remote, and release the buttons until the Bluetooth Indicator quick flashes. They are paired when the Bluetooth Indicator stays blue.	√	√	√	√	Same with C1 Button of the camera
Bluetooth Receiver (for Sony Only)	1. Insert the Receiver to the Multi-interface of Sony camera. 2. Pair camera with the Bluetooth remote: Same with the second step of Sony with Bluetooth.	√	√	√	√	1. Double press: enter Time-lapse function Single press: exit it 2. Long press C1 button for 3 seconds to turn off the camera.
Canon	1. Set the camera drive mode to Remote or Selfies: 10 sec./remote. 2. Choose Bluetooth setting on the camera and turn on Bluetooth 3. Pair camera with the Bluetooth remote: Same with the second step of Sony with Bluetooth.	√	√	√	√	None

Phone (HUAWEI)	1. Turn on Bluetooth 2. Pair HUAWEI phone with Bluetooth remote: Same with the second step of Sony with Bluetooth.	√	√	√	x	None
Phone (iOS)	1. Turn on Bluetooth 2. Pair iOS phone with Bluetooth remote: Same with the second step of Sony with Bluetooth.	√	Switch to video mode, press Photo button to start/stop filming.	x	x	None

Specification

Weight	125g (0.27lbs)
Battery Capacity	3.7V/200mAh
Charging Input	5V/1A
Payload	500g (1.1lbs)

Moman (UK) Limited

Unit 25 Basepoint Business Centre, Aviation Park, West Christchurch, United Kingdom BH23 6NX

www.momanmic.com www.momanx.com www.momanx.co.uk

[Facebook](#) [Instagram](#) [Twitter](#) [LinkedIn](#) @MomanGlobal

<https://moman.co/youtube>

 **MOMAN**



Clicca
Wireless Control Extension Rod

User Manual

Thank you for choosing MOMAN product. Please read this manual carefully before use and follow all instructions mentioned herein.

Caring For Your MOMAN Product

- Please keep the product in a dry, clean, dust-free environment.
- Keep corrosive chemicals, liquids and heat source away from the product to prevent mechanics damage.
- Use only a soft and dry cloth for cleaning the product.
- Malfunction may be caused by dropping, impact of external force.
- Do not attempt to disassemble the product. Doing so voids warranty.
- Please have the product checked or repaired by authorized technicians if any malfunctions happened.
- Failure to follow all the instructions may result in mechanics damage.
- Warranty does not apply to human errors.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

 
- (1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

Package List



Product Introduction

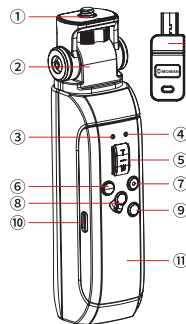 

- ① 1/4 Screw
- ② Adapter



- ③ Battery & Charging Indicator

- Flicker 4 times in a row : battery level at 75%~100%;
- Flicker 3 times in a row : battery level at 50%~75%;
- Flicker 2 times in a row : battery level at

25%~50%;

Flicker 1 times in a row : battery level at 1%~25%;

- ④ Bluetooth Indicator

Stay blue: bluetooth connected;

Flash blue: bluetooth disconnected

- ⑤ TW: Zoom Button

- ⑥ Focus/Photo Button

Focus: half press

Photo: fully press

- ⑦ Record Button

 
- ⑧ ON/OFF Button

- ⑨ C1: Custom Button

- ⑩ Charging Port

- ⑪ Remote


- ⑫ Receiver

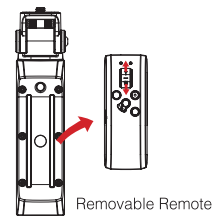

Operations

1. Product Usage

 - (1) Extend the extension rod to the length needed (maximum extension length: 25cm/9.85in)



- (2) Fix the camera on the extension rod through 1/4 screw
- (3) Turn on the remote