

RF Remote Control

Model: ER-3-30V

FCC ID: 2AZL2ER-3-30V

REMOTE CONTROL UNIT:

1. Slide the cover plate off from the snowman shape remote control as below.



Insert a new 23A 12V battery (not included). Slide the cover plate back onto the snowman shape remote control unit. The transmitter of Remote Control Unit employs a simple button for off and on.

2. To change the battery, slide the cover plate off, pull old battery out and replace with a new 23A 12V, identical battery.
3. Take out the battery after the Christmas season to avoid damage of the remote control unit. At the beginning of the next Christmas season, install a new battery into the remote control unit.



** Your unit may vary slightly from photos

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.