

67*85mm;80G双铜,四色印刷;风琴折

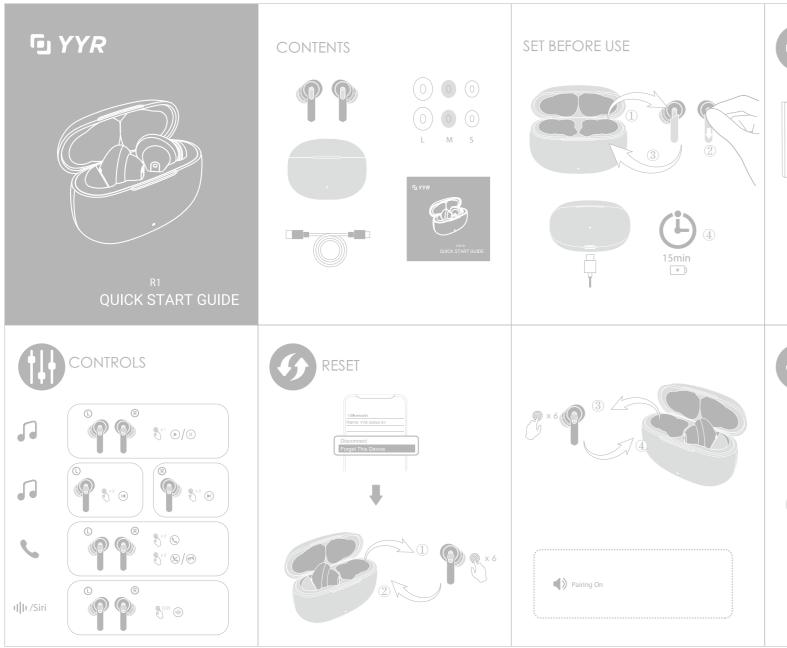

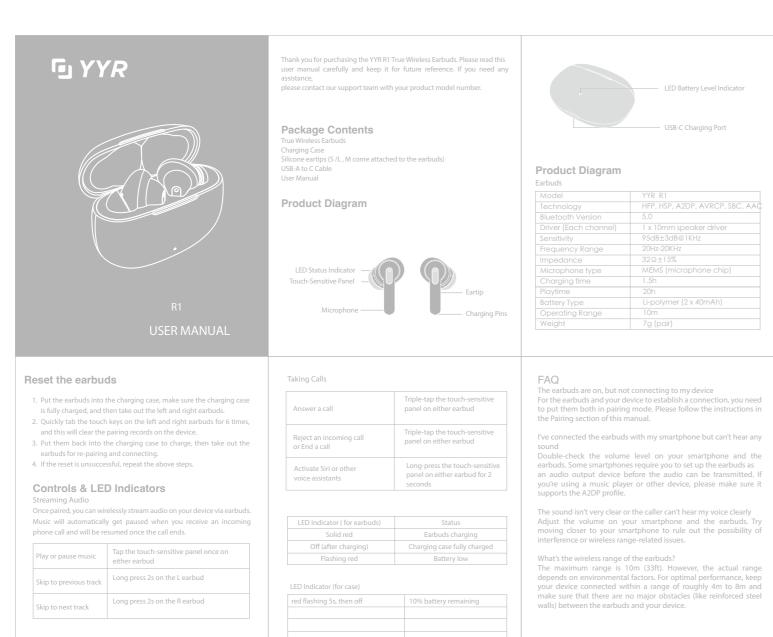

CHARGING	ON OFF	PAIRING *: Flathing red *: Rathing Blue *: Rathing Blue *: *: *: *: *: *: *: *: *: *: *: *:
	OFF ON LR CS LR CS CS LR CS LR CS LR CS LR CS CS CS CS CS CS CS CS CS CS	AT DEVICES
BATTERY INDICATOR	CLEAN	
► ★ 5s <10%	Regular cleaning is recommended to prevent issues with charging.	
- Flashing red		

Charging Input Charging Time Battery Type	DC 5V 1.5 hours Li-polymer (300mAh)	Turn On	Open the lid of the charging case and take both earbuds out, the earbuds will automatically power on. To manually power on, tap and hold the touch-sensitive panels for 5 seconds until the LED indicator flashes blue and the voice guidance says "power on".	Regular Use After Pairing Once the earbuds are successfully paired with your device, they of switched on and off as follows: • Open the lid of the charging case and take both earbuds out, the earbuds will turn on and connect with each other automatically • To turn off, put the earbuds back in the charging case and close
Number of Earbuds Recharges: Weight	3-4 38g			
Clarging Fully charge the charging case before the first use. To charge, connect the case to a USB charger or charging port with the included USB-A to C cable to charge the charging case. When the LED charging indicator on the outside of the case changes from flashing blue to solid blue, the case is fully charged. Charging may take 1.5 hours, then case can offer fully charge to the earbuds 3 times. The earbuds should be stored in the case when not in use. Note 1: Remove the protective file from the earbuds when using for the first time, an adapter with an output voltage higher than SV may not charge the battery or damage the device. USB-C Charging Port		Return both earbuds to the charging case and close the lid, the earbuds will automatically power off. To manually power off, tap and hold the touch-sensitive panel for 5 seconds until the LED indicator flashes red and the voice guidance says "power off". When the earbuds are not worn for about 5 minuts after being removed from the charging case, the earbuds turns off automatically. Pairing Starting with the earbuds in the case: Open the lid of charging case and take both earbuds out, they will automatically turn on, indicators on both earbuds will flash blue and red alternately, and then enter pairing mode, the slave earbud indicator will be off. Turn off Turn off		 They will begin charging Using the Left / Right Earbud Starting with the earbuds in the case: Take the left/right earbud out Turn on the pairing function on the device you want to pair with earbud From the list of available devices, find and select "YYR SONA R1" Note When you turn on the earbuds, they will be automatically reconned verse is found Either left or right earbud can be used individually once connecte your device when you keep the other one inside the charging cas The wireless operating range is 10m (33ft). If you exceed this rar the earbuds will be re-established if you re-enter the wireless rar within 5 minutes. Or the earbuds will be switched off automatic after 5 minutes
Product Care & Use • Keep away from liquids and extreme heat • Don't use the earbuds at high volume for extended periods, as this may • cause permanent hearing damage or loss Regular cleaning is recommended to prevent issues with charging. Warranty & Customer Support For questions, support, or warranty claims, please contact your seller directly.		FCC	-line with most 15 of the ECC Dulay Operation is subject to the	- Consult the dealer or an experienced radio/TV technician for help. To maintain compliance with FCC's RF Exposure quidelines, This equipment should be installed and operated with minimum distance between Omm the radiator your body: Use only the supplied antenna.
		condition that the condition that the condition that the condition the condition that the condition	plies with part 15 of the FCC Rules. Operation is subject to the his device does not cause harmful interference (1) this device armful interference, and (2) this device must accept any eived, including interference that may cause undesired modifications not expressly approved by the party responsible	
			could void the user's authority to operate the equipment.	
Battery Warning This product contains a built-in lithiu product to strong sunlight or fire or i battery according to local requilations waste. Do not remove or replace the produc specified in the User Manual or in the or you might damage the product.	t might explode. Dispose of the s. Do not dispose of it as domestic t battery unless doing so is	B digital device, to provide rease installation.This energy and, if no cause harmful in	has been tested and found to comply with the limits for a Class pursuant to Part 15 of the FCC Rules. These limits are designed mable protection against harmful interference in a residential equipment generates, uses and can radiate radio frequency it installed and used in accordance with the instructions, may terference to radio communications. However, there is no nterference will not occur in a particular installation.	

- evice, they can be buds out, then both utomatically ase and close the lid,
- nt to pair with the
- YR SONA R1″
- atically reconnectmode if no paired
- once connected to the charging case a exceed this range, paired device. The
- the wireless range d off automatically