

3. Quick Start Sensor(s) V2

Before the Game

Make sure you have configured your sensor with a player. [See related section for more information.](#)

First, turn on the sensor by pressing the button. The LED will start blinking slowly. Let it find the GPS signal until the LED starts blinking faster. This operation should take up to 2 minutes maximum.

It is required for the proper functioning of the device to check its position on each player and that the LED is ON (In the right position you can read the number and see the LED).

LED color	Blinking speed	Functions
Red	Slow	Synchronizing with GPS signal
Red	Fast	Synchronized and ready to use
Green	Slow	Synchronizing with GPS signal and measuring the heart rate the Wiz Shirt
Green	Fast	Synchronized and ready to use with the Wiz Shirt
Blue	Slow	The sensor is charging
Blue	Stays ON	The sensor is fully charged



After the Game

Turn off the sensor by pressing the button 3 consecutive times. The LED turns off. Proceed with the data synchronization by connecting it to your computer with the USB-C cable or to the Docking V2 station.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.