

## Remote Control

### Power Button:

When the projector is turned off, press to turn on.

When the projector is on, press to select Power off, Restart, Bluetooth speaker mode or Screenshot.

### Directional Pad (Up):

Move Up

### Directional Pad (Left):

Move Left

### App:

Access the app interface

### Volume + :

Increase the volume

### Google Assistant:

Press the Assistant button on your remote to talk to Google Assistant

Quick Access: Access the common functions

OK: Confirm the selected option or setting

Directional Pad (Right): Move Right

Directional Pad (Down): Move Down



Home: Return to the home screen

Return: Return to the previous menu

Volume - : Decrease the volume

### Battery Cover:

Slide down the battery cover, and install or replace the batteries with two new AAA batteries.

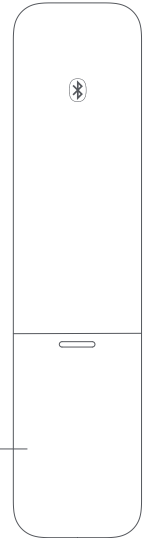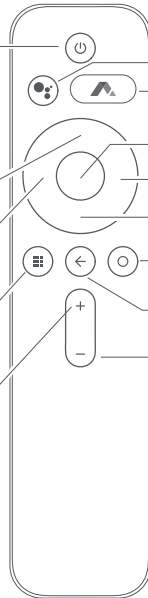

### Note:

- Pay attention to the positive and negative poles when installing batteries in the remote control.
- When battery leaks, immediately wipe away any fluid with a dry cloth and replace the batteries with new ones.
- Dispose of used batteries according to local waste disposal rules and regulations of the country or area you live in.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.