

TONOR

Mini Portable Speaker Instruction Manual

K3



RoHS



ABOUT THIS MANUAL




Thank you for purchasing TONOR wireless microphone. This manual is intended to help you understand all about this microphone and how to use it. TONOR always strives for the ultimate user experience. All our knowledge and passion for audio technology are incorporated into building microphones with high performance for you. The TONOR microphone is high quality and easy to use to achieve the best user experience.

Enjoy your microphone!





TONOR Team

Package Including

   Version 1

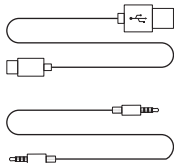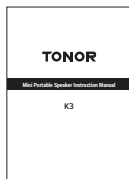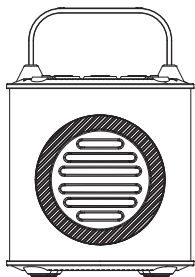

Version 2

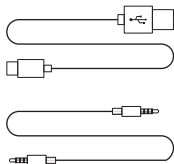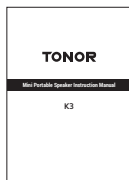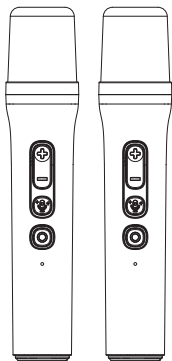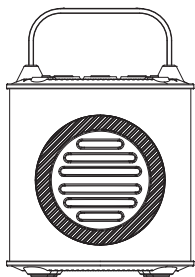    

OPERATING ENVIRONMENTS & NOTES



When using this device, keep it away from water.



Use the device in ventilated environment, keep it away from fire.



Since it's a wireless device, please keep it away from other interfering sources.



Don't take apart the device.



Please use the standard power supply, high voltage may damage the device.

SPEAKER SPECIFICATION

Bluetooth version: V5.3

Bluetooth distance: $\leq 10\text{m}$

Power: 10W

Battery capacity: 2600mAh

Speaker: 2.25"

Charging voltage: 5V 1A

 
Charging time: 3-4H

Frequency response: 60hz—18Khz

Product size: 138*96*73mm

Waterproof grade: IPX4


SPEAKER INTRODUCTION

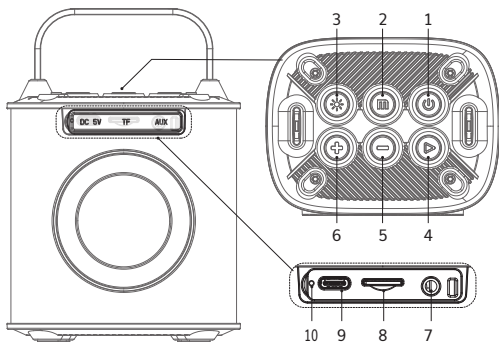

1. Long press to turn on and off. Short press to cancel the original sound.
2. Short press mode switch (Bluetooth/TF/AUX).
3. Short press the switch light to switch the light effect.
4. Short press to pause/play. Long press to disconnect or connect to Bluetooth.
5. Long press the previous song. Short press the volume down.
6. Long press the next song. Short press the volume up.
7. AUX interface
8. TF card interface
9. Type-C charging port
10. Charging indicator

Tips: The charging indicator is red when charging, and the light is off when fully charged. There will be a neutral beep when the speaker battery is low, and it will shut down after 3 prompts.

 MICROPHONE OPERATION INSTRUCTION

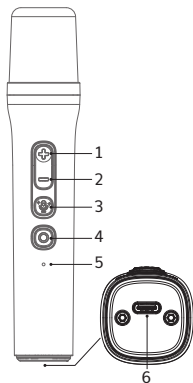

1. Microphone Volume +
2. Microphone volume -
3. Short press to switch between 4 sound modes: Monster/Doll/Original/Karaoke. Long press to cancel the original sound on/off.
4. Long press to turn on or turn off the machine. Short press to switch between 2 modes (Maiba/KTV).
5. Indicator
6. Type-C charging port

Tips: Microphone Indicator

The light is blue when the microphone is turned on and connected to the speaker. The blue light flashes when it is not connected to the speaker .

The light is off when the microphone is turned off.

The light is red when the microphone is charging. And the light is off when it is fully charged.

Blinking blue light when the microphone battery is low.

MODES

Bluetooth mode

Long press for 3 seconds to turn on the speaker, the machine enters the Bluetooth mode. Then connect the mobile phone or pad with the Bluetooth name "TONOR K3". Now you can play the track through your phone or pad.

AUX mode

Connect any audio device with 3.5mm jack and access to AUX audio cable for playback.

TF card mode

Insert the TF card after booting, the device will automatically recognize the file and play the track (maximum support 16G).

WARRANTY

TONOR provides 2 years of after-sales service, free replacement to products that are NOT damaged resulting from accident, alteration, misuse, negligence, or abuse. If exceeding 30 days of Amazon return policy, you can still contact us through our Shopify TONORMIC. We will serve you with full sincerity!

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Vous êtes responsable de remettre tous les appareils électriques et électroniques usagés à des points de collecte correspondants.

Pour en savoir plus:
www.quefairedemesdechets.fr



FR

Les piles
et batteries
se recyclent

À DÉPOSER
EN MAGASIN



OU

À DÉPOSER
EN DÉCHÈTTERIE



Points de collecte sur www.quefairedemesdechets.fr

EASTWEST ELECTRONIC COMMERCE CO.,
LIMITED | LEVEL 54 HOPEWELL CENTRE
183 QUEEN'S ROAD EAST HONG KONG

EASTWEST ELECTRONIC COMMERCE CO US
LIMITED | 3500 SOUTH DUPONT
HIGHWAY, SUITE G106 DOVER, DE 19901
UNITED STATES

LIFEWIT LIMITED | FLAT 237, 233 HIGH
STREET CROYDON SURREY ENGLAND CR0
1FY UNITED KINGDOM

Lifewit GmbH | Friedenstraße 5 97072
Wuerzburg Germany

 <https://www.tonormic.com>

 support@tonormic.com

MADE IN CHINA