





INSTRUCCIONES MANUAL FAIR LIGHT KARAOKE PARTY SPEAKER K6



DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

	CAUTION	
	RISK OF ELECTRIC SHOCK, DO NOT OPEN	
Caution: To reduce the risk of electric shock do not open this device, there are no serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.		
	This sign means the existence of dangerous voltage inside the unit, which states a risk of electric shock.	
	This sign means that there are important instructions of operation and handling in the manual that comes with this device.	

NOTE

This unit may be submitted for changes in specifications, characteristics and/or operation without prior notice to user, in order to continue improving and developing its technology.

Contents

1. Important Notice
 - Before Use this Speaker
2. Your Party Speaker
 - Introduction
 - What's in the box
 - Overview of the Top control panel
 - Overview of the Rear panel
3. Get started
 - Connect power
 - Prepare the remote control
 - Turn ON/OFF the speaker
 - Charging the internal Battery
 - Internal Battery Level indicator
4. Play
 - Basic key play operations
5. Connect with Bluetooth
6. Connect with AUX Line in
7. Listen to external audio device
 - Connect with Wired Microphone/Guitar
8. Production information
 - Specification
9. Troubleshooting

1. Important Notice

Before Use this Speaker

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all warnings.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings.

Install in accordance with the manufacturer's instructions.

- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Only use attachments/accessories specified by the manufacturer.
- ⑩ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑪ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑫ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way. Such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑬ Battery usage CAUTION-TO prevent battery leakage which may result in bodily injury, property damage, or damage to the remote control.
 - Install all batteries correctly,+ and - as marked on the remote control.
 - Do not mix batteries(old and new or carbon and alkaline, etc.)
 - Remove batteries when the remote control is not used for a long time.
 - Batteries (battery pack or batteries excessive heat such as sunshine, fire, or the like).
- ⑭ Apparatus shall not be exposed to dripping or splashing.
- ⑮ Do not place any sources of danger on the apparatus(e.g. liquid filled objects, lighted candles).
- ⑯ Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Never look into the laser beam inside this apparatus.
- Make sure that you always have easy access to the power cord, or adaptor to disconnect the apparatus from the power.



Caution

- Use of controls or adjustment or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Hearing safety



- Listen at a moderate volume.
- Using headphones at a high volume can impair your Hearing.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. so after prolonged listening. What sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normal ‘safe’ levels, can also cause hearing loss..
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc., it may create a traffic hazard and is illegal in many areas.

Notice

Any changes or modifications made to this device that are not expressly approved by Consumer Lifestyle may void the user's authority to operate the equipment.

2. Your Party Speaker

Introduction

With this unit, you can:

 
- Enjoy audio from Bluetooth and other external device;

What's in the box

Check and identify the contents of your package:


- Speaker
- Remote control
- User manual
- Aux In/ FM Antenna Cable
- Adapter

Overview of the Top control panel

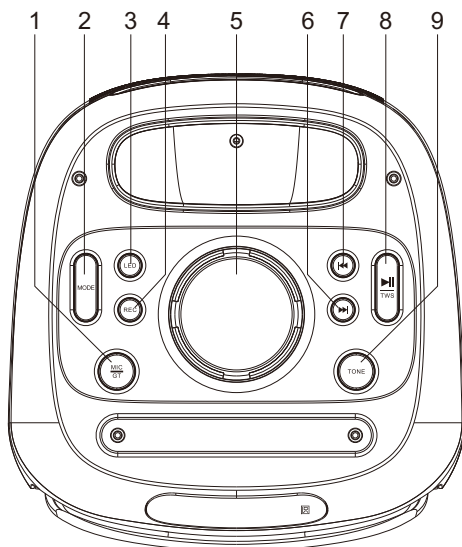

- 1.MIC/GT button
- 2.Mode Switching button
- 3.LED button
- 4.Record button
- 5.Volume button
- 6.Next button
- 7.Previous button
- 8.Play/Pause/TWS button
- 9.Tone button

 Overview of the Rear panel

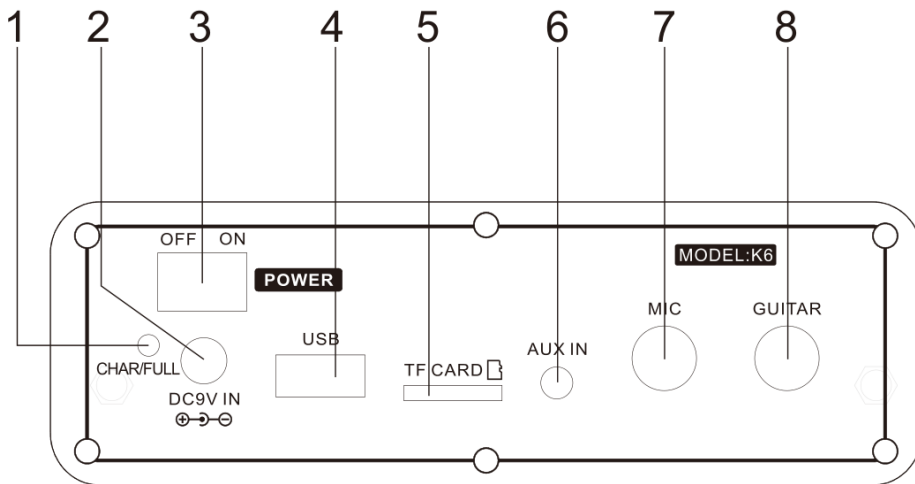

1. Charging light
2. Power ON/OFF Button
3. DC Input jack
4. USB jack
5. TF Card jack
6. AUX jack
7. Microphone jack
8. Guitar jack

Overview of the remote control

3. Get started

Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

 
Always follow the instructions in this chapter in sequence.

Connect power

Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on back or the underside of the unit.
- Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.
- Before you connect the AC power cord, make sure that you have completed all other connections

Connect the adapter cable to the wall socket:

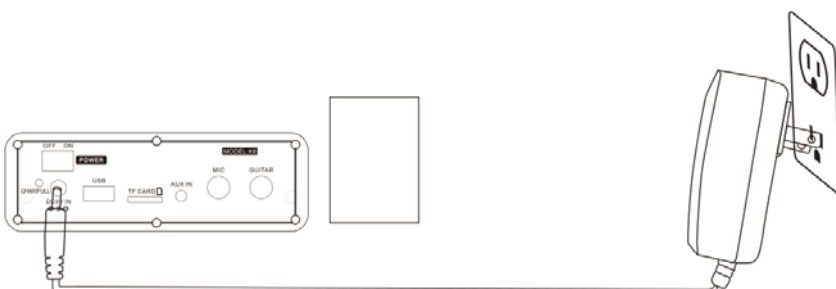

Prepare the remote control



To insert the remote control batteries:

1. Open the battery compartment.
2. Insert 2 x AAA batteries with correct polarity (+/-) as indicated. The 2xAAA battery not include in our products, please purchase from Authorized Seller.
3. Close the battery compartment.

Please Note:

- If you are not going to use the remote for a long time, remove the batteries.
- Do not use old and new or different type of batteries in combination.

Batteries contain chemical substances, so they should be disposed of properly.

Turn ON/OFF the speaker

1. The speaker can work with DC power by built-in battery (DC mode).
 2. DC mode, the speaker will be powered by the built-in rechargeable battery.
- Use the power adaptor to power on the speaker and set the power switch on rear panel to ON position.

Caution:

If you do not use this unit for a while, please switch the "POWER" button to "OFF" status, and disconnect the AC power cable of this unit.

Charging the internal Battery

The speaker comes with a built-in rechargeable battery, follow the below steps to charge it:

1. Connect the adapter cable and plug to the wall socket on the rear panel.
2. There is a BATTERY indicator light on the rear panel will light up as RED color, the battery is being charge.

When the BATTERY indicator RED color light off, the battery is fully charged, then unplug the adapter cable to stop charging.

Internal Battery Level indicator

1. There is a battery level indicator on the display, total are three level of the battery, it will decrease the level when the battery is running.
2. When you see there is only 1 level of the battery indicator, please charge the internal battery on time to keep the battery life.
3. When the speaker sound becomes abnormal, please charge the internal battery on time to keep the battery life.

Note: please fully charge the product when it is not going to be used for a long time and charge once a month to keep longer battery life.














 



4.Play

Basic key play operations

You can control play through following operations.

Key

Function

	<ol style="list-style-type: none"> 1. Press this MIC/GT button to open the volume control of microphone, then turn the volume knob to adjust the sound volume, the display will show U 0 to U 16 2. Press this MIC/GT button to open the echo level control of microphone, then turn the volume knob to adjust the level, the display will show ECO 0 to ECO 16 3. Press this MIC/GT button to open the Guitar volume control, then turn the volume knob to adjust the sound volume, the display will show G 0 to G 16
	<p>Press this MODE button for function mode switching between Bluetooth/FM/AUX</p>
	<p>Press this LED button to switch the light effect</p>
	<ol style="list-style-type: none"> 1. Press this button can record FM/Microphone/AUX to USB when playing music. 2. Press one time to open the recording and the music of FM/Microphone/AUX will store automatically into USB. 3. Press again to stop the recording and you can play the recorded music from the USB <p>Note: USB music can not record to USB.</p>
	<p>Turn this volume knob to adjust the all sound level, music/microphone/guitar</p>
	<p>Press this next button for next track when playing music</p> <p>Long press this next button for fast forward</p> <p>Press this next button at FM mode, the radio will read the saved radio station and select the next one in ascending order</p>
	<p>Press this previous button for previous track when playing music</p> <p>Long press for fast backward</p> <p>Press this previous button FM mode, the radio will read the saved radio station and select the previous one in descending order</p>
	<ol style="list-style-type: none"> 1. Each press of the PLAY/PAUSE/TWS BUTTON cause the operation the change from PLAY to PAUSE or from PAUSE back to PLAY 2. Long press PLAY/PAUSE/TWS button for TWS function 3. When in FM mode, press this button to search and save stations automatically
	<ol style="list-style-type: none"> 1. Press this TONE button to adjust the treble level, the display will show E -5 to E 5 2. Press this TONE button to adjust the bass level, the display will show b -5 to b 5
	<ol style="list-style-type: none"> 1. Red light is displayed while charging 2. Full charge is shown in blue light
	<p>Set the power switch to ON or OFF position on the rear panel to turn on or turn off the speaker</p> <p>Or use remote control ON/OFF button</p>
	<p>Adapter Charging port</p>
	<p>Insert the USB driver to USB socket to play music</p>
	<p>Insert the TF card to TFcard socket to play music</p>
	<p>Insert the AUX cable to external device</p>
	<p>Insert wired Microphone to the MIC jack</p>
	<p>Connect guitar with standard 1/4" cable</p>

 
5.Connect with Bluetooth

1. Press the MODE button on the Top Control panel or on the remote control to switch to the BLUETOOTH CONNECT mode, (bLUE) will be displayed on the screen.
2. Open the Bluetooth on the external device (must have Bluetooth function), and the name "K6" will show on the device, please try to connect it.
3. Once connected, you can hear a small sound from the speaker.
4. You can use the ◀◀ or ▶▶ key on the Top Control panel to control the tracks of the external device.

Note: This speaker do not need the password.

6.Connect with AUX Line in

- 1.Press the MODE button on the Top Control panel or on the remote control to switch to the AUX mode, AUX will be displayed on the screen.
 - 2.Connect this speaker to AUX inserting jack and the external device Earphone jack by provided AUX cable;
 - 3.Once connected,turn on your external device music
 - 4.You can use ◀◀ or ▶▶ button on the Top control panel to control the tracks of the external device.
- Caution: Please turn off the unit before connect AUX cable in order to avoiding unexpected noise.

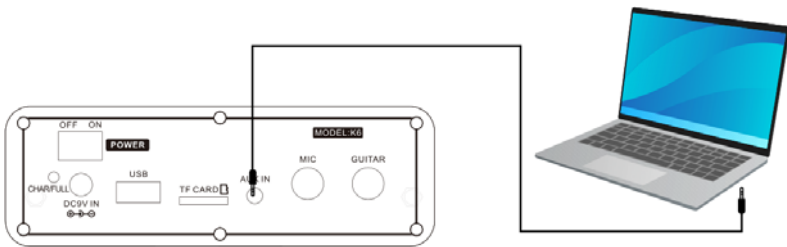

7.Connect with Wired Microphone/Guitar



Insert 6.35mm wired microphone to play with microphone.



Insert 6.35mm wired guitar to play with guitar.



When playing with the wired microphone/guitar, please press this knob to adjust the sound volume level of microphone/guitar.

- 1.Press this MIC/GT , you can open the volume control of microphone/guitar, the display will have corresponding function on the screen, then turn the volume knob to adjust the sound volume level of microphone/guitar.
- 2.Press this MIC/GT, you can open the echo volume control of microphone, the display will have corresponding function on the screen, then turn the volume knob to adjust the echo sound volume level of microphone.

Important Notes

While using the microphone, avoid being put the microphone opposite the bass of Speaker,as they may have Whistler Noisy.

To get the best singing performance, keep the micro phone within 5-15cm of the mouth and at a 45 degree angle.

When using the microphone, always pay attention to the battery.

If the battery is low, the indicator light will come on and the performance will progressively become poor.

Caution: Please do not put the microphone directly face to the speaker, it may damage the speaker.

8.Product information

Specifications

Amplifier	
Output power	30W
Input Sensitivity	≥500mV
FM	
FM range	87.5-108MHZ
Frequency Response	20Hz-20KHz
Speaker	
Bass Speaker	6.5 Inch
General information	
DC Power	DC 9V IN
Battery	Li-ion 7.4V4000mAh

9.Troubleshooting

Warning

- Never remove the casing of this speaker.

If you encounter problems when using this speaker, check the following points before requesting service.

No power

- Ensure that the Adapter plug of the speaker is connected properly.
- Ensure that there is power at the DC outlet.

No sound or poor sound

- Adjust the volume.
- Disconnect the headphones.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wires are clamped.

No response from the speaker

- Disconnect and reconnect the Adapter plug, then turn on the speaker again.

Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities(+/- signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the speaker.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.