

The user manual

Attention:

1. Desk:

1.1 Touch panel

1.2 POWER

1.3 BT

1.4 WIFI

1.5 BACK

1.6 MIC4

1.7 Volume +, Volume -

1.8 earphone jack

1.9 Video output interface:

1.10 TF card

1.11 USB

1.12 Recovery

2. First use

2.1 Battery management and charge

2.2 Connection with PC

3. Equipment operation interface

3.1 Main interface describe

3.2 status bar describe

3.3 Use touch panel

4. Equipment basic set

- 4.1 Silent mode, Volume, Notification ringtone, Audible selection Screen lock sounds
- 4.2 Application
- 4.3 Privacy
- 4.4 Storage
- 4.5 Language & keyboard
- 4.6 Date & time setting
- 4.7 Developer options
- 4.8 About tablet

Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Please make sure to reading the manual carefully before use the device.

- Please don't be in high temperature moisture or very dust place
- Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it.
- Please charge In the following condition.
 - A、 The battery power ICONS shows have no power
 - B、 The system automatically shut off, start up after power off soon
 - C、 Operation buttons no response
 - D、 The machine that the top right corner show red icons
- When the device in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol, Thinner or benzene to scrubbing products.
- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- Please don't using the Tablet PC when you in driving or walking down the street.
- USB just only be used for data transmission


The company reserves the right to improve product, products specification and design have any change. The information is subject to changes without prior notice.

(This tablet is no waterproof function)

[Remark] All pictures in this manual is just for your reference . products specification and

design have any change, The information is subject to changes without prior notice.

1.Desk:

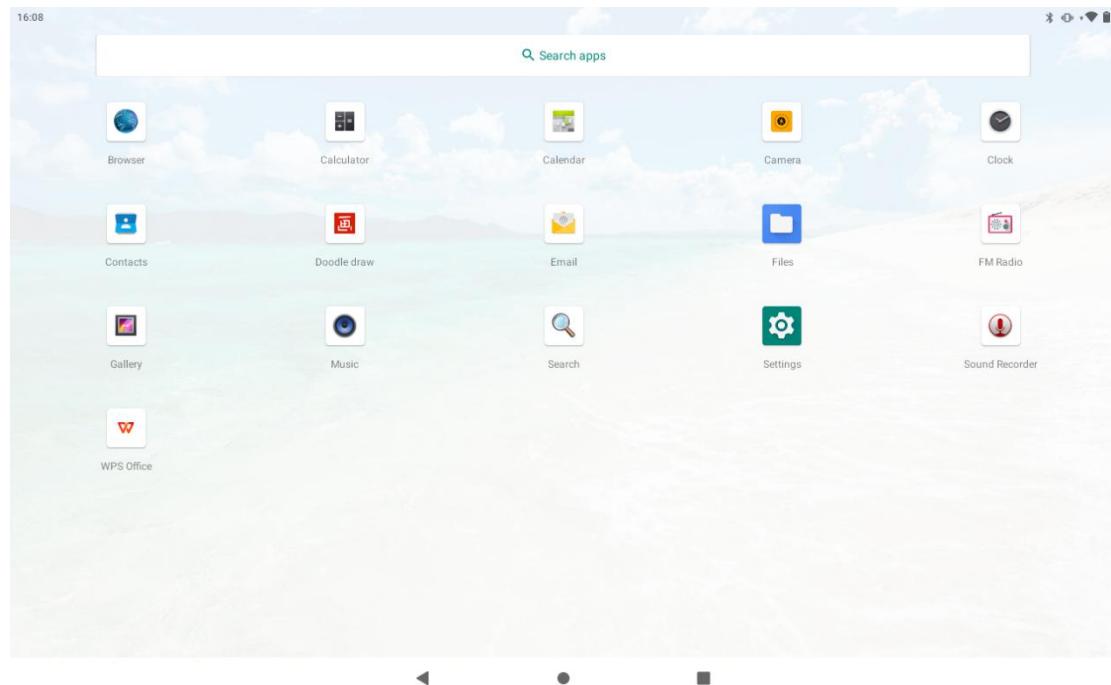

1.1 Touch panel

Capacitive touch panel: In The Operation, to click, dragging on the touch panel.

1.2 POWER

Start up: Long Press and hold the power button, the system will enter the main interface

shutdown: In the main menu interface, Press the power button about 5 second to shutdown,

The system can hint "power off" option, Click "OK", you can safely shut down.

Lock screen: Short press Power button to lock screen or unlock screen.

Remark 1. When power is empty, system will shut down automatically.

2. Illegal turn off the device, restart will scan and restore the disk, it may take longer time to enter into system.

1.3 BT

Settings > Connected devices > Pair new device

1.4 WIFI

Settings > Network & Internet > Wi-Fi

1.5 BACK

Short Press BACK button will return the last interface.

1.6 MIC

Recording

1. 7 Volume+, Volume-

the buttons on top Volume+,, Volume-achieve changes in the volume.

1. 8 earphone jack

3. 5 mm standard earphone jack.

1.9 Video output interface

HDMI output interface

1. 10 TF card

TF-CARD jack: external T-FLASH card

1.11 Mini USB

Mini-USB jack: you can use it to connect the computer for data transmission, charging and external connection USB flash drive.

1.12 Recovery

When the Tablet under the condition of the crash, upgrade firmware.

2. First use

2.1 Battery management and charge

Before first use, please set the device's battery is fully charged.

Just need to connect the adaptor or USB interface, then you can charge.

The first two times charging please keep about 6 hours, after that you just need.

4 hours to charge.

【Remark】 This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor(Input:AC110-240V 50/60Hz Max:180MA. Output: DC5.0~5.5V/1.5A), this device without supply DC charging, USB interface can charge, Choose USB interface to charger.

During the charging, the battery icon will scroll

When finished charging, battery icon will become green and stop rolling

In order to prolong the service life of the machine, suggest use out battery power before charge it.

【Remark】 1. If you long time don't to use this Tablet, in order to avoid power consumption caused damage, please charge/play the battery once a month.


2. After low battery shut down connect DC adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.

3. Device charging should be in standby status for reach normal charging time.

Because with device and screen consumption, it may cause longer charging time.

2.2 Connection with PC

U Use USB cable to connection window, click Turn connect device to PC, device will on USB storage to connect to PC.

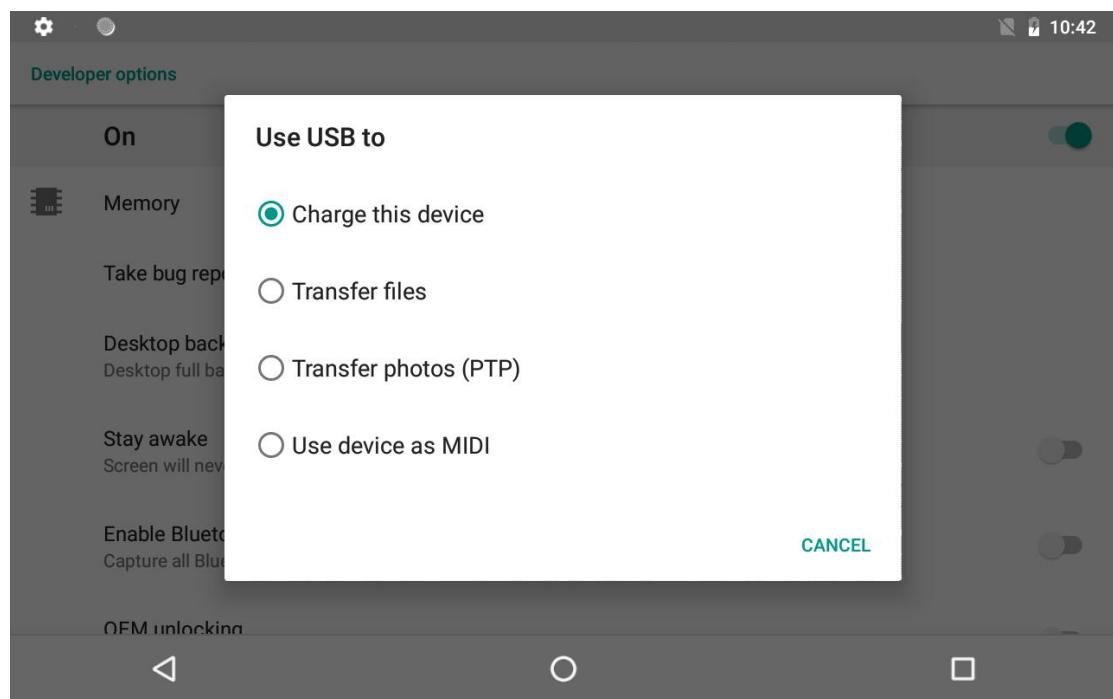


Into the load mode, you can copy, delete the file on the device and the file on the memory card.

3. Equipment operation interface


3.1 Main interface describe

After start-up will enter the main interface

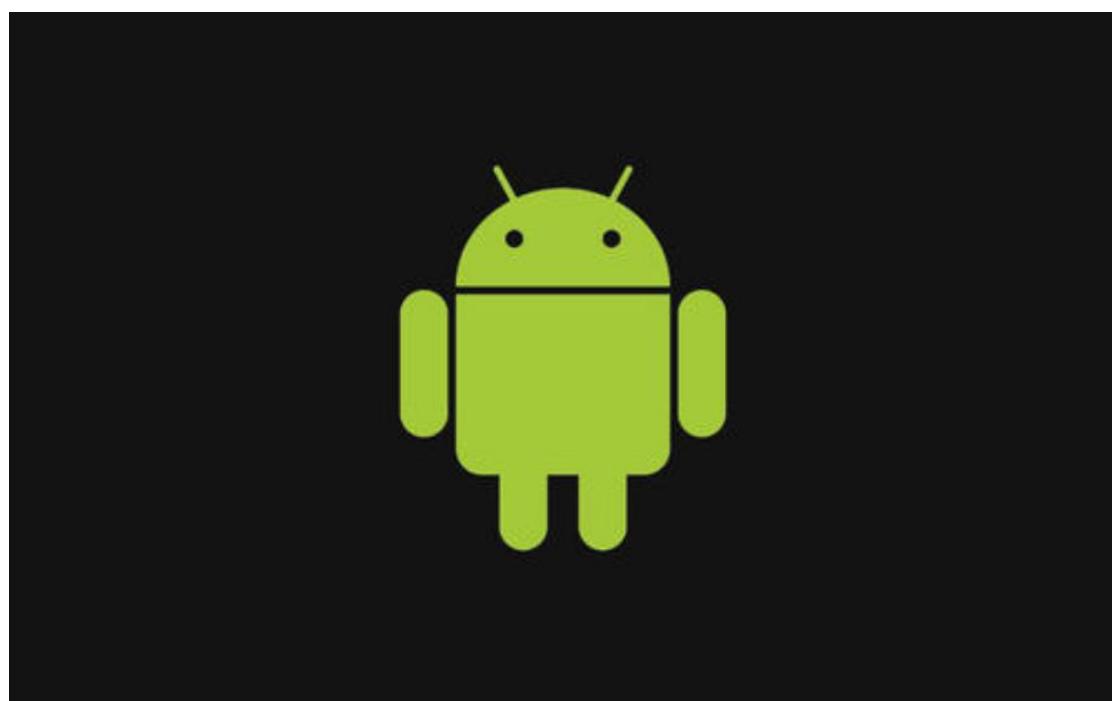

In the main interface, you can:

Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.

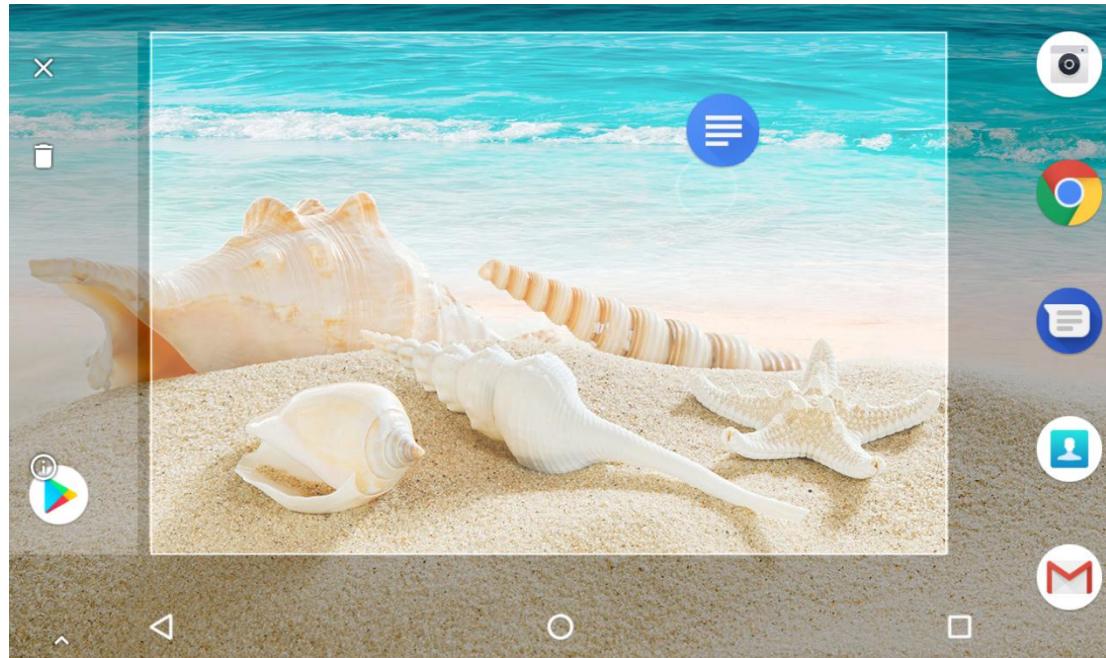

Delete icons doing press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon you touch the screen keep a time.

3.2 status bar describe



- The status bar above of the screen

Top left display main interface software, T-Flash card, USB connection status and so on top right display the battery, battery charge icons, current time, set time, Settings Menu, ESC button.

3.3 Use touch panel

Device equipped with a 10.1" touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to main screen through pressing the soft key on the bottom right corner of the main screen.

【Attention】 The main screen soft key functions as the machine back key In different applications, by tapping the back soft key on the bottom right corner on the touch screen you can return to is interface on the up floor.

In different applications, by tapping the menu key on the upper right corner of touch screen, the screen will appear the operation setting interface as follows.


【Remark】 The main screen soft key functions as the machine menu

In the main interface, you can touch the icon to open the Apps



In different browser (file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.

4. Equipment basic set

Setting: Click icons , enter setting interface

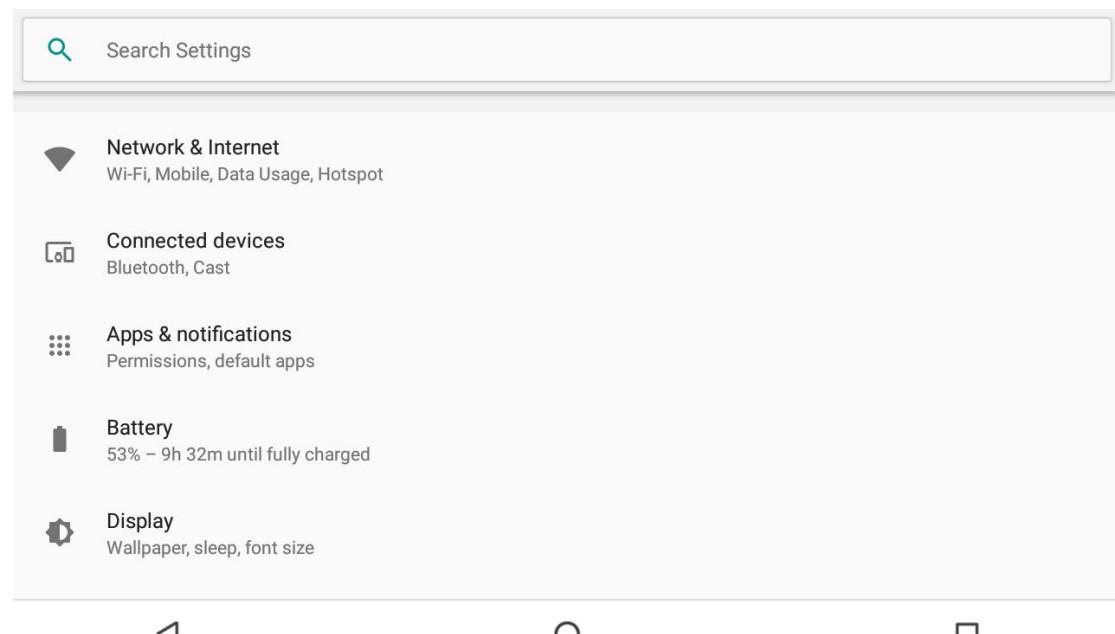


4.1 Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds

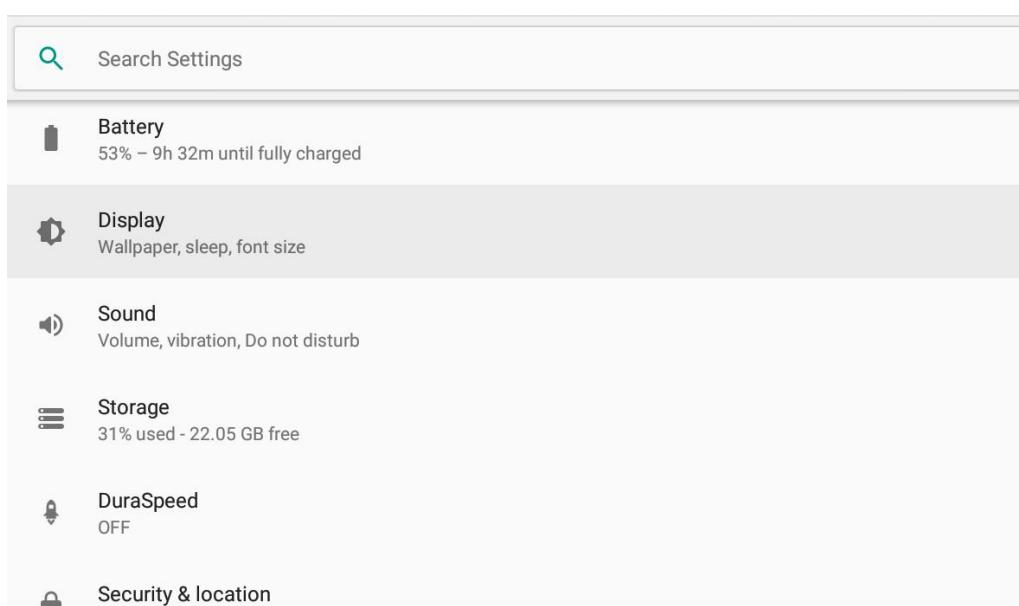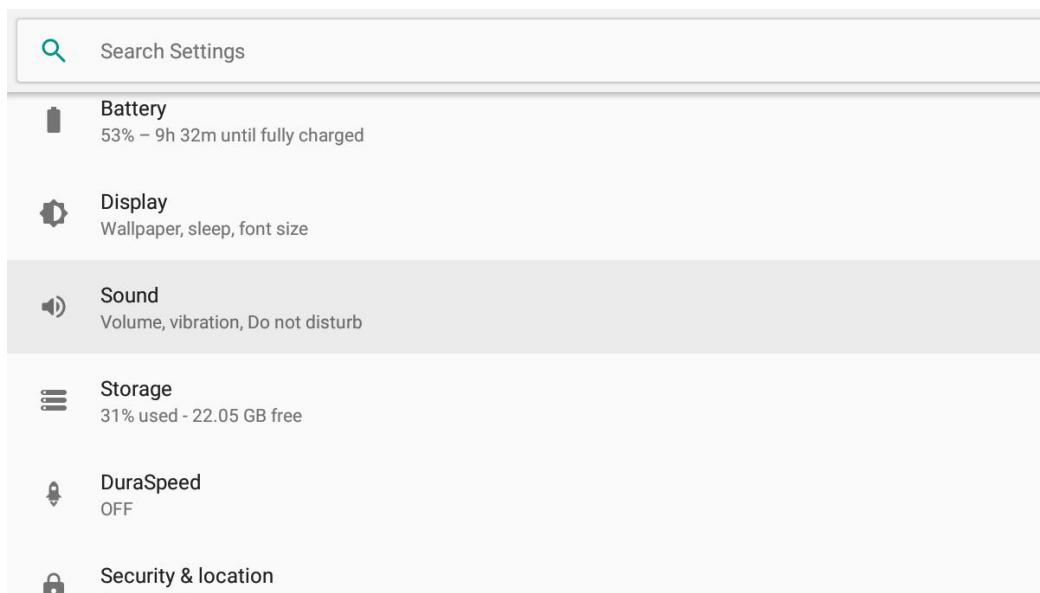

4. 2 Application

Manage applications

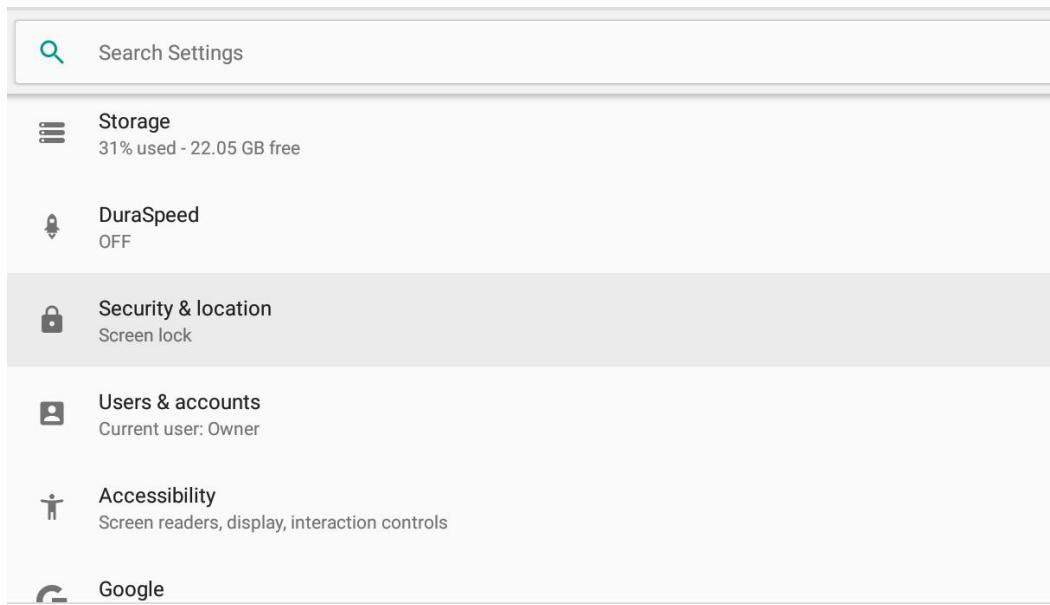

Search Settings

- Storage**
31% used - 22.05 GB free
- DuraSpeed**
OFF
- Security & location**
Screen lock
- Users & accounts**
Current user: Owner
- Accessibility**
Screen readers, display, interaction controls
- Google**

Unknown sources: Click "Unknown Sources", then click "OK"


Manage application: manager and uninstall Application

【Remark】: when you Firmware Upgrade, please close the USB connect

How to uninstall?



1. enter () "setting" > "Application" > "Manage application" And then there will be installed the program list
2. Click you want to uninstall icons, will enter the following interface
3. Click Uninstall, then you can delete the application

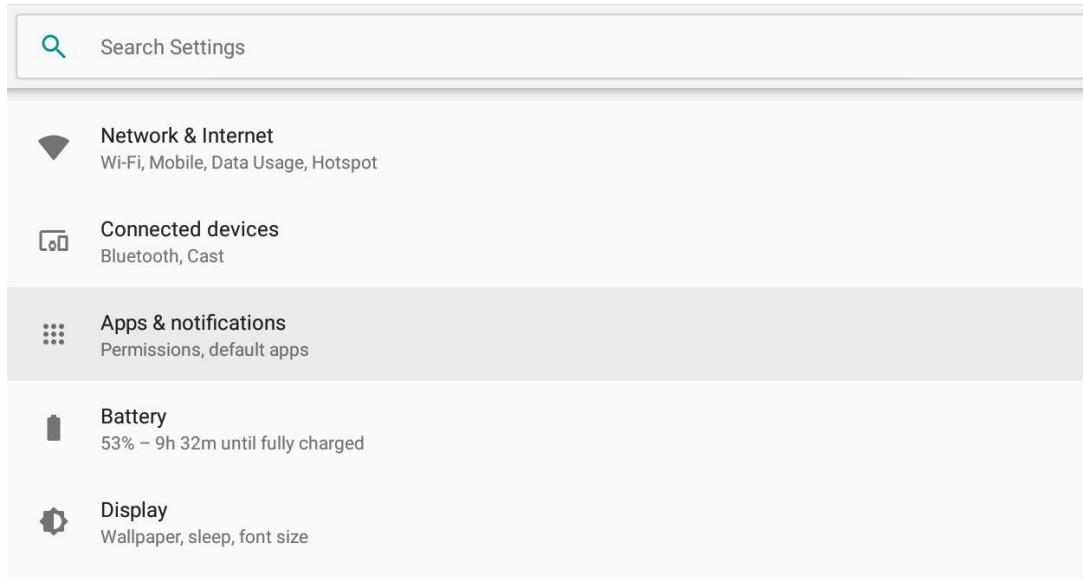


Search Settings

- Network & Internet**
Wi-Fi, Mobile, Data Usage, Hotspot
- Connected devices**
Bluetooth, Cast
- Apps & notifications**
Permissions, default apps
- Battery**
53% – 9h 32m until fully charged
- Display**
Wallpaper, sleep, font size


4.3 Privacy

Factory data reset

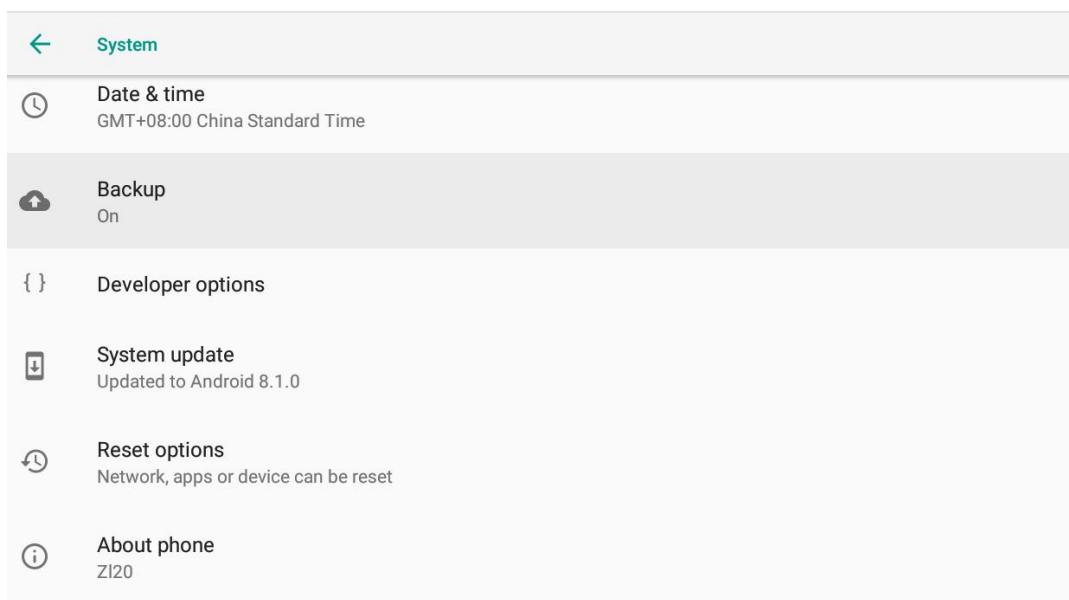

4.4 Storage


Remove TF card, view of the available storage space

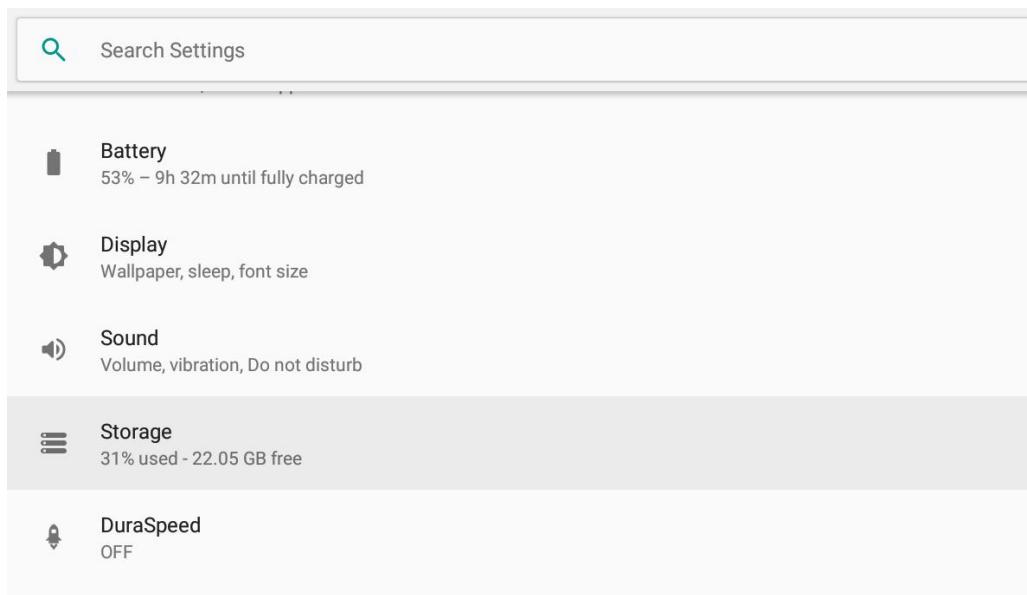

【Remark】 :please touch option "delete SD card", so that can safety to remove SD card

4. 5 Language & keyboard

Setting: (Language),text input and automatic error correction options;

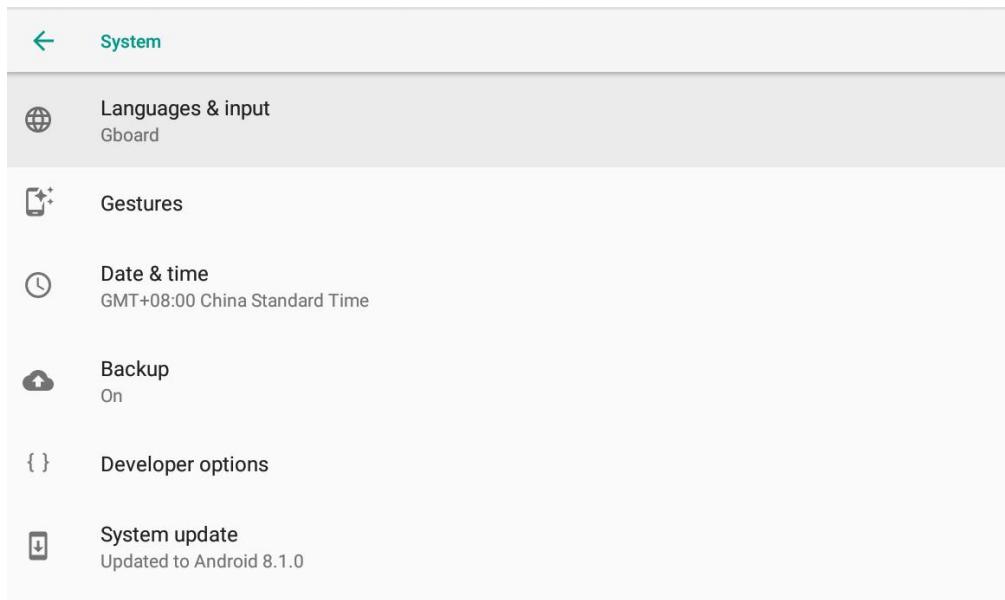

Select Language: 54 kind of national languages are available.

Remark : Android system can support 54 kind of language, now main interface just support 14 language.

Android keyboard: Android keyboard setting

Sound on Key-press


Auto-capitalization

Show suggestions: Display suggested words while typing

Auto-complete: Space bar and punctuation automatically insert highlighted word


4. 6 Date & time setting

Set date, set time, Select time zone and select date format

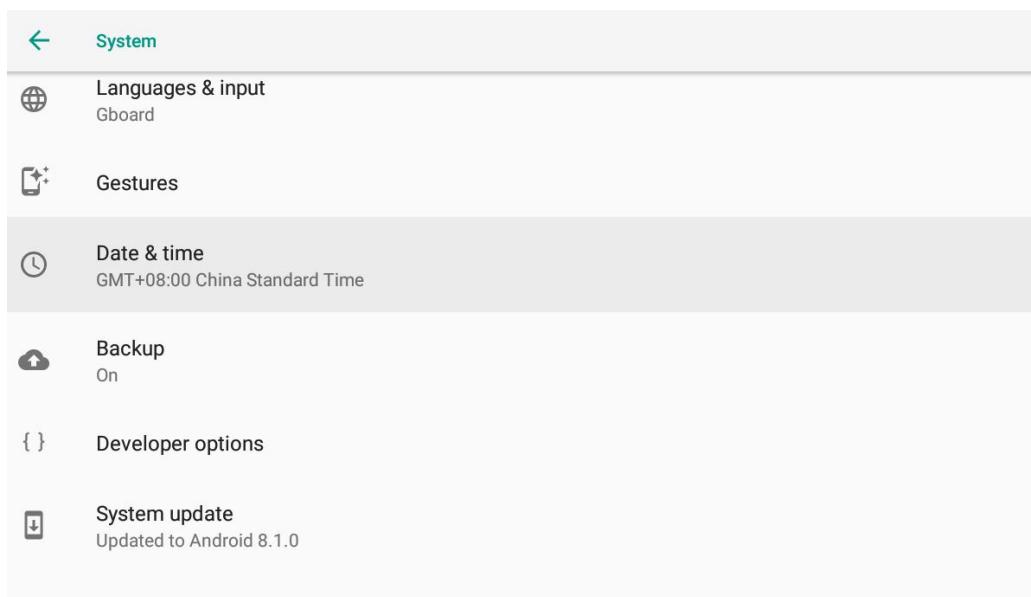


4. 7 Developer options

Choose USB work pattern: OTG/HOST/SLAVE-

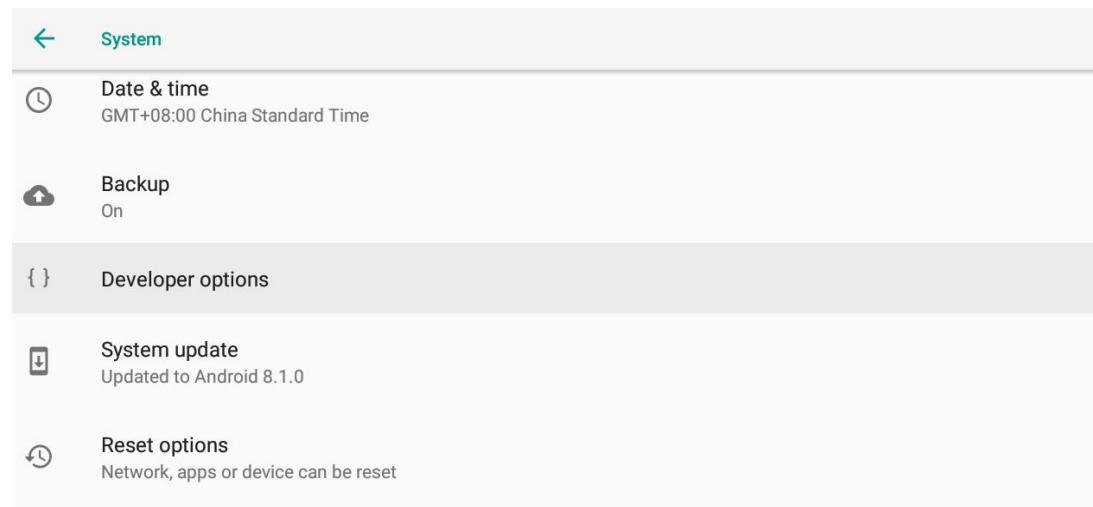

4.8 About tablet

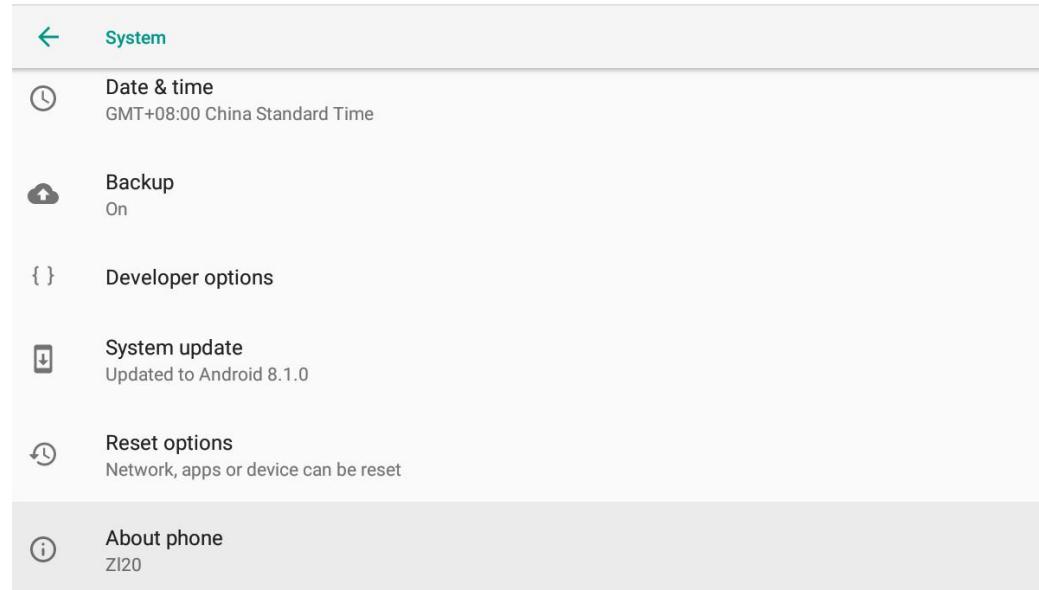

The company reserves the right to vary the product design
Product pictures and content are for reference only,
and specifications of the right, then without prior notice.
Specifications appearance please to sales kind prevail.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction