


TABLE OF CONTENTS	
INTRODUCTION	1
UNIT AT A GLANCE	2
FEATURES AT A GLANCE	3
QUICK START GUIDE	4
CONNECTING TO A DEVICE	5
FUNCTIONS	6
MAINTENANCE	6
POWER LED LIGHTS	7
POWER BATTERY PACK INFORMATION	7
PLUGGING INTO POWER/ACBATTERY CARD	7
LINK MODE	8
SOUND PROFILES	8
RESET FUNCTION	10
SAFETY GUIDELINES	10
SUPPORT	10
LIMITED WARRANTY	10
SPECIFICATIONS	10

INTRODUCTION

Welcome to your new Raycon Boombox Speaker!

We at Raycon. We want you to enjoy your new product to the fullest. We have included this manual to help you get the most out of your new speaker. We have included a lot of information to help you get the most out of your new speaker. We have included a lot of information to help you get the most out of your new speaker.

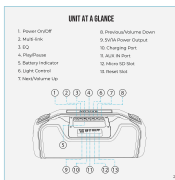

FEATURES AT A GLANCE


- THREE SOUND PROFILES** - Select from three sound profiles: Standard, Bass Boost, and Treble Boost.
- LINK MODE** - Connect two Boombox Speakers for a larger sound field.
- POWER BATTERY PACK INFORMATION** - Information about the internal battery and charging options.
- LINK MODE** - Connect two Boombox Speakers for a larger sound field.
- POWER BATTERY PACK INFORMATION** - Information about the internal battery and charging options.

QUICK START GUIDE

1. Press the power button to turn on the speaker. The speaker will power on automatically.
2. Press the mode button to select a sound profile. The speaker will cycle through the three sound profiles.
3. Press the play/pause button to start playing music. The speaker will play music from the connected device.

CHARGING YOUR DEVICE

1. Use the provided USB cable to connect your device to the speaker. The speaker will charge your device.
2. While charging, the LED lights will flash. When fully charged, the LED lights will turn off. Charge time is approximately 4 hours.

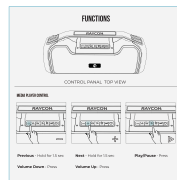

FUNCTIONS

Connect to a device using the provided USB cable. Press the play/pause button to start playing music. Press the previous/next buttons to skip tracks. Press the volume up/down buttons to adjust the volume.

MULTI-LINK MODE

Press the link mode button to enter link mode. The speaker will enter link mode and the LED lights will flash. Press the play/pause button to start playing music. The two speakers will play music in sync.

PARTY LED LIGHTS

Press the power button to turn on the speaker. The LED lights will turn on and flash. Press the mode button to select a sound profile. The LED lights will change color and flash pattern.

PLAYING MUSIC FROM MICRO SD CARD

Insert the micro SD card into the slot on the back of the speaker. Press the play/pause button to start playing music. The speaker will play music from the micro SD card.

SAFETY GUIDELINES

Do not use the speaker in wet or damp conditions. Do not use the speaker near open flames or heat sources. Do not use the speaker near children or pets.

RESET FUNCTION

Press the power button to turn on the speaker. Press and hold the mode button for 10 seconds. The speaker will reset to factory defaults.

FAQ & ADDITIONAL RESOURCES

For more information, visit our website at www.raycon.com. For technical support, contact our customer service team.

ROHS COMPLIANCE

This product is RoHS compliant. It does not contain any hazardous substances in excess of the limits specified in the RoHS Directive.

CE MARKING

This product carries the CE mark, indicating that it conforms to the requirements of the CE marking legislation. The CE mark is a certification mark that indicates that the product meets the requirements of the CE marking legislation.

For more information, visit our website at www.raycon.com. For technical support, contact our customer service team.

