 


Children's microphone

 
Operating instruction

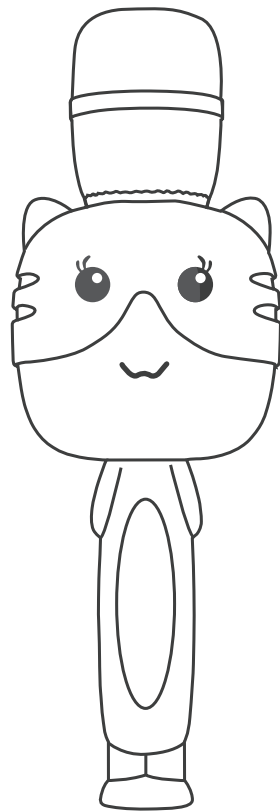

Q6

Suitable for ages 3-8

Product introduction

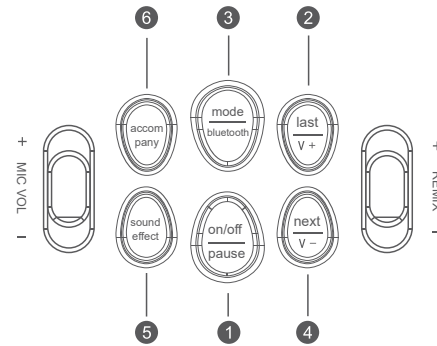

- ① The power supply / play/ pause: Keep pressing for three seconds to turn the machine on and off, short press play/pause, long press the reset function for 10 seconds.
- ② Last tune / volume +: Press one short and one long for volume.
- ③ The bluetooth / mode: Short press to convert Bluetooth, long press to convert mode (Must be in case of TF card).
- ④ Next tune / volume - Short press the next tune, long press the volume down.
- ⑤ Sound Short press to switch to five sound modes.
- ⑥ The accompaniment: Press accompaniment on and off.

Product technical parameters

The output power: 2*5W
 Frequency range: 100HZ-10KHZ
 Reverberation model: The echoes reverberate
 The power supply mode: Lithium battery output power supply
 Battery capacity: 1800 mah
 Charging power supply: DC 5V
 Product accessories: charging line *1, instruction *1
 Execution standard: GB 8898-2011 GB 17625.1-2012



General condition and treatment

Failure phenomenon	Cause of failure	Elimination method
The microphone no sound	Power supply is not open or vocal volume is not good	Power on or mediator voice volume
The microphone no reverberation effect	Reverberation switch is not set	Adjust the reverb switch to the correct position
Noisy singing or recording	Ambient noise mobile phone signal jamming karaoke software setup problem	To the quiet place using away mobile phones with the tone to a minimum
Some cell phone models don't record music well	Mobile phone products matching sound processing chip is weak	Restart or replace your phone
Bluetooth to play the accompaniment staccato	Bluetooth distance too far between mobile phone and products have obstacles	Stay close to the phone to avoid obstacles
Bluetooth music playback distortion	The volume is too high and the battery is too low	Turn down the volume of your phone's media and charge the product

Charging instructions

1. The product will shut down automatically when the battery power is too low.
2. Connect the standard adapter with the accessory USB rechargeable battery.
3. When the battery is too low, the light will turn red. After charging, it will go out.
4. The normal continuous use time is 6-8 hours, and the normal charging time is 3-4 hours.

Instructions

Wireless karaoke

1. Bluetooth connection Open the bluetooth of the mobile phone and search for the Bluetooth device Q6. Click to connect the mobile phone to the product, and the machine will display the successful Bluetooth connection.
2. Mobile phone products with the same memory function of Bluetooth with mobile phone will be connected automatically after starting up.

Mobile phone recording

1. Open the mobile phone software popular karaoke, cool dog music or log in other karaoke software can choose their favorite songs recording.
2. Debug and save songs according to their respective karaoke software instructions.

After-sales Service Description

Dear customer, thank you very much for using our products. In order to effectively protect your rights and interests, specify the repair, replacement and return of the products that the distribution agent and the Company shall bear:

Hereinafter referred to as three guarantees of responsibilities and obligations, please read the following items:

1. <product> warranty card is the necessary certificate for our company to provide free after-sales service for our products within the warranty period.

2. According to the principle of who sales who is in charge who is responsible for three packs of products, if quality problems with the product warranty card, contact the dealer, the dealer to provide service to customers in our company for dealers to provide technical support service;

3. The Company promises that the date shall be subject to the actual date of delivery of the bill, and the customer may choose to return or replace the non-human quality problem or repair it within seven days from the date of sale. The customer may choose to replace or repair the defective products within eight to fifteen days after the sale. If quality problems occur within one year after the sale, the customer can maintain the products for free. After the warranty period, the customer can maintain the products for life.

4. The three guarantees of services are not available under the following circumstances:

- a. Exceeding the period of three guarantees;
- b. Damage caused by failure to use, maintain and keep the products as required in the product manual;
- c. Damage caused by maintenance without undertaking maintenance;
- d. No product warranty card;
- e. The contents on the warranty card are inconsistent with the real product or have been altered;
- f. Damage caused by force majeure;

Warranty service card

Thank you for your trust and support for our products, we will wholeheartedly provide you with satisfactory services, please fill in the relevant entries accurately, to ensure your legitimate rights and interests.

Warranty service card		
Product model		Maintenance record
Purchase date		
The agent		
Invoice date		
Contact phone number		
Customer name		
The zip code		

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.