


105g双铜纸, 风琴折, 过哑油, 折叠后尺寸: 55\*75mm



**WIRELESS EARBUDS E400**  
**USER MANUAL**  
Please read this manual carefully before use and keep it for future reference.

**PRODUCT OVERVIEW WIRELESS EARBUDS**

- TWS Earbuds
- Swarovski Crystal
- LED indicator (White)
- Charging Case
- Type-C charging port
- Touchpad (Answer / End call / Play / Pause / Previous song / Next song)
- Microphone
- Charging Pins

**PACKING LIST**

- Charging Case \* 1
- Wireless Earbud \* 2
- Type-C Cable \* 1
- User Manual \* 1

**POWER ON**

Option 1: Take out the earbuds and put them in the charging case. Fully charge both the earbuds and the charging case before the first-time using. It takes approximately 30 minutes to fully recharge the earbuds.

Option 2: Open the charging case and take the earbud(s) out. Or when the earbud is in power-off status, please touch and hold the touchpad on the left/right earbud for 3 seconds to power on. (The earbuds will turn on automatically, the earbuds will enter the connection mode.) You will hear a voice prompt of "Power On" from the earbud.

**PAIR**

Step 1: Turn on the Bluetooth of your Bluetooth device.  
Step 2: In the list of found "ELLAS'S EARS" Bluetooth devices in your Bluetooth device.  
Step 3: Choose "ELLAS'S EARS" to pair, you will hear a voice prompt of "Pairing mode".  
Step 4: If the connection is successful, you will hear a voice prompt of "Connected" from the earbuds.

**WEAR**

Insert the earbud into your ear and rotate to fit comfortably. Ensure the microphone is pointing towards your mouth.

**CALL**

**Answer a call**  
Tap the Touchpad of either earbud once

**Reject a call**  
Tap and hold the Touchpad for either earbud two seconds.

Note:  
Switching between the earbud and the phone, please also keep the ear in contact during the call.

**MUSIC**

**Play / Pause / Previous / Next**  
Play / Pause: Tap the Touchpad of either earbud once. (Some phones need to open the media player.)  
Previous: Tap the Touchpad of the Left (L) Earbud Three Strikes.  
Next: Tap the Touchpad of the Right (R) Earbud Three Strikes.

Short press again  
Short press once  
Click the left (L) or right (R) earbud MFB

Three strikes  
Tap and click the Left (L) earbud MFB

Three strikes  
Tap and click the Left (L) earbud MFB

**Cautions**  
1. If music is playing when you call, the earbud will automatically play music after the call ends.  
2. If the voice assistant is used, the music will be paused.

**CHARGE**

**The Explanation of LED Indicators**  
1. The light shows white flashing when charging.  
2. Flashing red light when the battery is below 30%.  
3. The indicator light is always on when fully charged (white light).

**Multiple charging methods:**  
A: [Diagram of earbud in case]  
B: [Diagram of earbud in case with Type-C cable]  
C: [Diagram of earbud in case with Type-C cable]

**LED indicator (white)**  
Flashes red when the battery is below 30%

**POWER ON**

**Manual operation**  
1. Open the charging case and take the earbud(s) out.  
2. Tap and hold the touchpad on the left/right earbud for 3 seconds to power on. You will hear a voice prompt of "Power On" from the earbud.

**Automatic operation**  
Open the charging case and take the earbud(s) out. The earbud will power on automatically, with voice prompt of "Power On".

**POWER OFF**

**Manual operation**  
1. Tap and hold the touchpad on the left/right earbud for 5 seconds. You will hear a voice prompt of "Power Off" from the earbud.  
2. After the earbuds are disconnected, put them into the headphone case and close the cover.

**Automatic operation**  
1. Put the earbud(s) back into the charging case and close the case.  
2. Earbud(s) automatically turns off (and enters charging mode).

**VOICE ASSISTANT**

**Step 1:** Tap the Touchpad of either earbud for 2 seconds to wake up the voice assistant, you will hear a voice prompt of "Power On".  
**Step 2:** The corresponding voice assistant screen will pop up and you can easily give commands.

**Tips: You may try out the following commands:**  
"What is the weather?"  
"Play a song."  
"Set a reminder"

**RÉSET**

When two "ella's ears" pairing names appear in the phone list at the same time, only one earbud has sound when connected to Bluetooth which means the left ear and the right ear have lost the pairing, please follow the following:  
1. Delete the device and turn off the Bluetooth device;  
2. Single headset on, hear "pairing mode" after 5 consecutive quick click touch keys, hear "ring, shutdown", the headset reset successfully, the other one also the same operation;  
After the two earbud(s) reset successfully, close to the self-connection, and then open the phone after the successful Bluetooth connection device.

Put the two headsets close to self-connection

**PRODUCT PARAMETERS**

Bluetooth version	5.0
Transmission range	About 10m
Earbuds weight	About 3g
Weight of the charging case	About 81g
Speaker size	About 13mm
Earbuds battery capacity	Li-Polymer Battery 3.7V/33mAh
Charging case battery capacity	Li-Polymer Battery 3.7V/400mAh
Working time	About 3h
Earbuds charging time (include the charging case)	About 1.5h
Standby time (include the charging case)	About 720h
Frequency range	2.4-2.48GHz
Sensitivity	99±3dB
Impedance	32Ω±10%

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.