



2 . 0 Channel Soundbar Elf R2



USER'S MANUAL

 



Before using the soundbar, please read this manual thoroughly and retain it for future reference.


Contents

1. Important Safety Instructions	1
1.1 Safety.....	1
1.2 Warning	2
2. What's in the Box	4
3. Specifications	4
4. Identifying the Parts	5
4.1 Main Unit	5
4.2 Remote Control	6
5. Preparations	7
5.1 Prepare the Remote Control	7
5.2 Replace the Remote Control Battery	7
5.3 Placement and Mounting	7
6. Connections	9
6.1 Waterproof protection cap.....	9
6.2 Use the HDMI ARC Socket	9
6.3 Use the OPTICAL Socket.....	9
7. General Operation	10
7.1 Standby/ON	10
7.2 Automatic Power Off Function	10
7.3 Select Modes	10
7.4 Adjust the Volume	10
7.5 Select Equalizer (EQ) Effect.....	10
8. OPTICAL / COAXIAL / HDMI ARC Operation	10
9. Bluetooth Operation	11
10. USB Operation	11
11. Troubleshooting	12

1. Important Safety Instructions

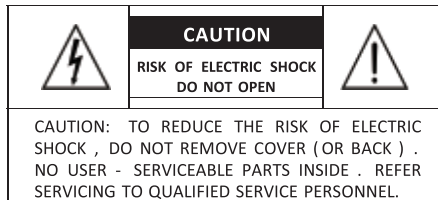


 The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1.1 Safety

- 1 **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- 2 **Keep these instructions** – The safety and operating instructions should be retained for future reference.
- 3 **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- 4 **Follow all instructions** – All operating and usage instructions should be followed.
- 5 Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- 6 Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 7 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

- 8 Only use attachments/accessories specified by the manufacturer.

- 9  Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- 10 Unplug the apparatus during lightning storms or when unused for long periods of time.
- 11 Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 12 Minimum distance around the apparatus for sufficient ventilation is 5cm.
- 13 The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc...
- 14 No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 15 Batteries should be recycled or disposed of as per state and local guidelines.
- 16 The use of apparatus in moderate climates.

Caution:

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

1.2 Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the Adapter from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.

- The rating label is pasted on the bottom or back of the equipment..



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



We hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sylvox is under license. Other trademarks and trade names are those of their respective owners.

FCC Statement :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

California Prop 65 Warning :



WARNING

This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer.

For more information go to: www.P65Warnings.ca.gov.

2. What's in the Box

Soundbar	x1	DC Adapter	x1
HDMI Cable	x1	Wall mount kit	X2
Optical Cable	x1	User Manual	x1
Aux Cable	x1	Warranty Card	x1
Remote control	x1		


- Images, illustrations and drawings shown on this User Manual are for reference only. Actual product may vary in appearance.

3. Specifications

Soundbar	
Power supply	100-240V~ 50/60Hz
Adaptor output	DC 12V \approx 3A
Power consumption	15 W / < 0.5 W (StandBy)
USB	5V \approx 500mA Hi-Speed USB (2.0) / FAT32 / FAT16 32G (max) , MP3
Dimension (WxHxD)	480 x 60 x60 mm
Net weight	0.9 kg
Audio input sensitivity	800mV
Frequency response	40Hz - 20KHz
Amplifier	30 W (Max. output power)
Speaker Impedance	4 Ω x 2
Wireless Specification	
Bluetooth version /profiles	V 5.2 (A2DP, AVRCP)
Maximum power transmitted (EIRP)	\leq 5 dBm
Bluetooth frequency bands	2402 MHz ~ 2480 MHz
Remote Control	
Distance	10m
Battery type	AAA (1.5V X 2)

4. Identifying the Parts

 4.1 Main Unit

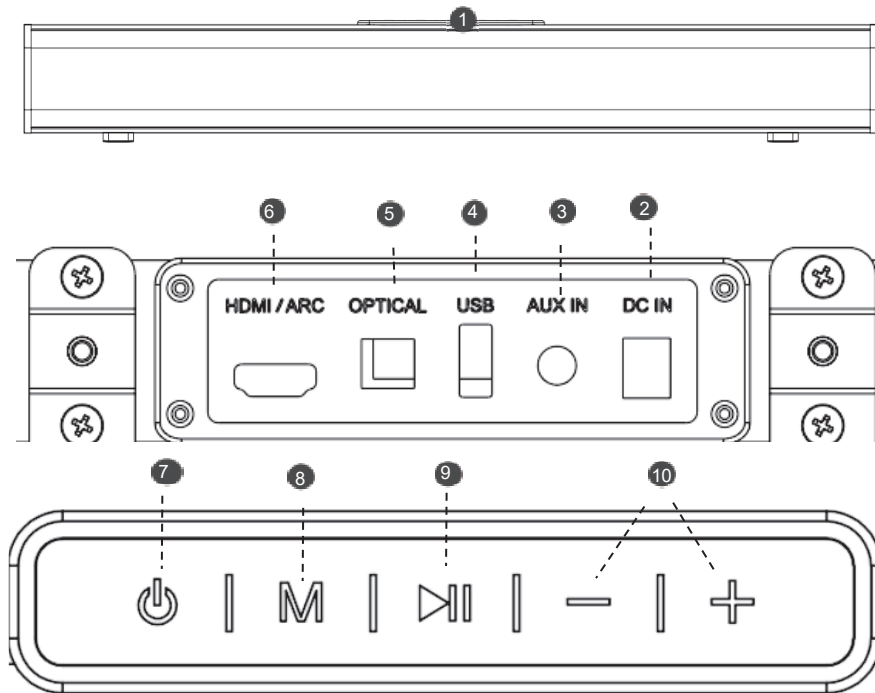

① LED Indicators

- White indicator: HDMI ARC mode/Bluetooth/Aux/USB mode

② DC~ Socket

Insert the adapter.

③ Aux audio port

④ USB Socket

Insert the USB device to play music.

⑤ OPTICAL Socket

⑥ HDMI ARC interface

Connect to TV with HDMI cable.

⑦ Power on/off

 
⑧ Mode conversion

⑨ Pause/Play

⑩ Volume adjustment (fast press the Button is up/down item, long press the Button is up/down volume)

4.2

Remote Control

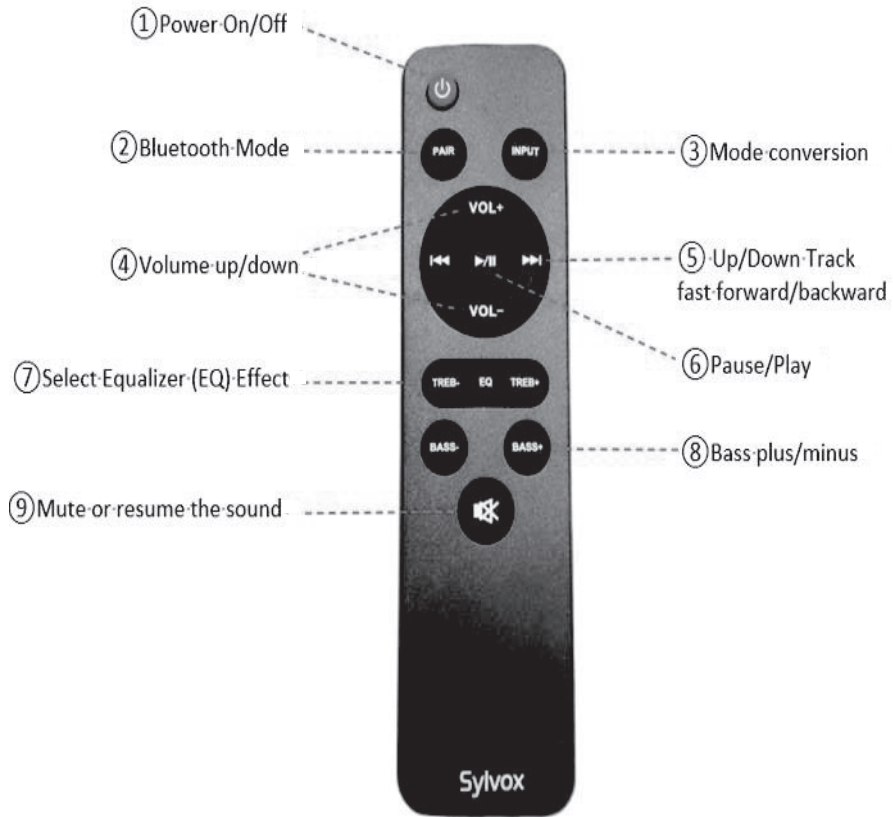

5. Preparations

 
5.1 Prepare the Remote Control

The provided remote control allows the unit to be operated from a distance.

- Even if the remote control is operated within the effective range 19.7 feet (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the remote control is operated near other products which generate infrared rays, or if other remote control devices using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

5.2 Replace the Remote Control Battery

- 1 Press and slide the back cover to open the battery compartment of the remote control.
- 2 Insert two **AAA** size batteries (included). Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
- 3 Close the battery compartment cover.

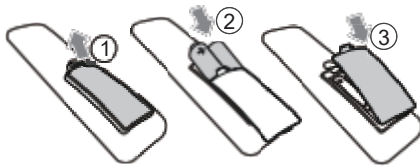

Precautions Concerning Batteries

 
- Be sure to insert the batteries with correct positive “+” and negative “-” polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.

- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

5.3 Placement and Mounting

Placement

According to the picture, install the hanger on the RV.

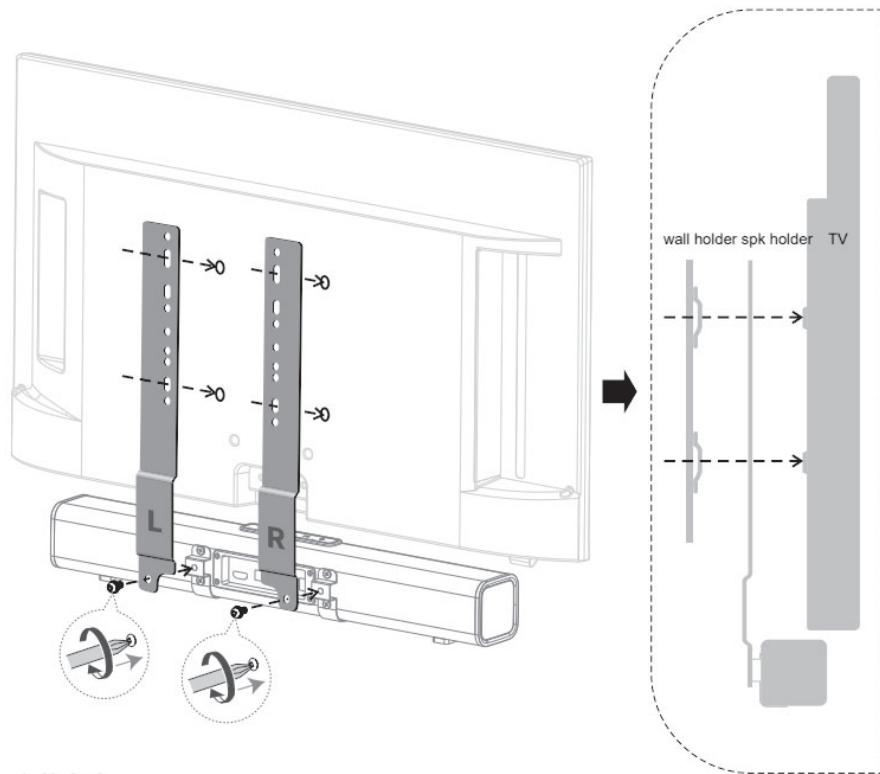


Installation method:

1. Lock the support and Soundbar with M4 screws
2. Align the four VESA holes of the TV with the positioning holes of the support, and then fix them on the wall mount bracket as a whole

6. Connections

6.1 Use the HDMI ARC Socket

 The ARC (Audio Return Channel) function allows you to send audio from your ARC-compliant TV to your sound bar through a single HDMI connection. To enjoy the ARC function, please ensure your TV is both HDMI-CEC and ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (volume +/- and MUTE) of the soundbar.

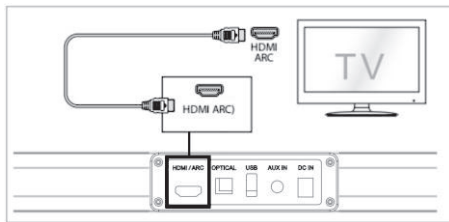


- Connect the HDMI cable from unit's HDMI (ARC) socket to the HDMI (ARC) socket on your ARC compliant TV. Then press the remote control to select HDMI ARC mode.

Tips:

- Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to the owner's manual.
- Only HDMI 1.4 or higher version cable can support the ARC function.

6.2 Use the OPTICAL Socket

 
- You also can use the OPTICAL cable to the TV's OPTICAL OUT socket and the OPTICAL socket on the unit.

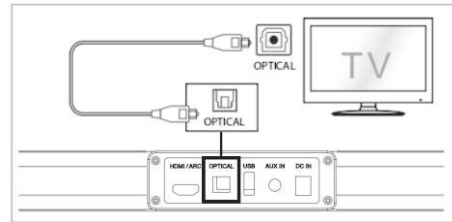

6.3 Connect Power

Risk of product damage!

 - Ensure that the adapter supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Before connecting the adapter, ensure you have completed all other connections.
- Connect the adapter cable to DC~ socket of the main unit and then into a mains socket.

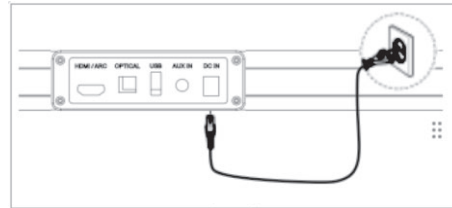

Note:

- If there is no power, ensure the Adapter cord and plug are fully inserted and the power is turned on.
- Adapter's plug type vary by regions.