 


Sylvox™

Waterproof TV

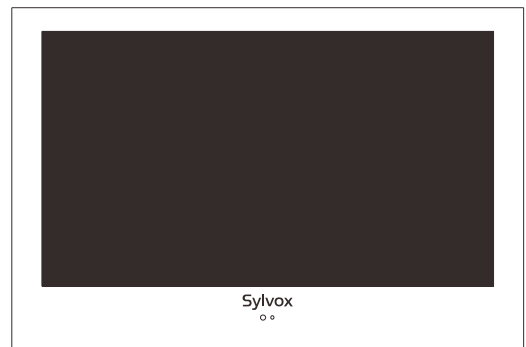

USER'S MANUAL

Designed in California, Assembled in China

Note: The product and illustrations in this user's manual is only for explanation purposes and may vary depending on model.

This manual covers models

WT24A0KAGA

WT32A0KAGA

General Information

To avoid damaging the television set please observe the following safety instructions during setup and use.

Cleaning the television set	Before cleaning, disconnect the television set. Use only a soft damp cloth or a special cleaning product for flat-screens.
LED Display	Too much pressure on the screen can damage the television set.
Heat/damp/humidity	The television set should not be exposed to high temperatures (radiators, open fire). The television set should not be used in areas with high humidity.
Condensation	If moved from a cool area to one with a higher temperature, the television set should be left for at least an hour before plugging it in. A rapid change of temperature can lead to the formation of condensation in the television set itself. This can lead to damage if the television set is in use.
Air Circulation	To prevent overheating of the television set the ventilation slots at the rear should always be clear.
Small Objects	It is important to ensure that no small objects or liquids enter the television set. They can cause damage or even fire.
Liquids/Candles	Do not place anything holding a liquid or any candles on the television set.
Crushing	Take care to avoid crushing fingers or other objects when turning the television set in any direction.
Electric Supply	Use the television set only with the voltage indicated in the specifications. Ensure that there is easy access to the plug and that the television set can always be disconnected from the electricity supply. Do not disconnect the television set by pulling the power cable. Always take hold of the plug. The power cable must not be kinked or placed over sharp edges.
Moving the Television Set	When moving the television set, hold only the casing.
Repairs/Accessories	Repairs and servicing must be undertaken only by authorised and trained personnel.
	In accordance with the Batteries Regulation, batteries are to be disposed of only in containers provided for this purpose.



In extreme weather (storms, lightning) and long inactivity periods (going on holiday) disconnect the TV set from the mains. The mains plug is used to disconnect TV set from the mains and therefore it must remain readily operable. If the TV set is not disconnected electrically from the mains, the device will still draw power for all situations even if the TV is in standby mode or switched off.

IMPORTANT - Please read these instructions fully before installing or operating
WARNING: Never let people (including children) with reduced physical, sensory or mental capabilities or lack of experience and / or knowledge use electrical devices unsupervised.

- The TV set is intended for Waterproof and similar general use but may also be used in public places.
- For ventilation purposes, leave at least 5cm of free space around the TV.
- The ventilation should not be impeded by covering or blocking the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- The power cord plug should be easily accessible. Do not place the TV, furniture, etc. on the power cord. A damaged power cord/plug can cause fire or give you an electric shock. Handle the power cord by the plug, do not unplug the TV by pulling the power cord. Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock. Never make a knot in the power cord or tie it with other cords. When damaged it must be replaced, this should only be done by qualified personnel.
- Do not expose the TV to dripping or splashing of liquids and do not place objects filled with liquids, such as vases, cups, etc. on or over the TV (e.g., on shelves above the unit).
- Do not do not place open flames such as lit candles on the top of or near the TV.
- Do not place any heat sources such as electric heaters, radiators, etc. near the TV set.
- Do not place the TV on the floor and inclined surfaces.
- To avoid danger of suffocation, keep plastic bags out of the reach of the babies, children and domestic animals.
- Do not dispose of the batteries in fire or with hazardous or flammable materials.
- Warning: Batteries must not be exposed to excessive heat such as sunshine, fire or the like.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

WARNING

 
Never place a television set in unstable or inclined locations. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such, Educating children about the dangers of climbing on furniture to reach the television set or its controls.

WALL MOUNTING WARNINGS


Read the instructions before mounting your TV on the wall.
 Do not install the TV on a ceiling or on an inclined wall.
 Use the specified wall mounting screws and other accessories.
 Tighten the wall mounting screws firmly to prevent the TV from fall. Do not over-tighten the screws.

Accessories

Please make sure the following items are included with your TV.
 If any items are missing, Please contact us.



TV Module

 


In-Wall Mounting Plate




Screws PA4*25 (11 pcs)



 
Warranty Card




User's manual

 

Power Cord

 

Adapter

 

Batteries (AAA x 2)



Remote Control

Content

TV Specifications	1
Installation	2-4
Illustration of the Interface	5
Remote Control Unit	6-7
Menu Operation	8-18
Input Setup	8
Picture	10
Sound	11-12
Function	12-13
Time	14
Option	15
Lock	16-17
Channel	18
Network Setting	19-21
Internet	22-26
Digital Media Player	27
Troubleshooting	28-29

TV Specifications

Screen size	24"
Display Type	TFT LED
Resolution	1920 X 1080
Aspect Ratio	16:9
Power	DC 12V=4A
Audio Output	L/R 5W X 2
Dimensions	23.35 x 15.57 x 2.20 inch
Operating Temperature	-4° to 104° F (-20° to 40°C)


Screen Size	32"
Display Type	TFT LED
Resolution	1920 X 1080
Aspect Ratio	16:9
Power	DC 12V=6A
Audio Output	L/R 5W X 2
Dimensions	30.52 x 19.99 x 2.46 inch
Operating Temperature	-4° to 104° F (-20° to 40°C)

Note:
Design specification and modification maybe made at any time without prior notice, all data and dimensions are approximations.


Installation

Note:
Ensure that you get the correct viewing position when installing your mounting plate. Once you have got the correct position check that there are no hazards around the area of installation, for example, cables or pipes.

 Step 1
Please use our Mounting plate TV sizes below to cut out a recess in the wall to fit into the wall depending on what TV size you have.

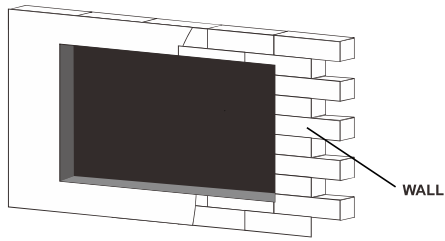


 Step 2
Unscrew the plate at the back of the TV and connect all required wire connection from the wall, through the square cable hole to the TV, then screw back the plate securely ensure all the connected wires are going through the square cabling hole are not pinched or broken.

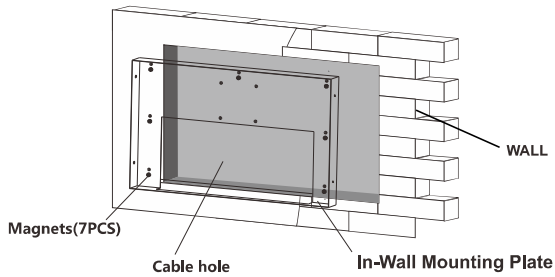


Installation

 Step 3
Fix your mounting plate into place with the screws provided.

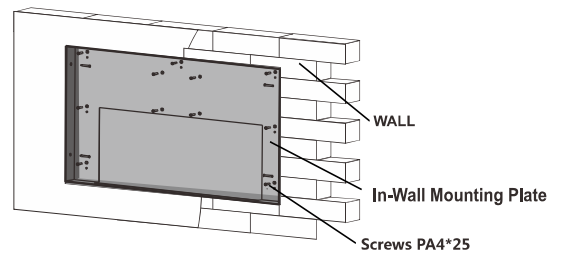

 Step 4
Once you have checked that the TV is functioning correctly and all cables are fitted, apply unbroken bead of silicon to the inside of the TV bezel at least 5 mm thick.

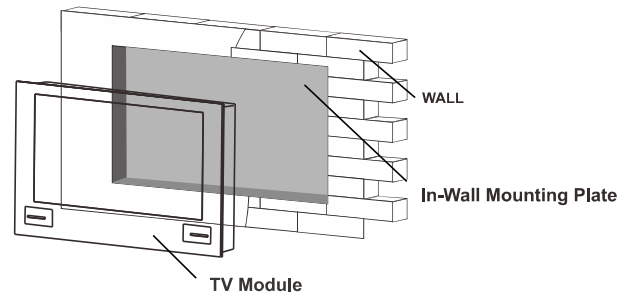

Installation

Step 5

Please ensure the bezel is firmly sealed to the wall surface to complete the waterproof properties of the installation. If it is not sealed correctly this will void your warranty.


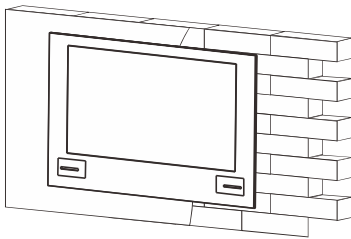 


Illustration of the Interface

 24"/32"

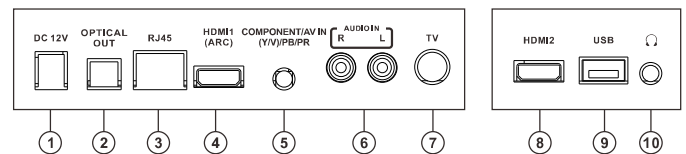

- 1. DC 12V**
DC input.
- 2. OPTICAL**
Connecting for OPTICAL signal.
- 3. RJ45**
Connecting for RJ45 signal.
- 4. HDMI1**
Connecting for HDMI signal.
- 5. COMPONENT/AV IN (Y/V)/PB/PR**
Connecting for the COMPONENT/AV IN (Y/V)/PB/PR Input in Component mode.
- 6. R/L AUDIO IN**
Connecting for the audio output jacks on your Camcorder or DVD.
- 7. TV**
Connected to external antenna to receive the ATV/DTV program in ATV/DTV mode.
- 8. HDMI2**
Connecting for HDMI signal.
- 9. USB**
Connecting for USB signal.
- 10. EARPHONE**
Connecting for headphone.

Note: The product and illustrations in this user's manual is only for explanation purposes and may vary depending on model.

Remote Control Unit

1. POWER: Turn the TV on and off.

2. INPUT: This button is used to switch among different sources, Select a source and press ENTER button to confirm.

3. Digital Buttons(0-9, *): Directly select channel with digital buttons.

4. CH RTN: Switch to the previous program.

5. YouTube: If network connects, press this key to view YouTube directly.

6. LIST: Press it to show channel list and favorite list on screen.

7. HOME: Press it to go to App home page.

8. NETFLIX: If network connects, press this key to view NETFLIX directly.

9. Q.MENU: Press this key to go to quick menu.

10. MENU: Display the main menu or exit the current menu.

11. ENTER: Validation key.

 
12. Arrow buttons ◀▶▲▼: Use to select on-screen menu items and change menu values.

13. BACK: Return.

14. EXIT: Exit the menu.

15. COLOR BUTTONS: It's used as it's showed in the EPG or Program Edit menu.

16. VOL+/-: Press these buttons to adjust the volume.

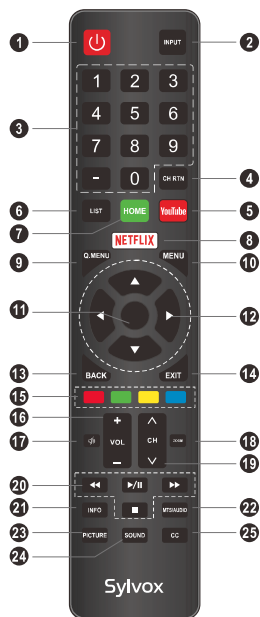

Remote Control Unit

17. MUTE: Press this button to cut off the sound of the TV set temporarily, press again to resume.

18. ZOOM: Press this button to select the aspect ratio of the screen.

19. CH▲/▼: Press these buttons to change channel upward or downward.

20. DIGITAL MEDIA PLAYER CONTROL BUTTON: Include play/pause, stop, previous, next, backward, forward is used in USB mode. No record function. Please refer to relevant instructions in the section of multimed player.

 
21. INFO: Display the program information.

22. MTS/AUDIO: In USB mode, press this button to switch audio track when movie is playing. In TV mode, press this button to switch MTS or Audio Language.

23. PICTURE: Press this button to select among Sports, Normal, Mild, User.

24. SOUND: Press this button to select among Standard, Sports, Movie, Music, User.

25. CC: Display CC function menu in TV/AV mode.

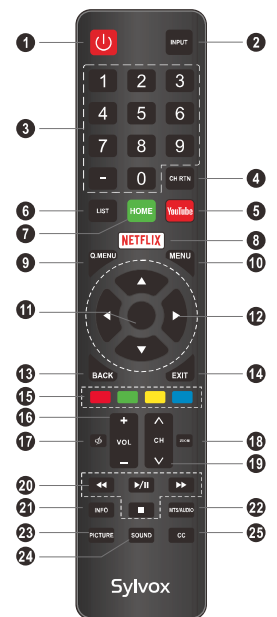

Menu Operation

1 Input Setup

Press **INPUT** key on the remote control to enter "INPUT SOURCE" menu.
Use **◀▶** key to select a input source and press **ENTER** key to confirm.



2 Channels Selection

There are four ways to select channel:

1) Using number keys, and **"ENTER"** keys on the remote control to select channel directly.

To select channel 90, press **9 0** .

When you use the number buttons, you can directly select channels that were either erased or not memorized.

2) Using **CH ▲ / ▼** key on the remote control or on your TV to select channel.

When you press the **CH ▲ / ▼** key, the TV changes channels in sequence. You will see all the channels that the TV has memorized.

You will not see channels that were either erased or not memorized.

3) Press **CH RTN** key to return to previous channel, press it again to return to current channel.

To quickly switch between two channels that are far apart, tune to one channel, then use the number keys to select the second channel. Then use the **CH RTN** button to quickly alternate between them.

CH RTN is not activated if no channel has been changed after TV turning on.

4) Select channels from "Channels List" or "Favorite List".

Press **"ENTER"** key to choose from "Channel List" menu.

3 Volume Adjustment and Mute Setup

Volume adjustment

Press **VOL+ / -** key on the remote control or the TV to display "Volume" menu, adjust the volume of TV between 0 to 100 by using **VOL+ / -**-key:

Menu Operation

- To increase the volume, press **VOL▲** key;
- To decrease the volume, press **VOL▼** key;



 
Mute

Press **"MUTE"** and the sound cuts off. The MUTE icon will appear in the lower-left corner of the screen.

To resume sound, press the **"MUTE"** button again, or simply press the **VOL▲** key.

4 Current Channel Information

Press **"INFO"** key on the remote control to view current channel information, the indications of channel information are listed in the following table.




Press **"EXIT"** key on the remote control to exit this OSD.

Menu Operation

Picture

 1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key to select "Picture" option.
3. Press **▶** key to enter "Picture" submenu.
4. You can also press the **PICTURE** key on the remote control to select one of the picture settings.

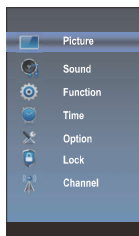

Picture Mode

Your TV has four picture settings (Sports, Normal, Mild, User) that are preset at the factory. Only "User" mode can be set to your preference by adjusting particular items such as Contrast, Brightness, Color, Sharpness.

1. Press **▲/▼** key to select "Picture Mode" option.
2. Press **▲/▼** key to select one picture mode.

 
User settings for PICTURE

(Contrast, Brightness, Color, Sharpness, Tint)

Your set has several settings which allow you to control picture quality.

1. Press **▲/▼** key to select a particular item.
2. Press **◀/▶** key to decrease or increase the value of a particular item.

Note: The adjusted values are stored according to the selected particular item.

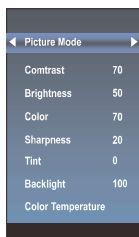

Contrast: Adjusts the lightness and darkness between objects and the background.
Brightness: Adjusts the brightness of the picture.
Color: Adjusts the colors, making them lighter or darker.
Sharpness: Adjusts the outline of objects to either sharpen them or make them more dull.
Tint: Adjusts the Tint of the picture.

Backlight

You can Change the brightness of the entire screen according to your preference.

1. Press **▲/▼** key to select "Backlight" option.
2. Press **◀/▶** key to increase or decrease the backlight value.

Backlight: Adjusts the brightness of the whole screen.

Color Temperature

You can change the color of the entire screen according to your preference.

 
1. Press **▲/▼** key to select "Color Temperature" option.
2. Press **▲/▼** key to select one color temp.

Cool: Makes whites bluish.
Standard: Makes whites nature
Warm: Makes whites reddish.

Menu Operation

Sound

1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key to select "Sound" option.
3. Press **▶** key to enter "Sound" submenu.
4. You can also press the **SOUND** key on the remote control to select one of the sound.

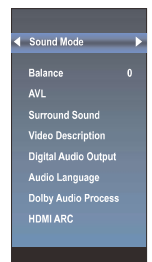

Sound Mode

You can select the type of the special sound effect to be used when watching a given broadcast.

Your TV has five sound settings ("Standard", "Music", "Movie", "Sports", "User") that are preset at the factory.

1. Press **▲/▼** key to select "Sound Mode" option.
2. Press **▲/▼** key to select one sound mode.

- Standard: Selects the normal sound mode.
- Music: Provides clear and live sound for music.
- Movie: Provides live and full sound for movies.
- Sports: Emphasizes bass over other sounds.
- User: Selects your custom sound settings.

Balance

If the volumes of the left speaker and the right speaker are not the same, you can adjust the "Balance" to suit your personal preference.

1. Press **▲/▼** key to select "Balance" option.
2. Press **◀/▶** key to decrease or increase the value of the item.

AVL

Each broadcasting station has its own signal conditions, and it is inconvenient to adjust the volume every time the channel is changed. "AVL" automatically adjusts the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

1. Press **▲/▼** key to select "AVL" option.
2. Press **▲/▼** key to select "On" or "Off".

Surround sound

This is used to turn on surround sound to gain better sound effect.

1. Press **▲/▼** key to select "Surround sound" option.
2. Press **▲/▼** key to select "Surround" or "Off".

Video Description

1. Press **▲/▼** key to select "Video Description" option.
2. Press **▲/▼** key to select "on" or "Off".

Menu Operation

Sound

Digital Audio Output

This is used to set digital audio output.

1. Press ▲/▼ key to select "Digital Audio Output" option.
2. Press ▲/▼ key to select "Auto" or "PCM".

Audio Language

You can set the first and secondary language for audio.

Dolby Audio Process

This is used to set Dolby Audio Process.

1. Press ▲/▼ key to select "Dolby Audio Process" option.
2. Press ► key to enter "Dolby Audio Process" submenu.

Dolby Audio Process	
Dolby Audio Process	Off
Mode	Standard
Surround Virtualizer	High
Dialog Enhancer	Low
Auto Volume Control	Off

HDMI ARC

Turn on or turn off the HDMI ARC function.

Function

1. Press MENU key to display the main menu on the screen.
2. Press ▲/▼ key to select "Function" option.
3. Press ► key to enter "Function" submenu.

Noise Reduction

Press ▲/▼ key to select the Noise Reduction mode. You can select the right mode to match the pictures.

MPEG Noise Reduction

Press ◀/▶ key to select the mode: off/low/middle/high. The picture will be better when it is in "high" mode.

Aspect Ratio

1. Press ▲/▼ key to select "Aspect Ratio" option.
2. Press ▲/▼ key to change the size of the picture on the size of the picture on the screen.

Vudu Deactivate

Logout your Vudu user account.

TTS

Select TTS item and enable TTS setting.

◀ Noise Reduction ▶
MPEG Noise Reduction
Aspect Ratio
Link Setup
Netflix Deactive
Netflix ESN
Netflix Version
Vudu Deactivate
TTS

Menu Operation

Function

Link Setup

1. Press ▲/▼ key to select "Link Setup" option.
2. Press OK or ► key to enter "Link Setup" submenu.

Enable Link: Press ◀/▶ to turn on/off the link setup.

Auto Power On: When this option is "On" and the TV is in standby mode. To turn on the DVD can also turn the TV at the same time.

Auto Standby: When this Option is "On" and the TV is on, to turn off TV can also turn the DVD into standby mode.

Link Setup	
Enable link	◀ On ▶
Auto Power On	Off
Auto Standby	Off

Netflix Deactive

1. Press "▲/▼" key to select "Netflix Deactive" option.
2. Press "►" or "ENTER" key to confirm.
3. Press "Yes" to confirm again, the Netflix will be activated.

Netflix ESN

Display the Netflix Esn information.

Netflix Version

Display the Netflix version.

Menu Operation

Time

1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key to select "Time" option.
3. Press **▶** key to enter "Time" submenu.

Off Time

In "Off Time" item, press **▶** button or **ENTER** button to enter the submenu, set the day & time to turn off the TV set.

On Time

In "On Time" item, press **▶** button or **ENTER** button to enter the submenu, set the time to turn on the TV set, when the TV set is in the standby mode. You can also choose which day to control you TV set in a week.

Sleep Timer

1. Press **▲/▼** key to select "Sleep Timer" option.
2. Press **▲/▼** key repeatedly until the desired time appears (Off, 10mins, 20mins, 30mins, 60mins, 90mins, 120mins, 180mins, 240mins).

Notes: The sleep timer you have set will be cancelled when the TV turns off or if a power failure occurs.

Notes: When the time is less than 60 seconds, remind information will be displayed on the screen. Press any key button to cancel timer function.

Auto Sleep

Press **▲/▼** key to select whether to open the No signal Power off features. If this function is opened, the TV will power off in ten minutes when there is no signal.

Auto Sync

You can modify the time of your TV set in Manual mode. In Auto mode, the "clock" is decided by the DTV signal.

 
Clock --:--

When Auto Sync is on, the clock is got from DTV streams; Set the clock when Auto Sync is off.

Time Zone

You can choose it to modify your time zone in the TV set.

1. Press **▲/▼** key to select "Time Zone" option.
2. Press **▲/▼** key to select time zone.

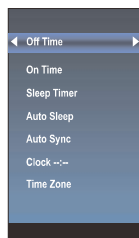

Menu Operation

Option

1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key to select "Option" option.
3. Press **▶** key to enter "Option" submenu.

OSD Language

1. Press **▲/▼** key to select "OSD Language" option.
2. Press **ENTER** or **▶** key to select a proper language for OSD

OSD Time

Set the preferred amount of time for the OSD to be displayed on the screen.

Closed Caption

1. Press **▲/▼** key to select "Closed Caption" option.
2. Press **▲/▼** key to select CC mode.

Reset

1. Press **▲/▼** key to select "Reset" option.
2. Press **▶** or **ENTER** key to confirm.
3. Press "Yes" to confirm again, TV will turn off automatically and change all setting to factory setting.

Network Configuration

Please refer to "Network setting" behind.

 
 
Software Update(USB)

When the TV need to be updated, please copy the new software to a USB storage and inset the USB storage to TV, then operating by following steps.

1. Press **▲/▼** key to select "Software Update" option.
2. Press **▶** or **ENTER** key to confirm.
3. Press "Yes" to confirm again, the TV will update by USB, Please wait a few minutes and don't turn off the power, it will turn off automatically when updating is finish.

View End-User License

1. Press **▲/▼** key to select "View End-User License" option.
2. Press **▶** key to enter "View End-User License" submenu.

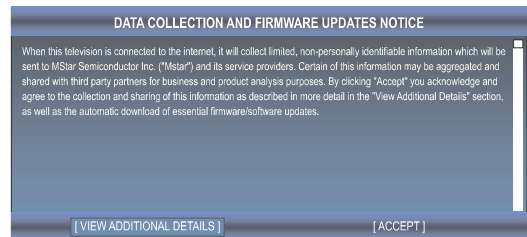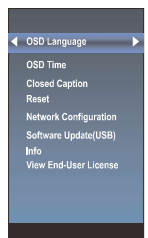

Menu Operation

Lock

The "Lock" feature automatically locks out programming that is deemed inappropriate for children. The user must first enter a Password before any of the lock restrictions can be set up or changed.

1. Press ▲/▼ key to select "Lock" option.
2. Press ENTER or ► key to enter "Lock" submenu, "Enter Password" menu will appear, enter your 4-digit password to enter "Lock" submenu (the default and universal password is 1980).

Lock System

Set the Lock function on or off.

1. Press ▲/▼ key to select "Lock System" option.
2. Press ▲/▼ key to select "On" or "Off".

Set Password

1. Press ▲/▼ key to select "Set Password" option.
2. Enter your 4-digit password to enter "Set Password" submenu. Choose any 4-digits for your new password and enter them. As soon as the 4 digits are entered, the cursor skipped to "Confirm Password" item, re-enter the same 4 digits, and your new password has been memorized.

When the programs are locked, you can also press the menu key, Info key and so on. Then you can press ◀/▶ key to call back the input-password window.

USA TV

 
 
1. Press ▲/▼ key to select "USA TV" option.
2. Press ENTER key to open USA TV menu.

USA MPAA

1. Press ▲/▼ key to select "USA MPAA" option.
2. Press ENTER key to open USA MPAA menu.

Canada English

1. Press ▲/▼ key to select "Canada English" option.
2. Press ENTER key to open Canada English menu.

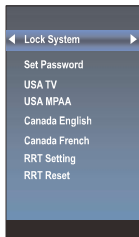

Menu Operation

Lock

Canada French

1. Press ▲/▼ key to select "Canada French" option.
2. Press ENTER key to open Canada French menu.

RRT Setting

1. Press ▲/▼ key to select "RRT Setting" option.
2. Press ENTER key to open RRT Setting menu.

RRT Reset

1. Press ▲/▼ key to select "RRT Reset" option.
2. Press ENTER key to open RRT Reset menu.

Channel

Before your television can begin memorizing the available channels, you must specify the type of signal source that is connected to the TV (i.e. an antenna or a cable system).

1. Press MENU key to display the main menu on the screen.
2. Press ▲/▼ key to select "Channel" option.
3. Press ENTER or ► key to enter "Channel" submenu.

Antenna

1. Press ▲/▼ key to select "Antenna" option.
2. Press ENTER or ► key to select a proper mode for Antenna.

Auto Search

1. Press ▲/▼ key to select "Auto Search" option.
2. Press ► or ENTER key to confirm, then a notice window will be displayed on the screen.

Select "Start" to start search or "Cancel" to cancel it.

 
When searching, press EXIT key to exit tuning at any moment.

Press MENU key to skip DTV tuning when searching DTV, skip ATV tuning when searching ATV.

3. After all the available channels are stored, the searching menu will exit.

Program Edit

After the program is searched, select "Program Edit" in the "Channel" menu, press "ENTER" button, program can be edited such as delete or skip according to the user's habit.

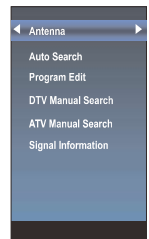

Menu Operation

Channel

Skip (Blue) Button

This function can help shield certain program.

Program skips when selecting program by the "▲/▼" button on the TV or remote control.

1. Select the program to be shielded in the "Program Edit".
2. Press "Skip" (Blue) button, the skip mark is displayed at the left side of the program and this program is shielded.
3. To cancel the Skip function, enter the channel edit menu, select the shielded program and press "Skip" (Blue) button, the skip mark at the left side of the program disappears then program is recovered.

Delete (Red) Button

This function can help delete program.

1. Select the program to be deleted in the "Program Edit".
2. Press "Delete"(Red) button, the program will be deleted.

Favorite(Yellow) button

This function can help store the favorite program then these programs can be quickly selected.

1. Select the program which is favorite.
2. Press "Fav"(Yellow) Button, the favorite mark is displayed at the left side of the program and this program is store into the Favorites.
3. To cancel the Favorite function, enter the program edit menu, select the program and press "Fav"(Yellow) button, the favorite mark at the left side of the program disappears.

DTV Manual Search

Enter digital number and press "ENTER" to select DTV Channel.



ATV Manual Search

 
1. Press ▲/▼ key to select "ATV Manual Search" option.
2. Press ► or ENTER key to enter submenu.

Current CH

1. Press ▲/▼ key to select the second item.
2. Press ◀▶ key to select current channel.


Fine-Tune

1. Press ▲/▼ key to select the third item.
2. Press ◀▶ key to select a better frequency for current channel.

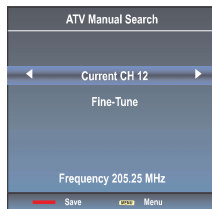


Network Setting

 1. Press the "Menu" to enter, then pitch on the "Option", and press "ENTER" or click the right button to enter the submenu.

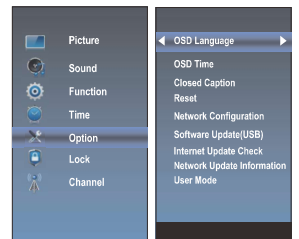


 2. Pitch on the "Network Configuration", and press "ENTER" or click right button to enter the "Network Configuration".

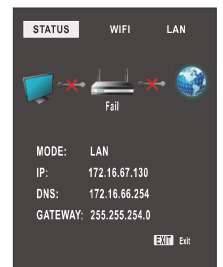


3. When the wired network is used, if select dynamic IP address setting, pitch on the "DHCP" in the "Network Configuration", then click the "Setting", and press the "ENTER" button to enter. If select static IP address setting, pitch on the "Static" in the "Network configuration", then setting up the IP, Netmask, Gateway and DNS in sequence. When the setting complete, pitch on the "setting" and press the "ENTER".

 
Network Setting

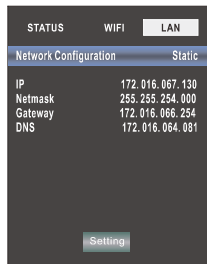

 4. If shows "Success", the "WLAN" on the bottom right corner will turn to green from red, and it means the network connect successfully; If shows "Fail", it means the network can not connect, please check whether the net wire and router connect successfully or not.

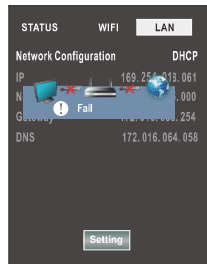


 5. Select the "WIFI" in the Network Configuration before using WIFI connecting.

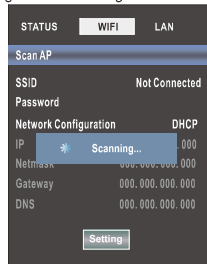



Network Setting

 Pitch on the "Setting", press the "ENTER" to confirm. If shows "Success", the "WIFI" on the bottom right corner will turn to green from red, and it means the network connect successfully; If shows "Fail", it means the network can not connect, please check whether the wireless router connects successfully or not.

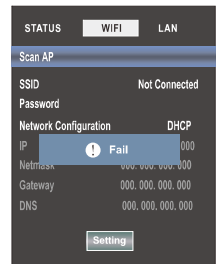


Internet

  Press "HOME" key to enter internet interface

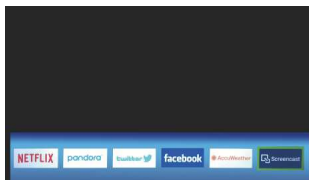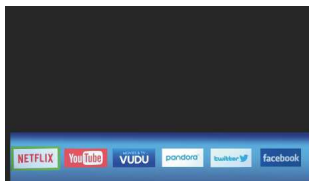

1. NETFLIX

 - 1 Use arrow key to Select **NETFLIX** button, then press "ENTER" key to enter NETFLIX.

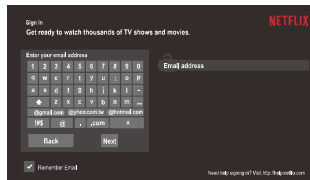


- 2 Use arrow button to select one video and press "ENTER" key to play. Press "MENU" key to exit playing.
- 3 Use arrow key to browse the pages. press "MENU" key to return to main menu and press "EXIT" key to exit.

Internet

2. Youtube

 
- 1 Use arrow key to Select **YouTube** button, then press "ENTER" key to enter Youtube.

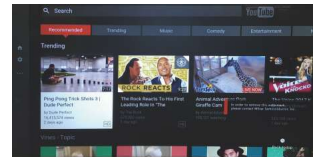

- 2 Use arrow button to select one video and press "ENTER" key to play. Press "MENU" key to exit playing.
- 3 Press **▼** key to open or close control menu when playing.




 - 4 Press **▲** key to enter search interface, input the keyword and then press "OK" to search videos.

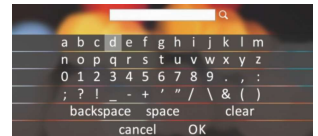


3. VUDU

 - 1 Use arrow key to Select **VUDU** button, then press "ENTER" key to enter VUDU application.

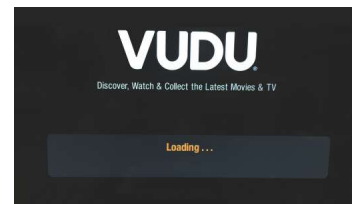


Internet

 
4. PANDORA

- Use arrow key to Select  button, then press "ENTER" key to enter PANDORA application.



5. Twitter

- Use arrow key to Select  button, then press "ENTER" key to enter Twitter.

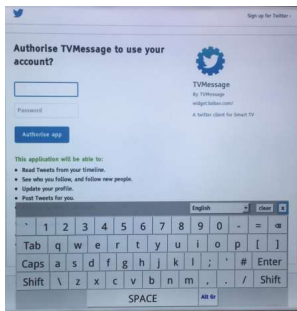


- Input the right Email and password, then select "Authorize app" button and press "ENTER" key to log in.


Internet


- Use arrow key to browse the pages. press "MENU" key to return to main menu and press "EXIT" key to exit twitter.

 Red key: log in or log out twitter.
Green key: refresh current page.
Yellow key: write new tweet.
Blue key: Search tweet.

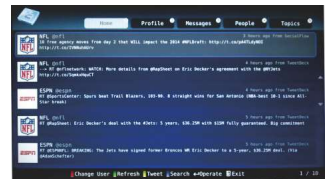

6. Facebook

 - Use arrow key to Select  button, then press "ENTER" key to enter Facebook.

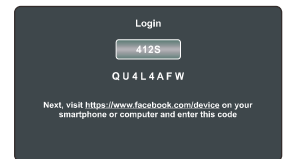

- Visit <https://www.facebook.com/device> on your smartphone or computer and enter this code:




- Press arrow key to browse the pages and press "ENTER" key to view.
Press "MENU" key to return the main menu.
Press "EXIT" key to exit Facebook.

Red key: log in or log out Facebook.
Green key: refresh current page.
Yellow key: sign "like" or "unlike" for current content.
Blue key: view comments and add comments.

Internet


7. Accuweather

Use arrow key to Select  button, then press "ENTER" key to enter Accuweather.



Input a city or zip code press select to get the weather information.

8. Screencast

Use arrow key to Select  button, then press "ENTER" key to enter Screencast.



Digital Media Player

Introduction

This TV is embedded with one USB port digital media player. It can find the devices support USB1.1/2.0, including flash disk, USB hard disk and digital camera. It supports functions as: Display pictures. Play music files, Display text files.

Notice:

1. In order to avoid affecting the user's viewing experience, please use the better quality and shorter USB cable.

2. Play, preview some of the non-standard files may appear abnormal, please understand.




Explain:

1. Under the USB channel, you can use only the remote control.

2. Play Control menu to enter the playing surface to press the menu button pop-up menu

Data	Format
Picture	JPEG
Music	Mp3

 Troubleshooting

Problem	Possible cause	Possible solution
No picture and sound.	<ul style="list-style-type: none"> The power adaptor is not plugged in or not working. The wrong input source is selected. The input source has failed to connect with the TV or is not turned on. 	<ul style="list-style-type: none"> Plug the power adapter into a suitable outlet. Try both the 12/24V & 240V adapters Select the correct input source. Make sure the input source is correctly connected and turned on.
No sound.	<ul style="list-style-type: none"> The volume control is set to minimum. The mute button on the remote control has been pressed An incorrect sound system mode is set. 	<ul style="list-style-type: none"> Press the  button to increase the volume. Press  or the (or ) button to restore/increase the volume. Set a correct sound system mode from the main menu to match your TV source.
No picture, or monochrome picture only.	<ul style="list-style-type: none"> The colour system setting does not match the program. The sound system setting does not match the program. 	<ul style="list-style-type: none"> Select the appropriate colour system setting. Select the appropriate sound system setting. (If unsure, use Auto settings where available).
Sound or picture interference.	<ul style="list-style-type: none"> Some equipment that causes interference is close to the TV. More than one device is plugged into the same power outlet. An incorrect sound system mode is set. 	<ul style="list-style-type: none"> Keep interference-causing equipment away from the TV. Plug the power adaptor into another, separate power outlet. Set a correct sound system mode from the main menu to match your TV source.
PVR recording failed, or "DISK NOT READY" is displayed.	<ul style="list-style-type: none"> You may not have removed your USB device after the last recording, which is necessary to protect the device from damage. 	<ul style="list-style-type: none"> Remove the USB device after each recording if you experience recording problems. If "DISK NOT READY" is displayed, remove the device, reconnect and then proceed with your recording.

Problem	Possible cause	Possible solution
DTV Picture Pixelation	<ul style="list-style-type: none"> Poor Signal 	<ul style="list-style-type: none"> Adjust the position or orientation of the TV antenna. Check the antenna connection from the wall plate to the TV. Try re-tuning the channels as the channel frequencies may be different in some areas.

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.