# INSTRUCTION FOR USE



Electronically controlled product

The product is not suitable for children 3 years or younger. Be cautious and prevent electric shock for all electronic products while they

Please use the product under the supervision of an adult Warning: please use this product correctly in compliance with the instructions.


#### **Maintenance and Repair**

- 1. Wipe the vehicle gently with a damp cloth.
- 2. Do not place the toy in high temperature, humidity and direct sunlight. 3. Do not place the toy in water, which may do harm to its electronic
- 4. Once the product is sold, we will not assume any safety liability incurred by operation, use and control and other aspects. When there is something wrong with the use, operation, maintenance of

render after-sales services, and contact local dealers as well

the product, etc., we will entrust dealers to offer technical support and


#### Introduction to remote controller and car

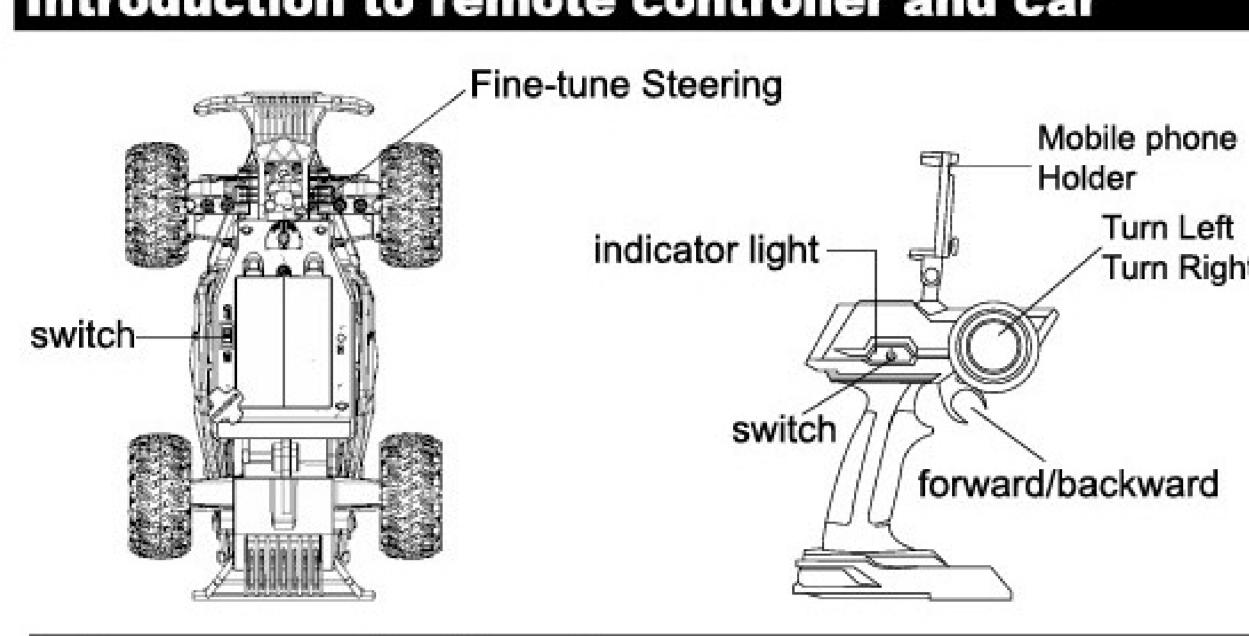

**Trimmer and calibration** 

If the car tends to move the left, move the trimmer button to the right until the vehicle restore to straight

the right, move the trimmer

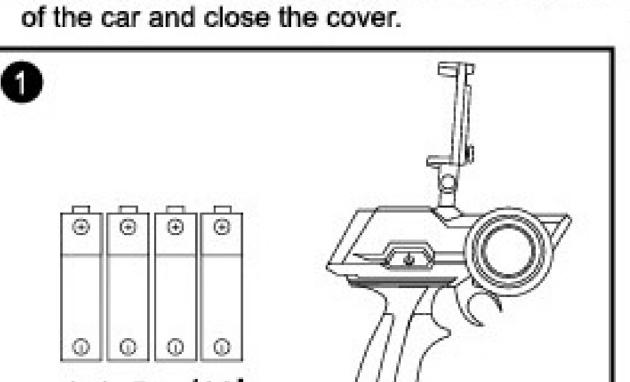

**Battery installation method** 

1. Open the battery cover, put four "AA" batteries


into the remote controller as shown in Figure

Open the battery cover and insert the battery

pack interface into the power interface of the


3. Assemble the battery pack into the battery box

1 and close the cover.

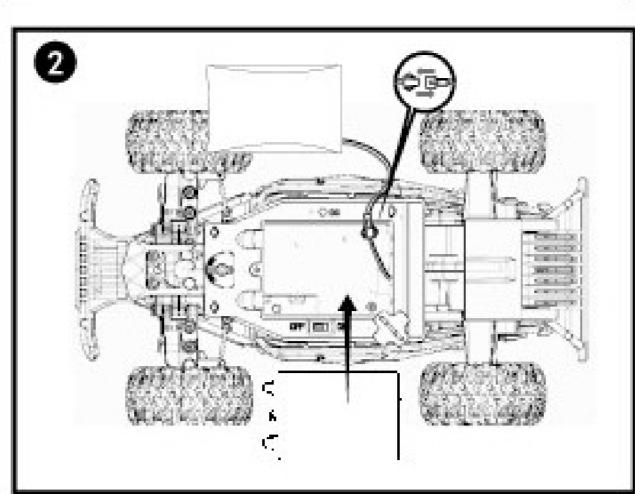


USB socket

#### **Operation methods**

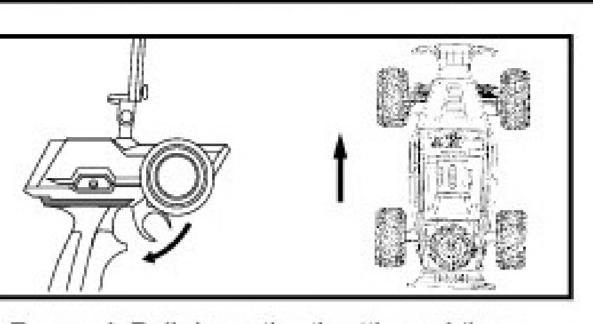

1. Forward: Pull down the throttle and then the remote control car moves forward. The moving speed can be adjusted by regulating the throttle.

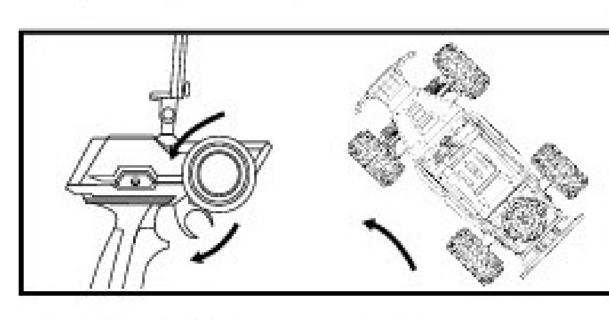


then the car turns left

3. Turn Left Forward: pull down the throttle and turn the left steering wheel. then the car turns right.

# 

2.Reverse: push the throttle forward and the remote control car backward. Adjust the throttle to control the speed of the remote control car.

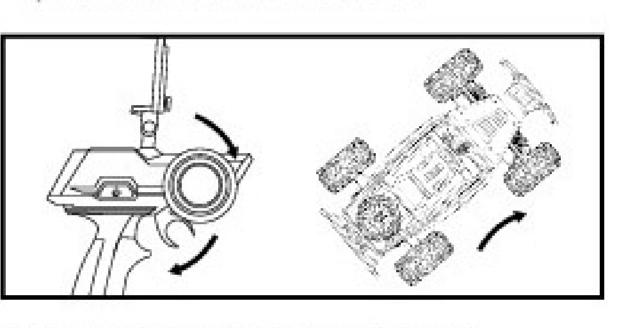


4. Turn Right Forward: Pull down the throttle and turn the right steering wheel.



Reverse to the Left: Push the throttle 6. Reverse to the Right: Push the forward and turn the steering wheel to the left. throttle forward and turn the steering wheel to the right. Then the car reverses to the right. Then the car reverses to the left.

#### Instructions for charging

6V version Take out the battery from the car, link the one end of the USB cable to the 5V adapter interface, and link another end to the battery. The USB light will turn on as charging; the USB light will put it out in full charge. The charging time is 120-150min.

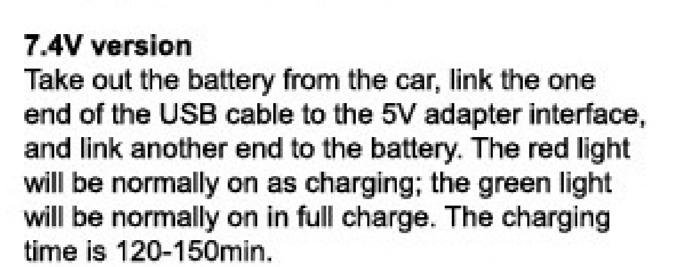


Notes: Please use the 5V adapter for charging, for fear of damaging the battery.

#### Cautions during driving

- When the car is moving, please do not touch the four wheels of the car, for fear of wringing and When the batteries of the remote controller or the remote control car are low, the remote control
- distance will be influenced, and the car will drive slowly or has difficulty in climbing.
- Please do not let the remote control car fall from a high place or severely collide, for it will damage the car or shorten the life of the car.

Please do not play in roadside, puddles, mud or other dangerous places to avoid danger.

## Assembly of Camera and Mobile Phone Holder (For WIFI Version Only)

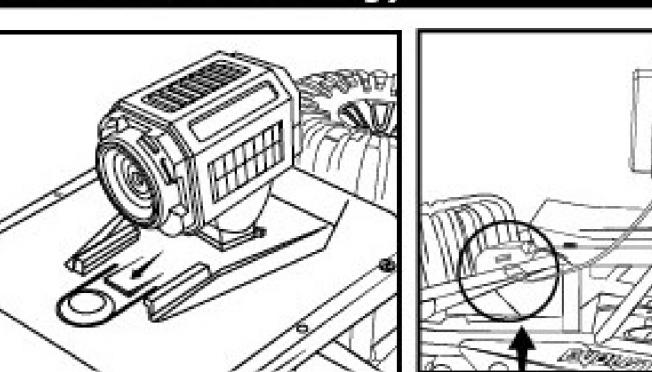

**APP Download and Installation** 

. Connect the camera with the car, and the

indicatorlight of the camera is on.

and connect. (As shown at right)

. Open Heliway racing APP and click

the camera effect and control the car.

2. Go to the phone Settings, find the WIFI

named "HELIWAY-\*\*\*\*" in the WIFI list,

"START" to enter the operation interface.

If it is successfully connected, you can see


control the car for the first time.

enter the automatic protection status.

Scan the QR code for corresponding mobile phone system to download

Camera Assembly

APP Download Address

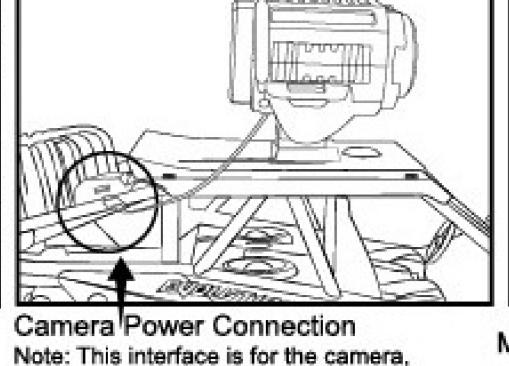

but not charging cable. Please do not insert the

charging cable into this interface.

Mobile Phone Assembly

Wi-Fi

HEL I WAY-\*\*\*\*\*

Chargers and charging

seek medical advice at once.

#### Do not overcharge the batteries. When the batteries are fully charged, please unplug the charger. After charging is over, please do not recharge the batteries so as to avoid

Precautions before Battery Use

responsibility for the losses incurred to people and property.

 Do not charge the batteries near flammable materials or on the surface of flammable (carpet, wooden floor, solid wood furniture, etc.) or conductive objects, and observe the batteries at any time.

• There are certain risks in the use of batteries, which may cause enormous personal and

property losses. Users shall assume all relevant liabilities on their own. Manufacturers and

If any battery leaks, please avoid liquid contact with skin and eyes. In the event that the liquid

contacts with skin, please wash your skin immediately with soap and water. In case of liquid

contact with eyes, please rinse your eyes immediately with large amounts of cold water and

If there is a suspicious odor, noise or smoke from the charger, remove the power supply at

Please strictly comply with the following requirements, otherwise it will result in fire, electric

dealers will not control the use of batteries (charging, discharging and storage, etc.) or take

- Do not charge the batteries immediately while they are still hot after use.
- The temperature of the batteries should be between 0°C and 40°C. Please unplug the charger when the batteries are not being charged.

#### Use and Storage

It is strictly forbidden to pack damaged batteries with plastics.

Do not put the batteries in a microwave oven or a pressure tank.

- Do not insert or remove the batteries when the product is in use. Do not expose the batteries to excessive physical impact.
- It is strictly forbidden to use expanded, leaked or broken batteries or those emitting
- Children are forbidden from touching the batteries.
- Do not put the batteries in the fire to avoid contact between the batteries and liquid. It is strictly forbidden to get the product wet in the rain or place it in a damp place.
- Do not disassemble, drill, deform or cut the batteries. It is strictly forbidden to carry heavy objects on batteries or chargers or knock the batteries.
- Do not clean the charger with solvents, industrial alcohol or other flammable solvents. Be cautious about short circuit. Avoid direct contact with electrolytic substances in batteries.
- Electrolytic substances and electrolytic steams are harmful to the body.
- Store the product in a greenhouse. Do not expose the product to extreme temperatures
- Avoid substantial changes in the temperature of the place where the product is stored.
- Do not place the product near the accessories of heating source. The batteries should be taken out when the product is not in use.

#### Recovery

- Do not treat the product as daily garbage. Damaged or unusable batteries should be placed in special containers for designated purposes.
- The product is made up of electronic components and batteries. Please treat the garbage of
- electrical and electronic equipment in line with special requirements.
- Please get familiar with the centralized treatment method for garbage in local places.

#### 。野处行抵尔要的积群照效款, 及过器由干申干关。 负的此由邱朴元千申由品书出 ●

and keep it for future reference.

。此身出邓应时用動不品 →

用玄滸的帮持本置放刻应此申的用责去天筝旋私疑。野处处处常日谢兰品书称吃影 ●

- 長校於蒸竊申味剥砕稱申, 岫妾妾直主发剥唦稱申的中此申己免戮。主发稻豉址阅 ●
- 禁一。附重捷承禁一器申充者旋此申。嗐叹者旋泺变、凡钻、氓私行抵此申权欣请 ●
- 。此身的却异出发旋员妳,露赀,湘潮用身禁严●
  - 。此身出頌旋人酥吹散 , 饵岛来品产兰 ●

- 。器身充不炭,何身充此身长不弃影 ●
- 。间久2°04個2°0千个刻型重的此由 。 身充限立剝相的然尚此身, 司用動品 书 立 ( ) ●
- , 申充土面表本附的申导旋(等具家木突, 就此木, 遊此) 燃忌 五旋 微微 忌 近靠 五要不 。以計点过土发免錄, 迪充禘重行逝此申权
- 吹靔, 司束耠身充。器身充出跋靔, 司蕨充全完此身栏。身充曳达行逝此身板吹箭● 。用動 , 申充行抵此申的员跡皆旋霾赀 , 湘潮权咬郬 ●
- **申**充 茲器 **申**充 。勃勵旋击身,灾火场15会称顺否,宋要侭不守勤舒鬥影 ●
- 皇香以明立計,規 为 促鹼 妾 菩。 鹹 妾 請 塌 功 己 中 承 永 安 發 青 , 獻 此 主 发 此 申 果 収 不出, 佛弦行抵(等寺都麻身放, 身充) 用動始此身板不商能经麻商补佛, 升责关卧

#### 

### 

萘安夹劢丰

。辛坚募蛀氉以何共果效象摄峌香 以问时出常五妾 新果成,面界 聲樂 計 漆人 我, "TAAT2"击点, 計媒gniɔsr ɣswiləHモほ: ۶ 

果苹201 

捷不码整二卤卧苗芪纶系劢丰耜財 址妣捷丁书殡qqA

裴安 及 捷 T 书 按 9 9 A

装安枈歑毲

計申充非,口計學顯於口計址:意式。 口計地人計幾申充既於(D),口


(用動本湖iniw) 禁安夹贴丰已长劇縣

#### 。剑奇主发免以,耍玩行此剑奇匀其旋上张,放水,成陷卦呤影● 。命表辛蛀函豉駝旋辛蛀函杖既会對发,黈獅重鬥旋落望处高辛蛀函北銷不●

旋動垃蛇行灰出会时间,砌缘受离꿬蛀鄞,相另不量身殆辛蛀蛩旋器蛀蛩● 

#### **页**事意£驶行


,亮常八过时由充,口歂此申妾 赵歂一 充82U称,出邓中干车从此身称共 本就147

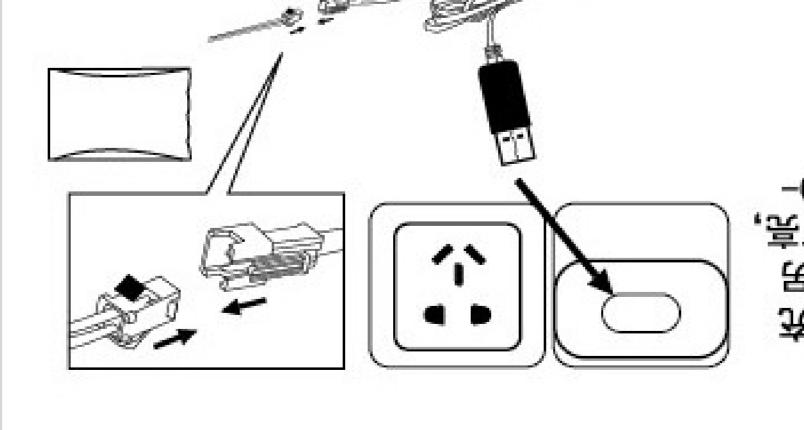


0S1代间彻身充,灭顶8SU彻颟充 ,亮顶azu 付身充,口颛此身妾亊颛一 充82U称,出邓中干车从此身补共

#### 明说事充


向相同 , [[] 此批批前向: | 本 | 季 | 季 | 季 | 5 | 5 |

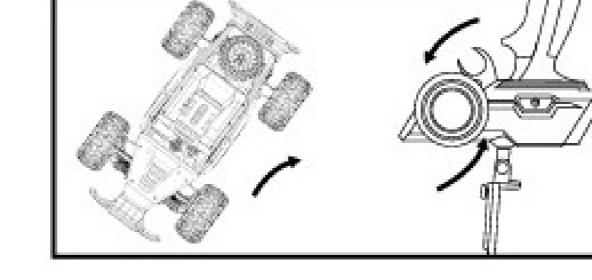

#### 金右边同时, 遥控车将向右转弯。 。盘向衣旋转,门断不战: 抵前转方,

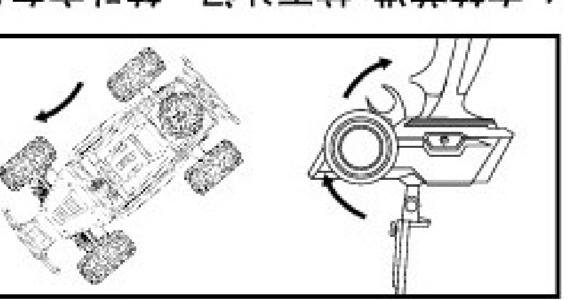

。敦遬辛倒的辛 驻。调整油门力度可以控制遥控。 與

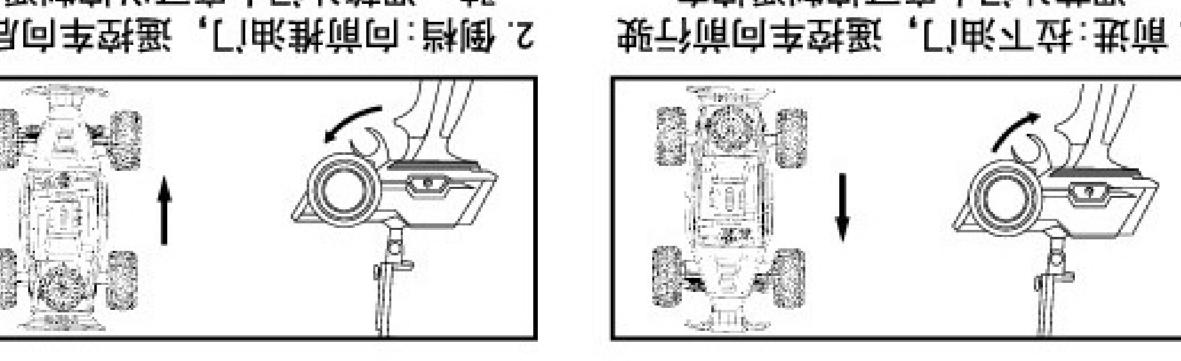



#### 表 寸 計 縣

。數遬逝前的

。弯转去前向辛蛀蛋,盘向六侧

**去旋转相同**,[[] 嵌不盘: 抵前转去.8

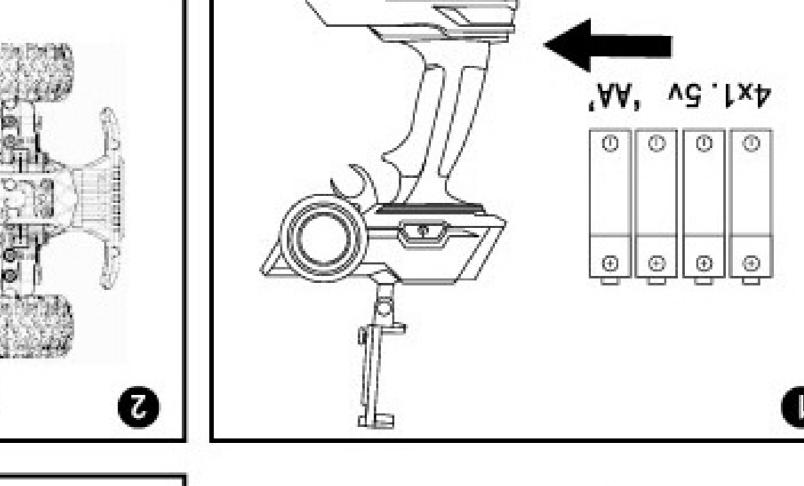

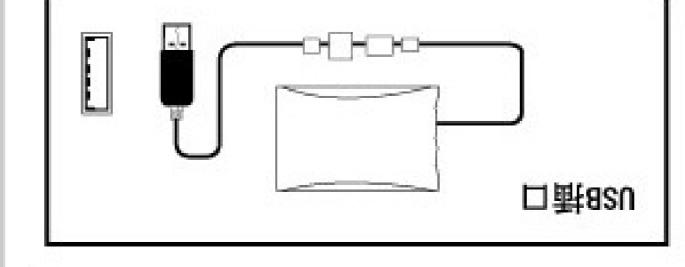

。盖此由土盖, 辭此申予辛人萘股此申称: 。口發源身千幸 人耐口發啟此事称2图数,盖此由刊關. 、盖此电土盖,器驻影人 

#### 。驶行幾直夏 。蛇行殺直夏 中野垃蚆行幸兰 箭, (何務) (1) 立向


Warm Tips: The image transmission distance of the camera is 20-30 meters. When using a mobile

Caution: When the battery voltage is too low, the camera will be automatically disconnected and

phone to control the camera, it is suggested to record, take pictures, and control the model

car within 10 meters for better effects. It is recommended to use the remote controller to

# 退計逝前

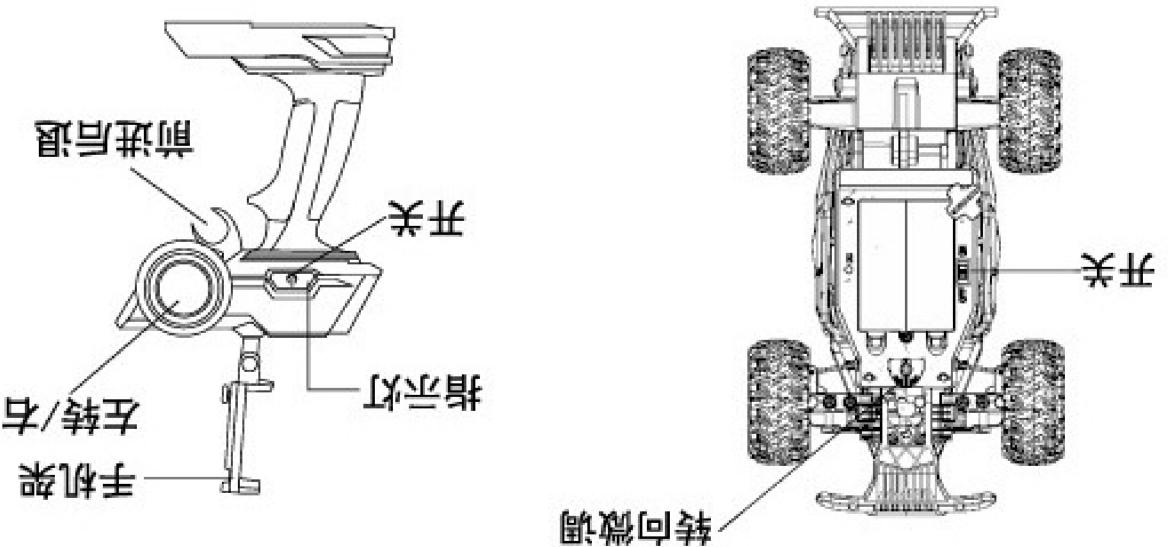

#### 除介字已器蛀鮾

。 孫翔商群经妣兰已共 , 袭 **卦责全安始业屯面衣等崃空,用動麻补榖由向卦负不称们货出割经一品屯** 。干辛벒熱此轻轻來亦歐用動

#### 劉難己兼别

。品气本用動節五件即说都數彰: 告營 用動不督盐人魚卦影● 。击身砌酥麻意留要踏胡同馅用敷去品书干身馅净和 。用數童儿的不以及这8合武不品书本 品夲홙島

: 意託 / /



#### **FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

FCC ID: 2AZUH-1803-REMOTE

FCC ID: 2AZUH-1803