



Black

<p>The Car requires one 3.7V rechargeable battery (included). Not Replacable. The controller requires two AA 1.5V batteries (not included). When changing batteries, adult supervision is required. Use alkaline batteries for best performance.</p>	<p>LED Indicator. When fully charged, the red led will off.</p>	<p>Once the car is fully charged, switch to the ON position on the bottom of the car. Use a screwdriver to remove the battery compartment door set-screw on the back of the remote control. Install 2 AA 1.5V batteries.</p>
<p>Battery Compartment Cover</p>	<p>USB Port. For best performance, charge fully before initial use.</p>	<p>Red LED</p>
		<p>ON/OFF Switch</p>

Pairing:
The car and the remote control must be paired before operation

1. Turn the car to the ON position. It will light up.
2. Press the button on the remote control (after batteries are installed).
3. If you have more than one car and remote, pair one at a time.
4. It is not recommended to use 2 cars at the same time and place to avoid interference with each other's signals.

SAFETY PRECAUTIONS

Do not operate during thunderstorms or rain.
Avoid Water, sand and snow when operating car.
Do not submerge car or controller in water.
Never operate you car in a confined or crowded area and do not use people or animals as obstacles.
Do not run car into furniture, objects or hard surfaces, as this will cause damage to both the objects and you car.
Keep fingers, hair and loose clothing away from the tires, gears and motor while the car's switched to "ON".
Do not leave car or remote controller near source of heat or under direct sunlight for long periods of time.
Do not leave car or remote controller outside overnight, dampness is harmful to interior components.
Remove all batteries when not in use to avoid accidental operation.
Adult supervision is recommended when operating this car.

<p>Reverse</p>	
<p>Forward</p>	
<p>Left turn and rotate</p>	
<p>Right Turn and rotate</p>	
<p>360 degrees rotating</p>	

BATTERY INSTRUCTIONS

- Please ensure all batteries are inserted in the correct direction (see diagram).
- Ensure all batteries are the correct type and size (see diagram).
- Do not mix old and new batteries. Replace all batteries at the same time.
- Batteries should be installed, changed and removed by an adult.
- Do not mix battery types. Only use alkaline batteries in this product.
- Do not attempt to recharge non-rechargeable batteries.
- Promptly remove depleted batteries from the product.
- Remove batteries from the product before extended storage or product disposal.
- Do not dispose of batteries in fire; batteries may explode or leak.
- To prevent short-circuit of battery terminals, keep battery compartment free of materials except batteries.
- Do not throw batteries in household trash; dispose of them at battery collection stations.

FCC NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

210 mm
8.27 "

148.5 mm
5.85 "

NON-PRINTING Dieline	NON-PRINTING Score/Fold	NON-PRINTING Dimensions/Info	NON-PRINTING Bubble/Product	NON-PRINTING Glue/Seal
<input checked="" type="checkbox"/> Full-Litho <input type="checkbox"/> Flexo <input type="checkbox"/> Flexo with Spot Litho				

	ARTWORK NO.	ITEM DESCRIPTION	MDSER	DESIGNER	DATE
	SZ20DG11030000_IS_R3		Mona Xu	fiona	04/14

This proprietary artwork and concepts are copyright designs of Fourstar Group Inc. 2020. No part of this artwork may be reproduced or transmitted in any form without express written consent. © Fourstar Group Inc. All Rights Reserved.