


GFC01

*Thank you for purchasing our products. Please read the instructions carefully before working on this product for a better experience, and keep it properly.

Product Introduction

This product applies to clean residues and bacteria from the surface of vegetables and fruits, as well as sterilizes various kitchen utensils. According to the actual using conditions, this product can be placed in the household kitchen basin or sink, or can be placed in other convenient and sanitary plastic bags or sanitary watertight containers when going out, which is convenient to use.

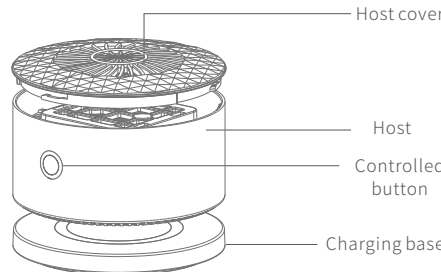

Parts list



Specifications

Product Name: Portable Fruit and Vegetable cleaner
Product Model: GFC01
Rating Charging Voltage: 5V
Rating Charging Current: 1.3A
Rated Power: 10W
Battery Capacity: 4400mAh
Charging Time: ≤8H
Waterproofing Grade: IPX7
Net Weight: approx. 0.44 Kg (including charging dock)
Dimension: 106 mmx74 mm(including charging dock)
Executive Standard: GB4706.1

***Product specifications, appearance and design are subject to change without prior notice.**

Safety Precautions

To ensure the safety of use and avoid injury or property loss, please observe the following safety precautions. Otherwise, the incorrect operation may lead to accidents without complying with safety precautions.

 
- stands for prohibited contents
- It is strictly prohibited to immerse the wireless charging dock in water or other liquids to avoid danger.
- stands for mandatory contents

- The persons, including children, the elderly or disabled, and people without experience should use the product under supervision and guidance.
- Please contact with after-sales personnel and seek for original accessories or correct models to replace and avoid risks when the wireless charging dock or charging cable is damaged.
- Please do not use the product again with any damage. The feasible approach is to contact the customer service of the company and send the product back for repair. Please note that users are forbidden to repair by themselves.
- The product has a built-in lithium battery, please do not expose the product to high temperature or fire, and do not discard the product as general garbage.
- Please do not use the product in places with inflammable and explosive gases or in gas stations.
- Safe disposition of battery.
 - The battery of this product should not be replaced by the user.
 - Please be sure to remove the battery from the appliance before discarding.
 - Please make sure the appliance must be powered off when removing the battery.
 - Battery should be disposed of safely.

- Please do not charge on tilted or unstable table tops, and do not get close to or placed on any electrical appliances.
- The host is matched with the charging dock, it is forbidden to use other charging docks as matching apparatus.
- Please do not use metal objects to touch the electrode to avoid short circuit of the electrodes, leading to abnormal operation.

- Please avoid colliding when using the exposed electrolysis electrode, which is the working part of the product. To avoid the deformation of the electrode, leading to abnormal operation.
- Please do not insert pins, iron wires or other conductive objects between the two electrodes to avoid short circuit of the electrodes, leading to abnormal operation.
- Please do not operate this product unattended.
- Please unplug the charger from the power socket without requirement of charging.
- To avoid abnormal operation of the machine, it is not recommended to clean meat and fatty tableware.
- It is feasible to use a brush to wash the surface of the electrolytic sheet for abnormal working problems caused by oil residue.
- The product can only work in tap water at normal temperature. Water beyond normal temperature will lead to the disable or damaged of the product.

Instructions



- Please plug the power adapter in the household power supply after connecting one end of the USB cable to the port and the other end to the power adapter (please use 5V2A specification).
- Place the host on the wireless charging base, with centers aligned, and then start charging.
- The circular-formed indicator light will flash with alternate colors of red and green on the charging process. The green light will continuously on when the charging is finished.
- Please pour water into the container (the purifier can purify 2-6 liters of water), and place the host in the vegetable basin or the sink (you can choose the container you like, which will not affect the performance of product), and keep the host horizontal and up at the bottom of the container.

- Power-on: Press the control button, and the green light of the circular-formed indicator will be on and there will be a beep, representing that the washer is in the standby mode (if there is no other operation within 30 seconds, it will be off automatically). Press again, and with a beep, the green circular-formed indicator and blue work indicator will flash simultaneously, the product starts to work. The product will be off automatically after the task is completed.
- Please stir the clearing materials from time to time during the operation for better purification effect.
- After the operation (all indicator lights off), please stand for about 5 to 10 minutes and take the cleaning materials out and then rinse it with clean water; If there is too much water in the container, the user can set the times for reboot according to the actual situation.
- Please do not use the product to avoid damage if there is no water in the container or the device is not completed immersed.

- The material of charging base is not water-proof. Please do not place the device in the environments associated with submerging, showering, which is humid.

- It is advisable to place the host that is full charged in your travelling bag, which will be convenient for using when go out.

Environment:

Please do not place it with general household waste when disposing the product. It should be sent to the recycling center set by the government, which will be environmentally friendly.

Routine Maintenance

- Please keep the pane free from foreign materials, which will lead to the fail in operation.
- When there is some foreign materials in the device, please rotate the up lid anticlockwise and clean it.
- Please use hairbrush with proper width for cleaning and keep the weep hole unblocked.
- Please do not try opening this lid, because this may lead to product failure which you can not restore properly.
- Please do not try removing this silicone piece for cleaning in detail, which may lead to the failure of the control buttons. Please do not remove the screw for cleaning, because this may lead to product failure. If any help is needed, please contact with the after-sales service worker.

Troubleshooting

FAQ	Reason	Solution
The product cannot work	No enough power	Press the button for standby mode and check if the indicator will be on. Please have a check if the green and red circular-formed indicator lights flash alternately when charging.
The product cannot be charged.	The product may not be placed in the specified environment when charging.	Check whether the host is aligned with the center of the wireless charging base. Check whether the host is charged on a dry and level table, and whether it meets the requirements of the charging specification in the instruction manual. Make sure that there is no metals placed under the charging base when charging.
	The supply voltage to which the product is connected may not match the product voltage.	Make sure that the supply voltage is consistent with the voltage marked on the product label.
	The power socket to which the product is connected may be damaged.	Check whether the device is correctly connected. Check the fuses of power socket.
Small or weak bubbles.	The product is used to clean meat or greasy utensils and tableware.	Check if the product is used to clean meat or if the product is greasy. Soak the product with a small amount of detergent for 30 minutes, rinse it with water until it is clean. Put the device in the tap water container and start it, observe whether it returns to normal.

Toxic and Hazardous Substance Statement for Electronic Information Product

Name and Contents of Hazardous Substance in the Product						
Part Name	Hazardous Substance					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Shell	○	○	○	○	○	○
Circuit Board	○	○	○	○	○	○
Accessory	○	○	○	○	○	○

The form is formulated according to regulations of SJ/T 11364.
○: represents that the content of the toxic and hazardous substance in all homogeneous materials of the part is below the limit specified in GB/T 26572.
×: represents that the content of the toxic and hazardous substance in any homogeneous materials of the part is beyond the limit specified in GB/T 26572.

After-sales Services

The quality warranty period is one year from the purchasing date.
Warranty Services

- For the consideration of your rights and interests, please take good care of the warranty card after purchasing this product. The warrant card is an important voucher for warranty services.
- Upon the discovery of any fault arising from quality defect, please call our customer service telephone at 400-809-9977 or submit after-sales service application through the official website of EraClean. Our service staff will be glad to provide the best solution to you at the first convenient time.
- If you come across any fault of the product beyond the scope of free warranty services or encounter any fault after your product is beyond the warranty period, you may select compensated repair services. For details about such services, please consult with our customer service staff. We will test the machine and then provide the corresponding repair services according to the actual situations.

Faults beyond the Scope of Warranty Services

- The product is beyond the valid period of three-warranty services or the warranty period.
- The product is used in commercial applications for profit-making purpose without the authorization of EraClean.
- Damage of the products caused by failing to use, maintenance and service of the product according to requirements in the User Manual, or using of any accessories other than the original accessories.
- Collision, falling off or squeezing of the product caused by authorized repair or alteration, or any other man-made reasons.
- The label, sealing strips and serial number could not be identified due to behaviors like tear-off or obliteration.
- Consumables are not within the scope of warranty services.
- Faults caused by application of the product beyond the permitted conditions or environment.
- Faults and damages of the product caused by force majeure factors (like natural disasters, governmental actions, social abnormal events, etc.)

After-Sales Warranty Card

Warranty Card(original for sales)

User Name: _____ ☐ Sir ☐ Madam Contact Number: _____

Address: _____

Product Model: _____ Serial No. on the Main Body: _____

Date of Purchasing: _____

Invoice No.: _____

(Stamp of the Seller)

Warranty Card(copy for sales)

User Name: _____ ☐ Sir ☐ Madam Contact Number: _____

Address: _____

Product Model: _____ Serial No. on the Main Body: _____

Date of Purchasing: _____

Invoice No.: _____

(Stamp of the Seller)

Certificate of Quality

Authenticated

Verified by
EraClean

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.