

图号:RD/PR22091701

 
背面

成品尺寸：150*75mm


Tips for using:

01. Put the fruits, vegetables and meat to be cleaned in the washing basin or sink, and add water with a temperature not exceeding 40°C (recommended to not exceed 3 liters of water at a time).

02. Select mild mode or deep mode as required. After starting, place the main unit on the bottom of the water to keep the main unit lying down (or the release port is completely immersed in water).

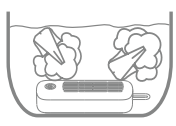


03. Please stir the fruits and vegetables from time to time during the working of the fruit and vegetable machine to achieve a better purification effect. It is normal for the electrolyzed water to smell of disinfectants and detergents. At the same time, according to the number of ingredients to be purified each time, an appropriate amount of fruit and vegetable salt can be added, and the cleaning effect is better.



04. After the main unit is finished, all indicator lights will go out. At this time, let the cabbage and meat in the dish or sink stand for 5-10 minutes to make the electrolysis fully work. Finally, take out the cleaning material and rinse with clean water.

5. Cleaning and Maintenance

01. Please ensure that there is no foreign matter in the special release port and the electrolytic strip, otherwise it will not work.

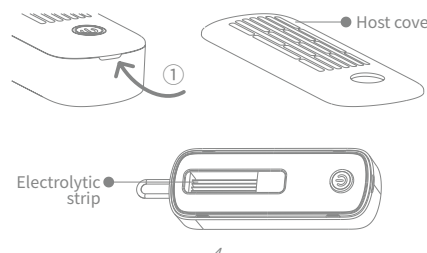

02. When a foreign object falls into the electrolytic strip, please open the main unit cover at the position of (ⓘ) button and clean it with a soft brush (no metal and hard objects are used to assist in cleaning), so as to ensure that there is no foreign matter clogging between the electrolytic strip.

03. After each time it is taken out of the container water, rinse it with clean water, hang it up to air dry, and put it back on the charging base with the keys facing up for use.

6. Product Parameters

Product name: Mini fruit and vegetable cleaner (wireless charging base)

Product model: GFC11 (wireless charging base)

Rated input voltage: 5V ==

Rated input current: 1A

Product size: 140.5X50X17.5mm (wireless charging base)

(Warning: The charging base is strictly prohibited to be immersed in any liquid)

Product name: Mini fruit and vegetable cleaner (host)

Product model: GFC11 (host)

Rated charging voltage: 5V ==

Rated charging current: 1A

Rated working power: 5W

Battery capacity: 1600mAh

Product size: 140.5X50X33mm (host)

Product net weight: 235g (including wireless charging base)

7. Scope of application

●Vegetables ●Fruits ●Meat ●Seafood

8. After-sale service

The whole machine is guaranteed for 1 year from the date of purchase.

Warranty

01. In order to protect your rights and interests, please keep the warranty card properly after purchasing this product. The warranty card is an important basis for warranty.

02. If there is a product quality problem during the warranty period, please call our customer service number, and our service personnel will provide you with the best quality solution as soon as possible.

03. If the fault you encounter is within the scope of non-free warranty or the product has exceeded the warranty period, you can choose paid maintenance service. For details, please contact our customer service staff. We will test the machine after receiving it and provide you according to the situation. Provide appropriate repairs.

Non-warranty Coverage

01. The product exceeds the validity period of the three guarantees or the warranty period.

02. Without the authorization of the company, use this product for commercial purposes for profit.

03. Failure to use, maintain and maintain the product in accordance with the requirements of <=>Product Manual>=>, or damage caused by the use of non-original accessories.

04. Unauthorized repairs, alterations, man-made collisions, drops, squeezing, etc.

05. Tear up or alter the product labels, seals, serial numbers, etc. that cannot be identified.

06. Failures caused by conditions beyond the specified conditions of use or by the environment.

07. Failure and damage caused by force majeure factors (such as natural disasters, government affairs, social abnormal events).

9. Troubleshooting

Specific symptoms	Phenomenon	Exclusions
Can't boot normally	The running indicator lights up normally	Please call our customer service staff to get in touch Submit an after-sales application
No bubbles are released	The running indicator lights up normally	1. Check whether the release port and the electrolytic strip are blocked. 2. If the fault is not resolved, please consult with customer service.
Can't boot normally	The running indicator does not light up	1. Change the tap water. 2. If the fault is not resolved, please consult with customer service.
Can't boot normally	The running indicator flashes red	1. Put it back on the charging base to charge. 2. Please consult with customer service.

10. Friendly reminder

01. After each use, it needs to be cleaned and dried as required to maintain good usability.

02. Do not block the release port when the product is in use, otherwise the functional effect will be affected.


03. When the equipment fails, please contact the dealer or call the after-sales service hotline

11. Low battery reminder and charging method

01. Low battery reminder

During operation, when the green light is on for 10 seconds, the red light is on for 5 seconds, and the cycle is completed until the end of the work, or the red light is on for 5 seconds if you click can not start, indicating that the battery is too low and needs to be charged.

02. Charge

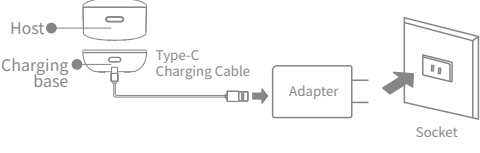

Note: Adapter 5V = 1A needs to be purchased by yourself
When charging, the indicator light is displayed as a red breathing light, and the red light is always on for 10 seconds and then goes out when fully charged.


12. Declaration of Toxic and Hazardous Substances in Electronic Information Products

Name and content of hazardous substances in the product	
Part name	Harmful materials
	Lead (Pb) Mercury (Hg) Cadmium (Cd) Hexavalent Chromium (Cr(VI)) Polymers containing phthalates (PBB) Polymers containing phthalates (PBDE)
Shell	○ ○ ○ ○ ○ ○
Circuit board	○ ○ ○ ○ ○ ○
Battery	× ○ ○ ○ ○ ○
Appendix	○ ○ ○ ○ ○ ○

This form is prepared according to the provisions of SJ/T 11364

○: Indicates that the content of this toxic and hazardous substance in all homogeneous materials of this part is below the limit requirement specified in GB/T26572.

×: Indicates that the content of this toxic and hazardous substance in at least one homogeneous material of the part exceeds the limit requirement specified in GB/T26572-2011.



折叠方法

背面

7

6

5

4

 
1

2

3

正面


印刷方向

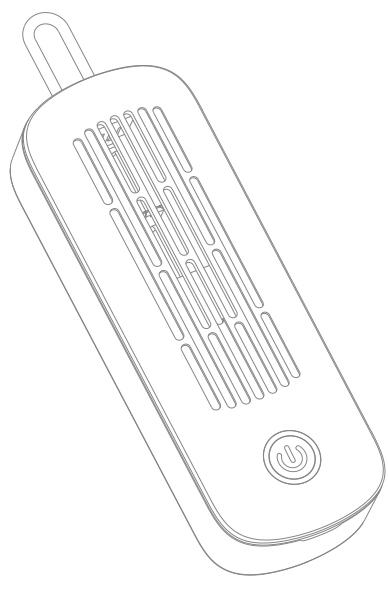


Instruction Manual for
Mini Fruit and Vegetable Cleaner
GFC11

Thank you for purchasing our products. In order to have a better experience, please read this content carefully before using it and keep it properly.

 1. Product Introduction

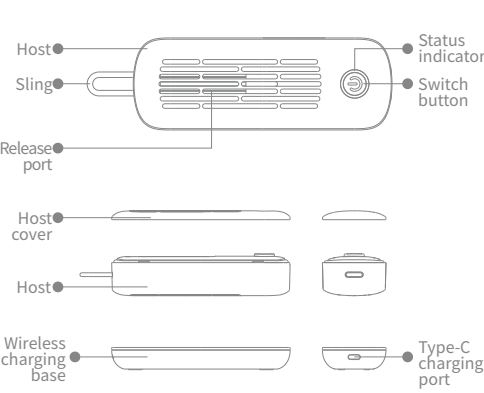

 2. Configuration Checklist

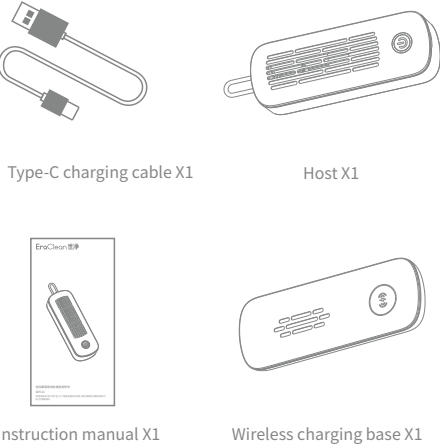

3. Safety Precautions

In order to prevent injury to users or other personnel, and to avoid property damage, be sure to observe the following items.

- Do not allow children to use or keep it out of the reach of infants and young children.
- It can cause burns, electric shock, and physical discomfort.
- Do not operate the machine or unplug the power cord with wet hands.
- May cause electric shock.
- Before maintenance work, please turn off the machine and unplug the charging cable.
- May cause electric shock.
- Do not rinse the charging base machine with water or immerse it in other liquids.
- It will cause water to enter the inside, which will lead to electric shock, fire and malfunction.
- Do not wipe the product with solvents such as gasoline, alcohol, chemicals, etc.
- May cause fire and malfunction.
- Do not put foreign objects on the dissolving sheet in the release port.
- will cause malfunction.
- Do not disassemble, repair or modify this product.
- It can cause electric shock or injury.
- Do not use this product in flammable, explosive, corrosive, combustible or metal dust environments.
- May cause fire or explosion.
- Prevent the host from falling and strong shaking.
- Causes damage, deformation, malfunction.
- If the product has abnormal noise, smell, high temperature and other abnormalities, please stop using it immediately.
- Can cause fire.
- Do not use the main unit in a high temperature environment.
- May cause fire, explosion, malfunction.
- The host and the charging base are used together, and other charging bases are strictly prohibited.
- Effectively protect battery life.
- Do not use metal objects to touch the points to disassemble.
- In order to avoid short circuit of the electrolytic sheet, it cannot work normally.

4. Instructions for use

Function instructions:

01. Mild purification mode:

In the standby state, click the "key switch" once to start the mild purification mode, and the machine works for 5 minutes to electrolyze water to generate hypochlorous acid. The indicator light is breathing green when working.

02. Deep purification mode:

In the standby state, click the "key switch" twice to start the deep purification mode, and the machine works for 10 minutes to electrolyze water to generate hypochlorous acid. The indicator light is solid green during operation.

In any mode, press and hold the key switch for 2 seconds, the mode indicator flashes off, and the shutdown is successful.

技术要求：

1、材质用105g太空梭哑粉纸。

2、边框为边沿示意及折痕线，无需印刷。

3、工艺：双面印刷，折页（风琴折）。

4、每页版面必须左右居中,保持展开是水平对齐,双面印刷墨水不能透底。

文字意思颜色：潘通冷灰9C

				材料：			广东艾瑞克林 科技有限公司				
				105g太空梭哑粉纸			GFC11说明书(世净)				
修改次数		修改内容		签名	年、月、日	阶段标记	数量	比例			
设计	梁思晴	20220917	工艺			S	1	版本：A0			
校对			标准化								
审核			批准								
共 1 张 第 1 张						迷你果蔬清洗机					

1

2

3

4

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.