

CONTENTS AND BATTERY INSTALLATION

 
 
Contents

Split Twister Vehicle
Remote Control

Battery Installation

The vehicle requires 4 AA 1.5V batteries (not included) and the remote requires 4 AA 1.5V batteries (not included).


Use a Phillips head or Cross screwdriver to loosen the screw securing the battery cover on the bottom of the vehicle and remote. Insert the batteries, ensuring the correct polarity. Replace the battery cover and tighten the screw.

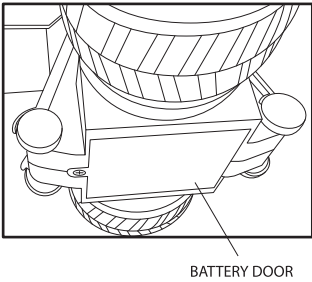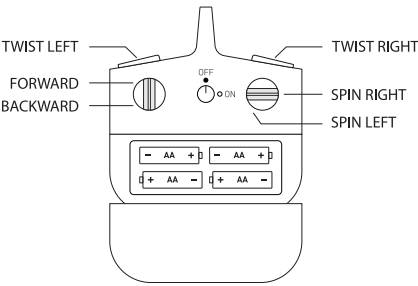


PLAY

1. Turn the power knob on the remote clockwise and flip the power switch on the vehicle to I (ON). The remote pair light will pulse. It will turn solid when paired.
2. Control the vehicle using the remote-control sticks. The left stick drives forward and backward, and the right stick spins the vehicle right or left.
3. Split Twister can transform using the 2 large buttons on the top of the remote. To transform, press either the top left or right button to rotate the body of the vehicle. The vehicle can only transform 180 degrees by pressing one of TWIST buttons. Try the other button if it cannot transform further.
4. Once transformed, try driving or spinning to performs stunts.

 
Forward and Backward

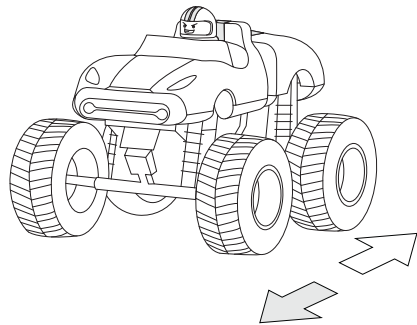

Spin Left and Right

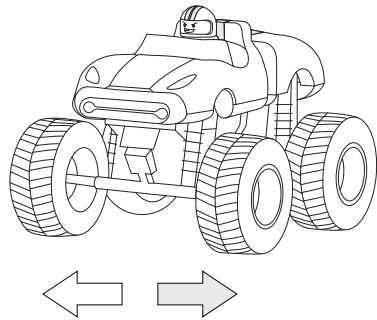 

Twist Left and Right

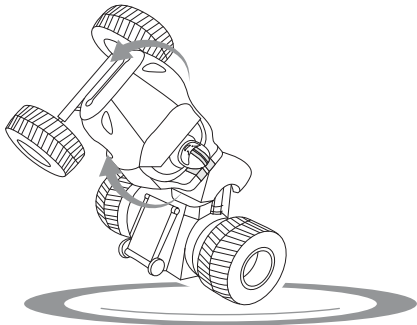 

SAFETY WARNINGS

- Not for children under 6 years of age.
- Do not use people or animals as obstacles.
- Never operate your vehicle in inclement weather, rain, or standing water.
- Keep fingers, hair, and loose clothing away while and before vehicle is in motion.
- Do not expose to extreme temperatures.
- Do not leave the vehicle or remote near sources of heat or under direct sunlight for long periods of time.
- Adult supervision is recommended when operating the vehicle.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.
- Do not expose to extreme temperatures and moisture.

BATTERY WARNING

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire, batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



WARNING:

CHOKING HAZARD - Small Parts. Not For Children Under 3 Years.

Model No.: 1014344
Due to continuous product improvements, the picture on the manual may differ slightly from the actual product.
KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

FOR TECHNICAL SUPPORT, PLEASE CALL

1-800-374-2744