

Wear

1.Choose the right ear tip size: earbuds come with 3 ear tip sizes to accommodate different ear sizes. It's important to choose the right size for your ears, as a loose or tight fit can affect sound quality and comfort



2.Insert the earbuds correctly: insert them into your ear canal and twist them slightly to secure them in place. The earbuds should sit comfortably and snugly in your ears, without feeling 3.Position the earbuds correctly: The earbuds should be

positioned diagonally down so that they're pointing towards. your ear canal. If they're not positioned correctly, you may experience a loss of sound quality or difficulty keeping them in



can be uncomfortable and potentially harmful to your ears. Make sure to take breaks every few hours to give your ears a

Pairing

Stereo mode and the earbuds will automatically connect to the phone. 1. Open the charging case and take the earbuds out of the case. the two earbuds will automatically turn on and connect to each

other. The light flashes to wait to connect to your phone. 2. Turn on your phone's Bluetooth and search for "H66", then choose "H66". The earbuds will connect to your phone and the light off.



Single Earbud Mode 1. Take an earbud(left/right) out of the charging case. 2.Turn on your phone's Bluetooth and select "H66". The earbud



* After the early ids is disconnected from the mobile phone. It will automatically enter the pairing state and shut down after 5 minutes. * When there is a pairing record, just take the earbuds out of the case,

Power On

Auto Power On

Take out the earphones from the charging case, and they will * power on" automatically.



Manual Power On

When the earphones are OFF, keep the touch button of both earphones for 3-5 seconds. The led light flashes and with a sound prompt: "power on"



Power Off

The earphones will switch off when put into the charger case.



power off automatically after 5mins

Keep the touch button of both earphones for 6 seconds, until the LED flashes with a sound prompt: "power off".



If the earphones were disconnect with the device, the earphones will be

the touch button of the "Left Earbud"



Phone Calls Control

Answer/End Calls: Double

tap the touch button of "Right

Reject Calls: Long press the

touch button of "Right or Left.

or Left Earbud".

Volume Up: Long press the * LONG PRESS



the "MFB" button of the "Left

When the volume is set to maximum/minimum, you will hear a voice

Activate "Siri"

Triple-tap the "MFB" button of



"Right or Left Earbud"


Resetting the Earbuds

Five guick tap touch buttons of both earphones at the same time to clear the connection record, five tap on the one is




Both tap five times at the same time

Charging Digital Power Display mp*000*mm Right earbud power display power display Charging case power display To save power, switching the lid of the box will not activate the digital display. **Earbuds Charging** Put the earbuds into the charging case and close the case. The earbuds light will stay blue, and light off after fully charged.

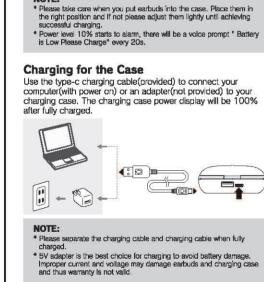


You can use this charging case as a portable charger in

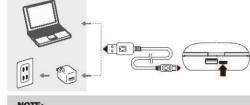

Charging for other electronic equipment

emergence. Use a USB cable that inserts the charging case USB A output port and other end connects to your phone or other

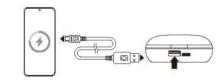

The type-c port only works for charging the charging case.

Specification

Model:	H66
Version:	V5.3
Operating Mode:	Touch Function
Charging Case Battery Capacity:	1800mAh
Battery capacity:	2*3.7/50mAH
Earphone Charging Time:	About 2H
Charging Case Charging Time:	About 4H
Music playing Time:	About 7H
Supporting Protocols:	HSP/HFP/A2DP/AVRCP
Operating frequency:	2.40 GHZ-2.48 GHZ
Working temperature range:	-10+50℃
Maximum transmission range:	< 10M

Safety Instruction

- When using while walking, pay close attention to the surrounding traffic. It may cause a traffic accident.
- Minimize the volume before use. Sudden loud noises will impair your hearing.
- To protect your ears, do not turn up the volume too much. If the product drop into a flammable or liquid such as water. please stop using it and contact the store where you purchased the product or us. If you still continue to use it, it
- may cause a fire, malfunction or electric shock. Opening the inside may cause a malfunction or electric shock. Do not touch the inside. In addition, we do not guarantee performance if the inside is modified by people.
- Do not charge it with wet hands or touch the charging port. It may cause electric shock.
- If you feel sick while using this product, please stop using it If you are using a medical device such as a pacemaker.
- consult your doctor before using it Do not allow small children to use it.
- Host device is a connection between second device and your mobile phone, it is normal status under high power consump-

If you're having trouble connecting your Bluetooth earbuds to your computer/tablet, there are a few things you can

- * Make sure your computer's Bluetooth is turned on Check your device's settings to ensure that Bluetooth is enabled. If it's not, turn it on and try connecting your earbuds again. * Restart your computer: Sometimes a simple restart can fix
- connection issues. Try restarting your computer and then attempting to connect your earbuds again. Update your computer's Bluetooth drivers: If your computer's
- Bluetooth drivers are out of date, this can cause connection issues. Check the manufacturer's website for the latest drivers and install them.
- that you can connect your earbuds to, such as a smartphone or tablet, try connecting to that device to see if the issue is with your earbuds or your computer.

Bluetooth earbuds can sometimes have trouble connecting be due to interference from other wireless devices, low can try to improve the situation:

- * Try connecting to a different device: If you have another device
- * Resetting the earbuds.

to your device or maintaining a stable connection. This can battery, or outdated software. there are several things you

* Make sure your earbuds are fully charged and in pairing mode and that your earbuds are not automatically connected to other

- * Disable any other Bluetooth devices that may be interfering with the connection or changing the use environment.
- * Check for any software updates for your device, and install them if available

* Restart both your earbuds and the device you are trying to

It is possible for the audio quality of Bluetooth earbuds to deteriorate over time with use. There could be several reasons for this issue:

- * Low hattery: When the hattery of the earluids is low, the audio quality may decrease. This is because the earbuds are not able to transmit or receive signals effectively when the battery is low
- * Interference: Bluetooth earbuds use radio waves to transmit audio signals. If there are other electronic devices nearby that also use radio waves, such as Wi-Fi routers or microwaves, they can cause interference and reduce the quality of the
- * Physical damage: If the earbuds have been dropped or exposed to moisture, the internal components may be damaged, which can affect the audio quality.
- Connection issues: Sometimes, the Bluetooth connection between the earbuds and the device they are paired with can become unstable over time. This can cause the audio to cut out or sound distorted.

If you are often accidentally pressing the button on your wireless earbuds when you try to adjust them. there are a few things you can do to try to avoid accidentally hitting

* Use a different grip - Try adjusting your earbuds with a different grip. If you are using your fingers to adjust them, try using your thumb instead, or vice versa. This might help you avoid

you'll be more aware of where it is.

accidentally hitting the button. * Practice adjusting them - Spend some time practicing adjusting your earbuds so that you can do it without looking at them. This will help you avoid accidentally hitting the button because

To Improve the audio quality of Bluetooth earbuds, try the

- Charge the earbuds fully before using them.
- * Clean the charging contacts, and mesh of ear tips with an alcohol pad to remove dust or earwax that might be affecting charging or sound volume
- * Keep the earbuds away from other electronic devices that use radio waves * Avoid exposing the earbuds to moisture.
- If your earbuds frequently come out of your ear. There are a few things you can try to keep your earbuds in place:

- 16 -

- * Adjust the ear tips: Earbuds come with different sizes of ear tips. Try different sizes to find the ones that fit your ears the best. (If our spare earbuds are not available in your size, you can search for the keyword "Eartip replacement" on Amazon and choose the size that best suits you to buy).
- * Twist the earbuds: earbuds are designed to be twisted slightly into your ear canal. This can help keep them in place.

* Check the charging ports on both the earbuds and the

charging case for any debris or damage. Clean the ports with a

If you're having trouble charging the case, here are some

* Make sure that the charging cable you are using is compatible

with the charging case and is not damaged. If the cable is

* Check the charging ports on both the charging case and the

cable for any debris or damage. Clean the ports with a soft, dry

* Try using a different power source, such as a different USB port

or a wall adapter, to charge the charging case. If the charging

* Make sure your case is fully charged.

enough battery to charge the earbuds.

damaged, try using a different one.

soft, dry cloth if necessary.

receive the package or there are other problems are not mentioned, Please contact brand support for further If the charging case is not charging the earbuds assistance by following the steps:

1. Go to the Amazon website and log in to your account. * Make sure the earbuds are properly plugged in or the case has 2. Click on the "Orders" button located on the top right corner of

the battery.

the screen. 3. Locate the order that you need help with and click on the

"Contact Seller" button.

- 4. Choose the reason for your inquiry from the drop-down menu and provide a brief description of your issue.
- 5. Click on the "Send" button to submit your message to us.
- 6. Alternatively, you can also go to the seller's storefront on Amazon and click on the "Ask a Question" button located on the top right corner of the screen. This will allow you to send a message directly to us

case is not charging with one power source, it may work with

* We recommend that you use a 5v adapter to avoid damaging

If none of these solutions work or lack of parts when you

t's recommended to be as clear and concise as possible when describing your issue to us. This will help us understand your problem and provide you with the best possible solution.

- 18 -

成品尺寸: 75*90mm 材质: 105g铜版纸/双胶纸 折叠方式: 风琴10折页

m?00fm

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.