
3.1101.621263.0000000 原材料机乐堂(亚马逊)JR-W10七彩磁吸手表无线充说明书 尺寸: 60x80mm 材质: 105g铜版纸+正反单色印刷+风琴折

封面

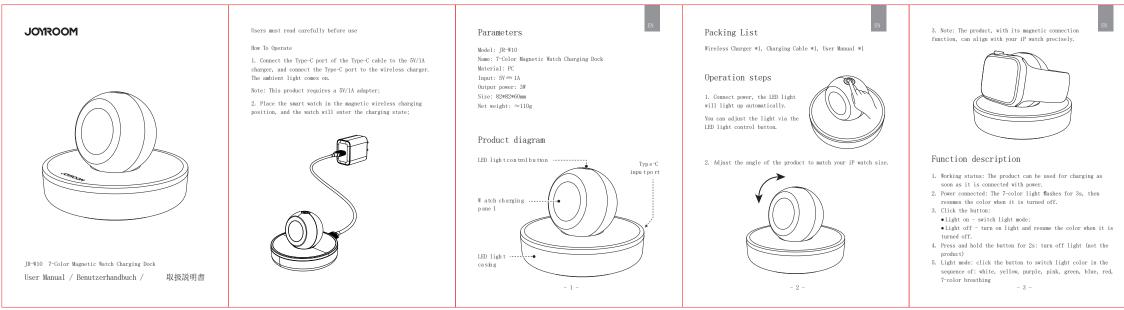

EN

Safety Warning

- Do not put this product into fire or water to avoid short circuit, leakage or damage to the product.
 Please check the product, data cable and other accessories before use. Immediately stop using the product if you notice any damage.
 Do not use this product in a high temperature, humid or
- Do not use this product in a high temperature, munid or corrosive environment, so as not to damage the circuit and prevent charging or other problems.
 Do not contact the product with corrosive liquids, otherwise it will cause serious damage and the product safety can not be guaranteed.
 Do not disassemble or modify this product for any reason, are not the view of the product of the product barries is in the interview of the product of the produ
- so as to avoid secondary failure and burning, which is not covered by the warranty.



FCC NOTE

EN

This device complies with Part 15 of the FCC Rules.Operation is subject to the following two conditions:

EN

- this device may not cause harmful interference, and
 this device must accept any interference received, including interference that may cause undesired operation.
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- the equipment. This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the PCO Rules. These limits are designed to provide reasonable protection against harmful interference in a residenti limitallation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not cocur in a particular installation. If this equipment dess cause harmful interference to radio or television reception, which can be detormined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Recriment or relocate the receiving antenna.

Ger of more of the following measures.
Recrete the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

- 5 -